



Embody™ Back Fabric Replacement


PARTS INCLUDED:

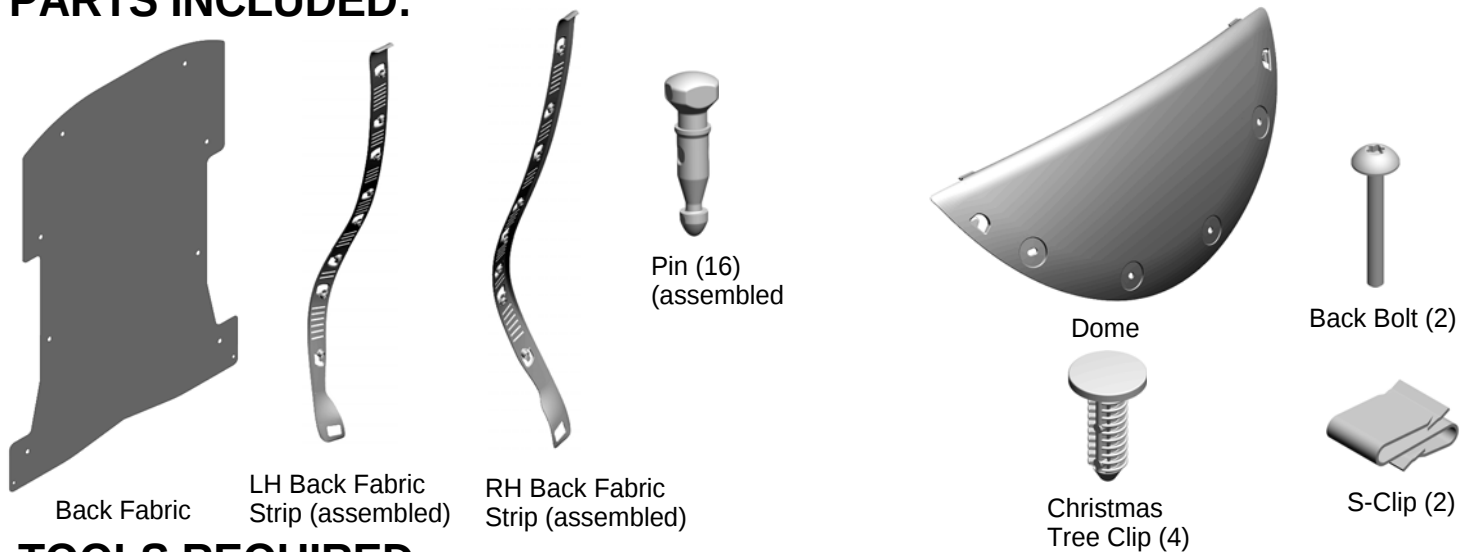

TOOLS REQUIRED:

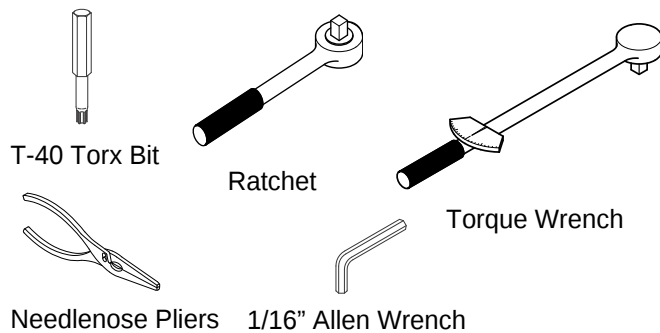


2

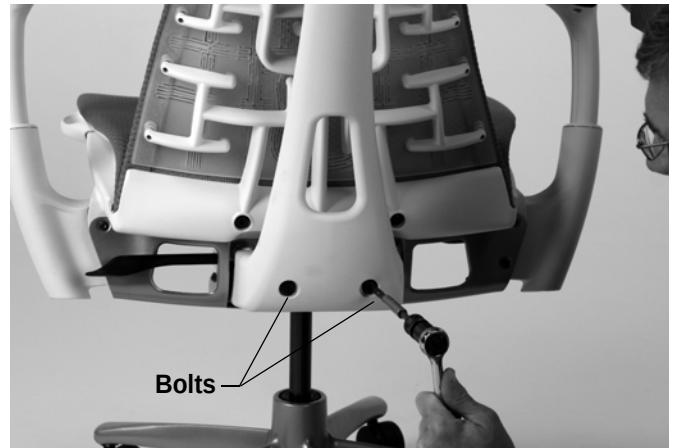

Remove lower spine bolts using t-40 torx wrench

3

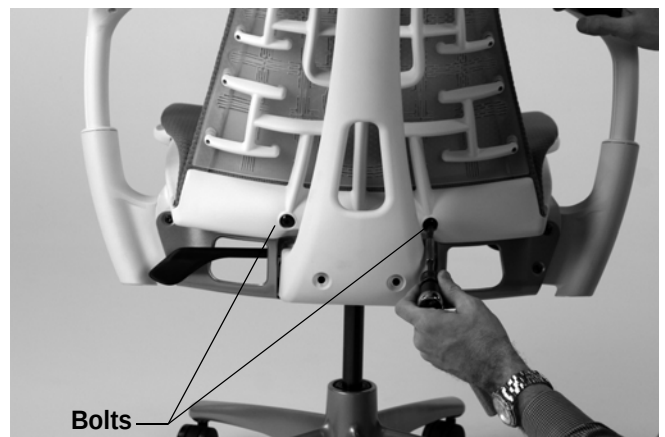

Remove lower back bolts using t-40 torx wrench

1



Remove back tension adjustment rod by inserting 1/16" allen wrench underneath rod to release and then pulling out. (Chairs built prior to 4/3/09 can be removed by wiggling up and down while pulling out to disengage.)

1B4YJD REV A


© 2008 Herman Miller, Inc., Zeeland, Michigan Printed in U.S.A.
Herman Miller, Herman Miller, Embody are trademarks of Herman Miller, Inc.
Illustrations and specifications are based on the latest product information available at the time of publication. The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

4



Remove back assembly by sliding fingers between the seat and back and pull the back corners away from the seat until free.

6

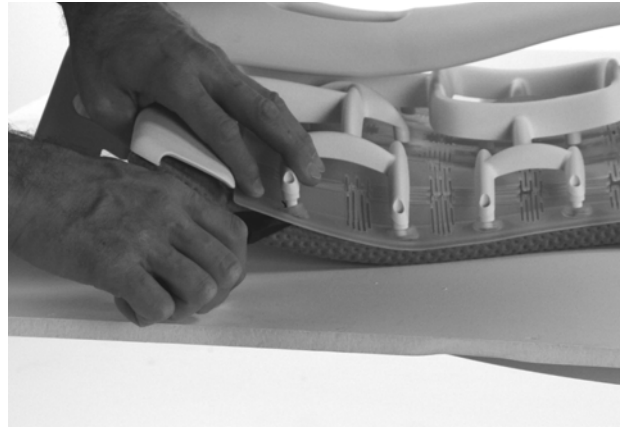


Insert needle-nose pliers between fabric and waffle material. Twist pliers until attachment pegs pop loose. Repeat for all pegs.

5



Slide your finger between the antler and the fabric cover and pull up to release the Dome trees from the antler.

7

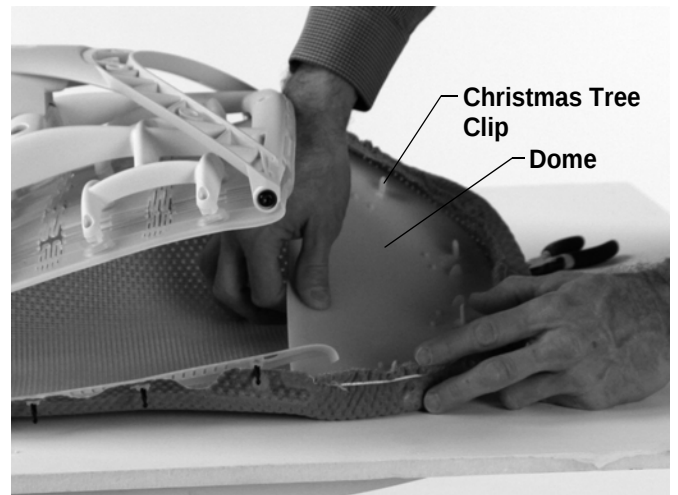

Lay back onto replacement Fabric. Insert 4 replacement Christmas Tree Clips into replacement Dome. Position Dome onto Fabric.

1B4YJD REV A

©

2008 Herman Miller, Inc., Zeeland, Michigan Printed in U.S.A.

HermanMiller, HermanMiller, Embody, are trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication. The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

8




Pull Fabric over Christmas Tree Clips.

11




Fold Dome over antler.

9

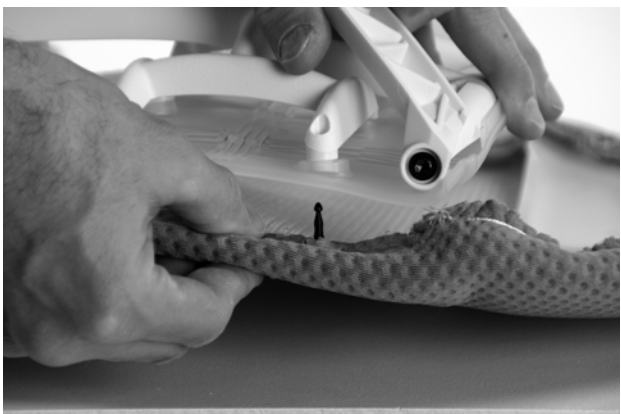

Starting at top of back on one side and working down, insert posts into Back Assembly.

12

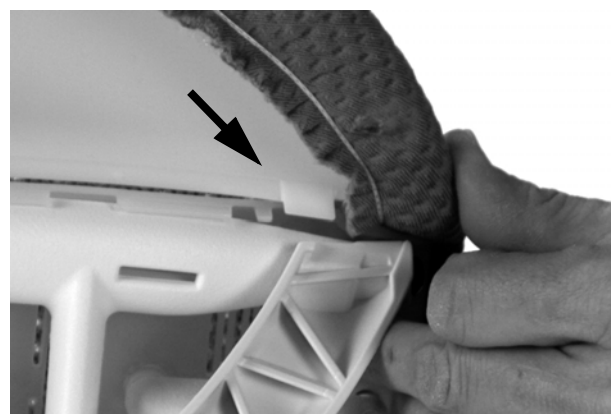

Make sure the Dome tabs are placed over the back collar as shown when assembling.

10



Push in until posts fully engage with a "snap". Repeat process for other side.

13



Firmly press down making sure christmas tree clips fully engage into antler.

1B4YJD REV A

14



Note. If Clips popped off during disassembly replace them as shown in Step # 16.

15






Check to make sure the seat fabric flaps, are secure over the seat clips and do not visibly protrude where the spine engages the seat.

16

Align the spine to the tilt, and seat locator post and clips to the back attachment points as shown in the figure on the right. Replace the Seat Clips as shown in the figure below if they popped off during step 4.

The Seat back posts should engage into the Seat Clips as illustrated in the figures below.

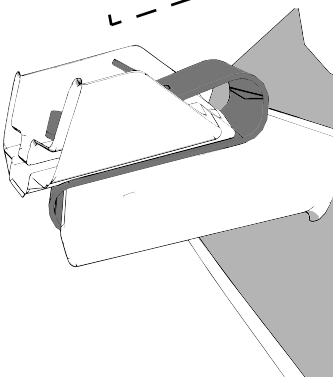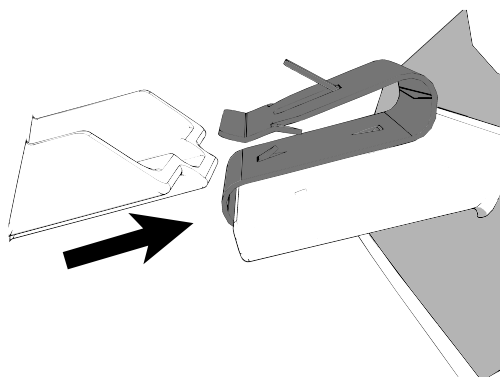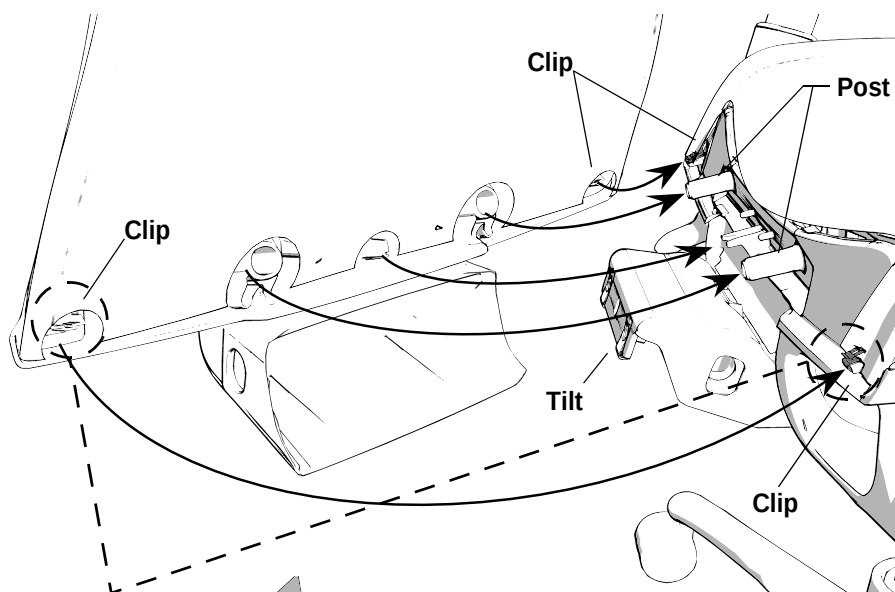


1B4YJD REV A

17


Secure the back Seat Clips by tapping with palm of hand until seated firmly in place. An audible click will typically be heard when clips have engaged properly.

There should be a credit card's thickness between the seat back and bottom once in place.

Credit Card thickness gap when in place

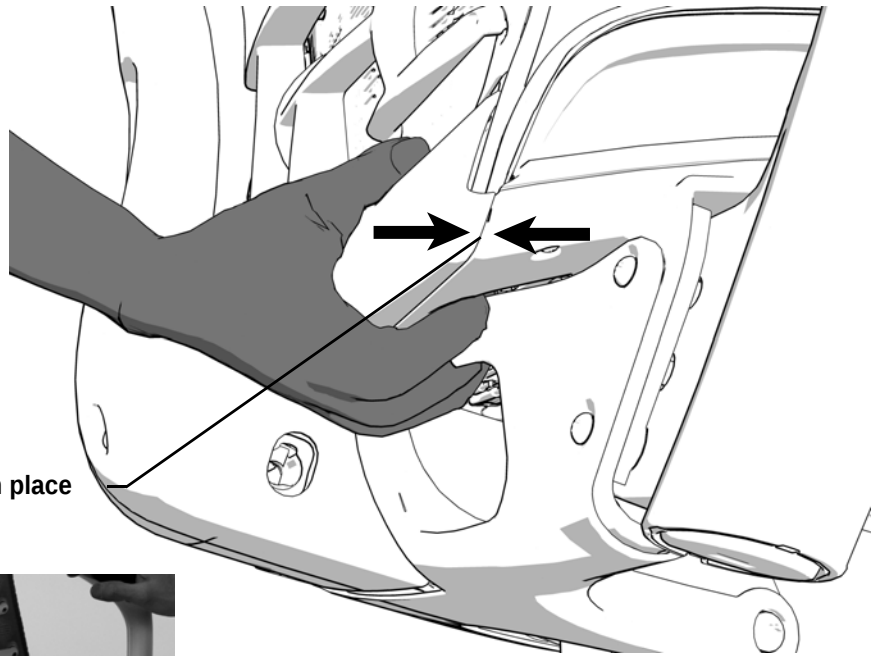

18

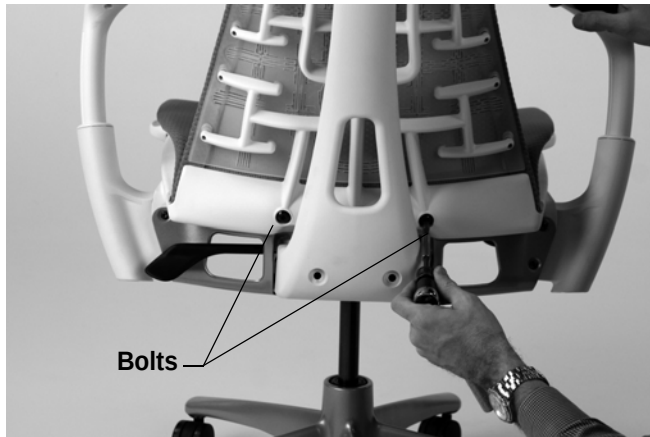


Install replacement lower back bolts using t-40 torx wrench (90 in/lbs)

20



Insert the Back Angle Knob into the Spine by sliding it into the slot as shown. Make sure the Knob is fully engaged by pushing it in as far as possible. Verify that the knob is securely seated by striking the end of the Knob with either the palm of your hand or a rubber mallet.

19

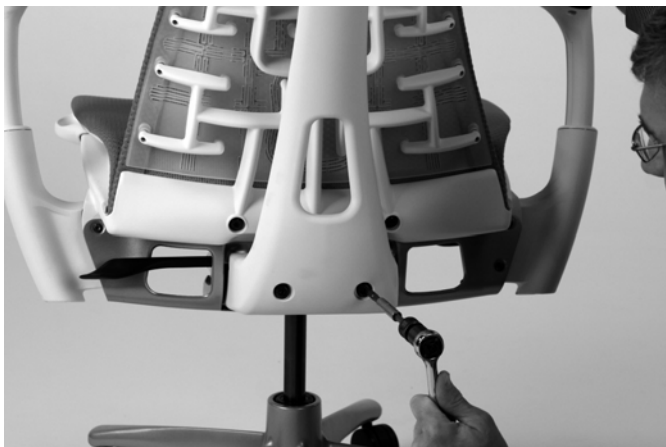

Install lower spine bolts using t-40 torx wrench (90 in/lbs)

1B4YJD REV A

© 2008 Herman Miller, Inc., Zeeland, Michigan Printed in U.S.A.
 ®HermanMiller, ®HermanMiller, ®Embody, are trademarks of Herman Miller, Inc.
 Illustrations and specifications are based on the latest product information available at the time of publication. The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.