


Embody™ Fabric Cable Replacement


PARTS INCLUDED:

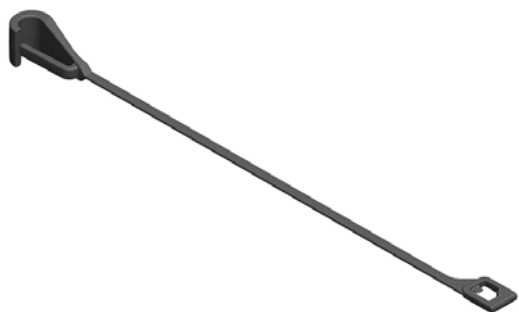


Fabric Cable



1 Lay chair on back. Grasp Seat Slide Handles. Slide seat out to longest position.

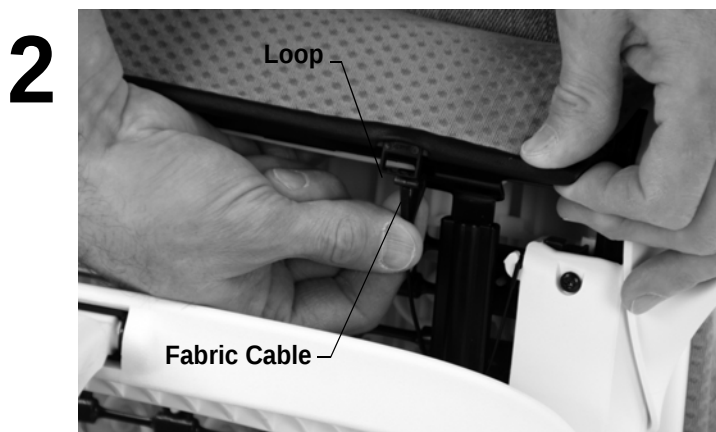


2 Depress end of Fabric Cable. Remove Hook on Fabric Cable from Loop on fabric cover.

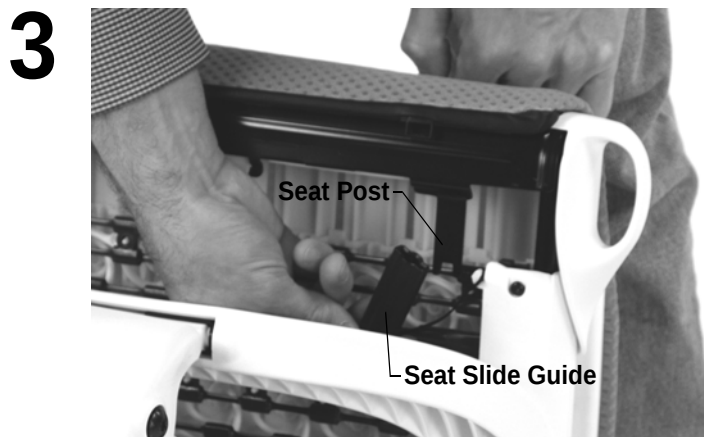

3 Pull Seat Slide Guide free from Seat Post.




4 Remove Fabric Cable from Seat Slide Guide.

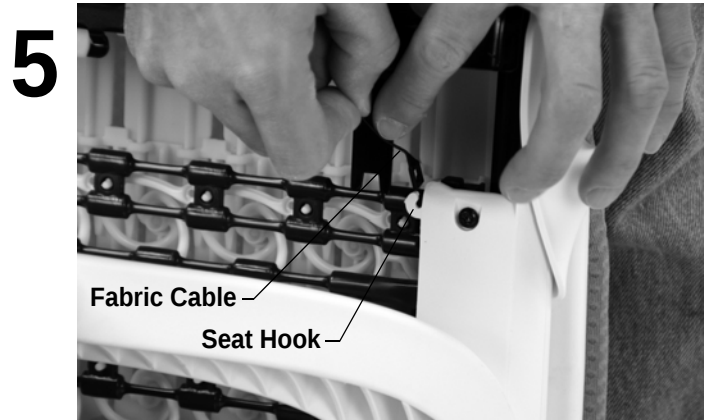

5 Disconnect Fabric Cable from Seat Hook..


1B5CJL REV A

6

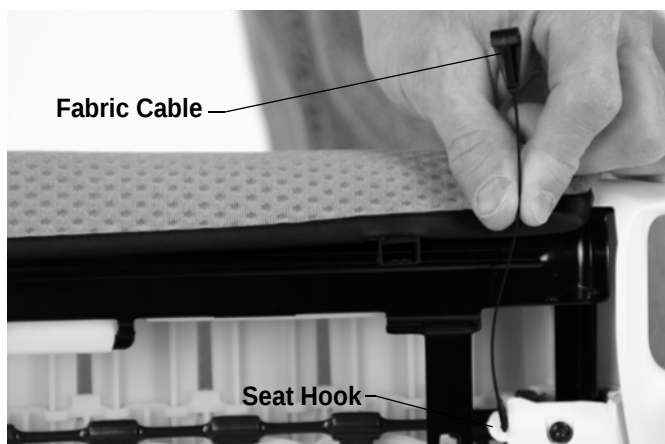


Attach replacement Fabric Cable to Seat Hook.

9

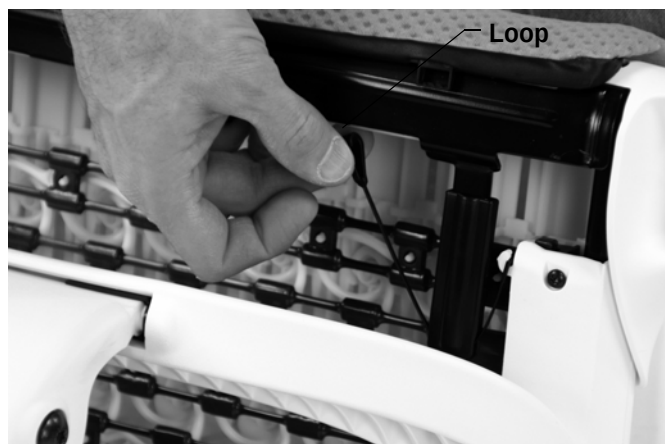

Snap end of Fabric Cable onto loop on Fabric Cover.

7

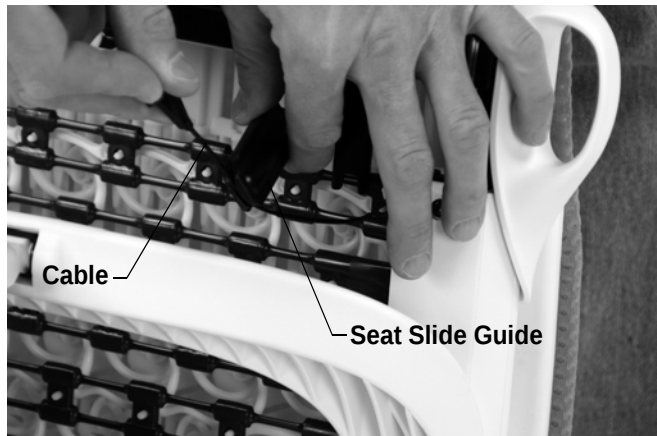

Insert cable into slot in Seat Slide Guide.

8



Slide Seat Slide Guide onto Seat Post.

1B5CJL REV A

©

2008 Herman Miller, Inc., Zeeland, Michigan Printed in U.S.A.

●HermanMiller, HermanMiller, ● Embody, are trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication. The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.