




Tools Required:




Flat Screw Driver


Steps:

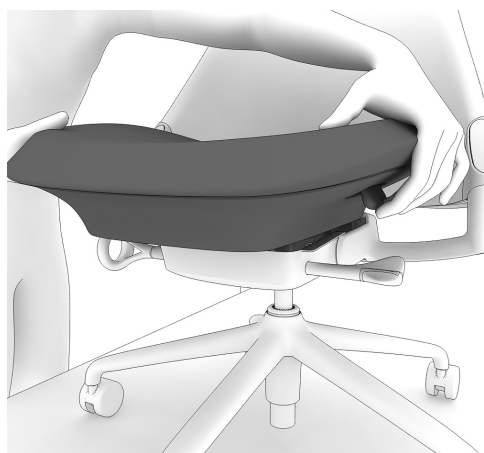

1. Release the seat lock
move seat to the forward
position.

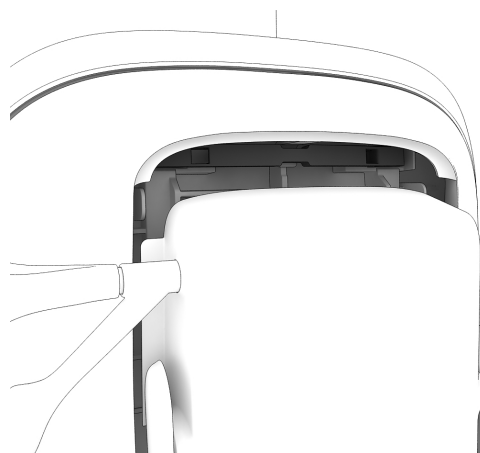

2. Lay chair on back.

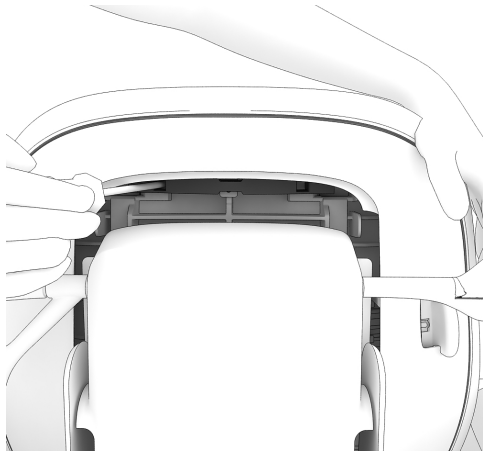


3. Using flat head screw driver pry away (both sides until seat lock bar comes out).



4. Remove lock bar.



5. Release the seat lock move seat to the backward position.

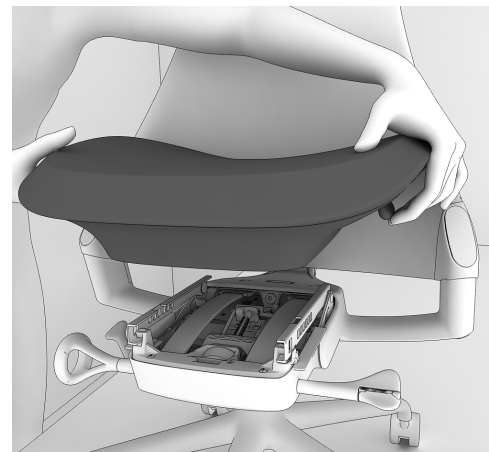


6. Lift upward to remove.

New Seat Installation:




1. Release the seat lock lever, place the seat all the way to back and slide forward.

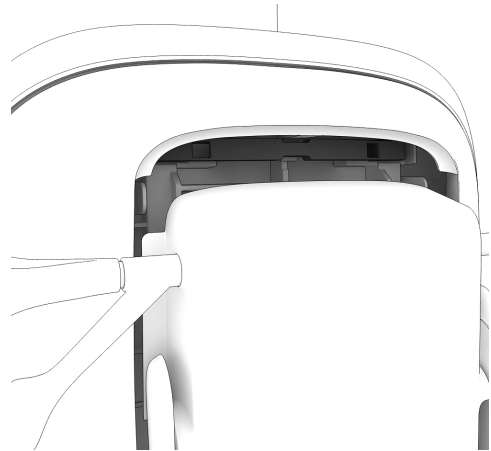

2. Lay chair on back.



3. Place the seat lock lever and press down to fit into position.

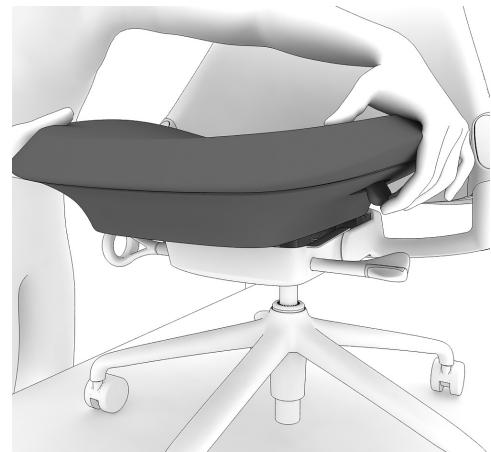

4. Release the seat lock, move seat to the backward position to fit the seat into position.