



Setu® Caster & Glide replacement


Parts Included:

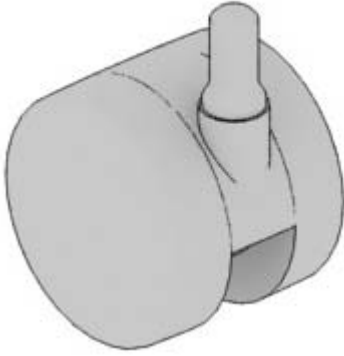


A BB Caster

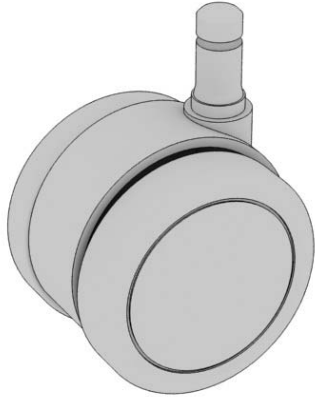


B C7 Caster

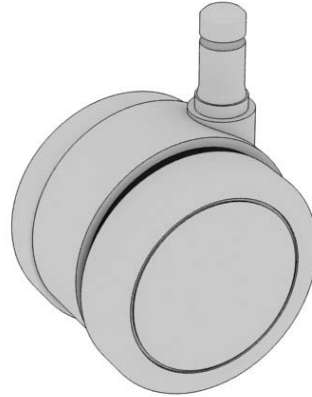


C C9 Caster

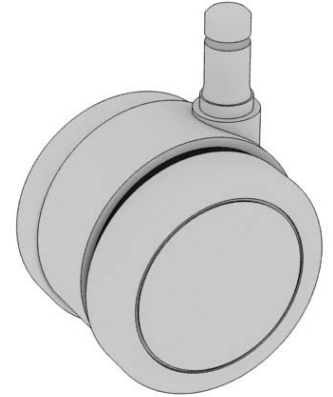


D OC Caster

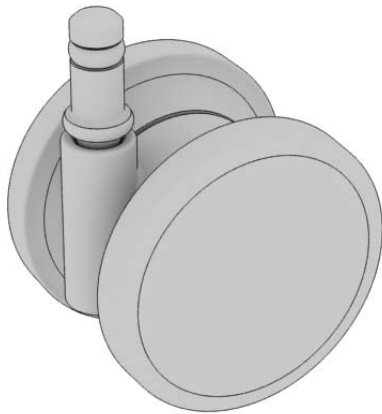

E H9 Caster

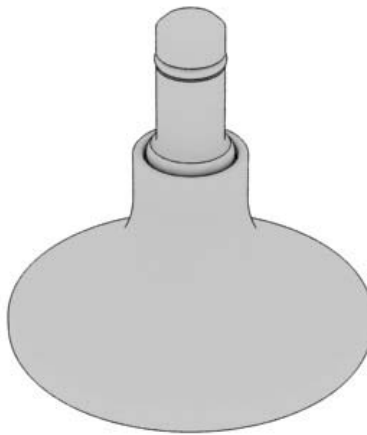


F Standard Glide

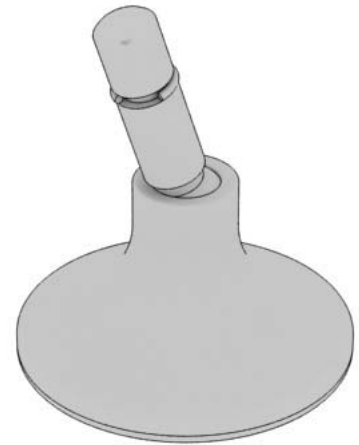

G Swivel Glide

1B5HZ0 REV C

1

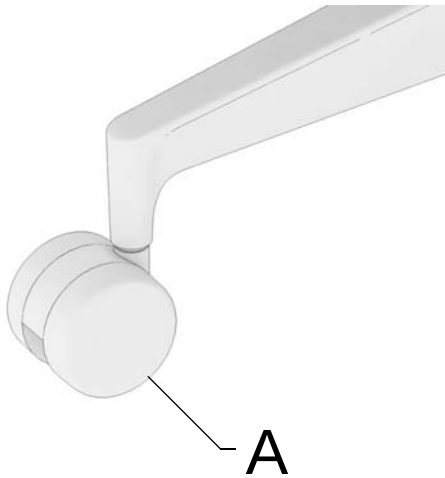

1. To remove Caster (A,B,C,D,E) or Glide (F,G) grasp and pull from base.

2



1. To replace, align stem of Caster or Glide with hole in base.
2. Insert and push until Caster or Glide is fully seated.

1B5HZ0 REV C