

HermanMiller


Renew Sit-to-Stand Tables
Operating Instructions





Renew Sit-to-Stand Tables

Up/Down Paddle Instructions

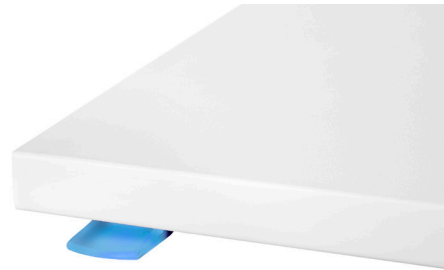

How to adjust the height of the table:

1. Move the switch up to raise the table.
2. Move the switch down to lower the table.

How to save a lower and upper height limit:

1. Raise or lower the table to desired height.
2. Locate the black button under the switch, behind the paddle.
3. Press and hold the black button down for 10 seconds.
4. Once you hear two clicks, release the button.
5. The preferred lower or upper height limit is now saved.

How to clear a lower or upper height limit:

1. Raise or lower the table to one of the saved height limits.
2. Locate the black button under the switch, behind the paddle.
3. Press the black button down for 10 seconds.
4. Once you hear one click, release the button.
5. The setting is now cleared.

How to calibrate the table:

1. Adjust the table to the lowest height.
2. Release the switch.
3. Press the switch down and hold it for 5-10 seconds.
4. The table will begin to readjust itself (if needed). Do not release the switch until the table has stopped moving.
5. The table is now calibrated.

Note: The table will need to be calibrated at the time of installation so legs are in sync with each other and in the event that the legs become out of sync during operation.



Renew Sit-to-Stand Tables

Programmable Control Instructions

How to adjust the height of the table:

1. Press the up arrow to raise the table.
2. Press the down arrow to lower the table.



How to save a lower and upper height limit:

1. Raise or lower the table to desired height.
2. Press and hold the up and down arrow buttons at the same time for 10 seconds.
3. Once you hear two clicks, release the buttons.
4. The preferred lower or upper height limit is now saved.

How to clear a lower or upper height limit:

1. Raise or lower the table to one of the saved height limits.
2. Press and hold the up and down arrow buttons at the same time for 10 seconds.
3. Once you hear one click, release the buttons.
4. The setting is now cleared.

How to save a preferred sitting or standing height:

1. Adjust the height of the table to the preferred sitting or standing height.
2. The display will show the current height of the table in inches (Ex: 28).
3. Press the memory key 'S'
4. The display will now read 'S -'
5. Press a memory position key (Ex: 2).
6. The display will now read 'S 2'
7. You will hear a double click sound. The preferred height has been saved to the selected memory position key.

Note: Memory position keys are the numbers on the control. Only one height can be saved per memory position key.



Renew Sit-to-Stand Tables

Programmable Control Instructions (cont.)

How to adjust the table to a saved height:

1. Press and hold down the memory position key that contains the saved height (Ex: 2).
2. Continue to press and hold down the memory position key until the table has stopped moving.
3. Once the table reaches the saved height, release the memory position key.

Note: If you release the key before the table reaches the saved height, the table will stop adjusting itself to the saved height.

How to edit a saved memory position key:

1. Press the memory key 'S'
2. The display will read 'S -'
3. Press and hold the down arrow key for five seconds.
4. The display will start flashing. It will show the saved height that's on the selected memory key.
5. Adjust the height by pressing the up or down arrow to the new preferred height. The table will not move as you press the up or down arrow.
6. Press the memory key 'S' to save the new desired height.

How to calibrate the table:

1. Adjust the table to the lowest height.
2. Press the down arrow again and hold for 5-10 seconds.
3. The table will begin to readjust itself (if needed). Do not release the switch until the table has stopped moving.
4. The table is now calibrated.

Note: The table will need to be calibrated during the following times:

- At the time of installation so legs are in sync with each other
- In the event that the legs become out of sync during operation
- If the digital display does not align with actual height

Hard Reset of Programmable Control

1. Press and hold buttons 1, 2 and the up arrow at the same time until the display reads 'S 5'
2. Once the display reads 'S 5' release the buttons.
3. Press the up arrow until the display reads 'S 0'
4. Then press the memory key 'S.' You will hear the control box click.
5. The display will now read 'E61'
6. Recalibrate the table as indicated above in 'How to calibrate the table'