

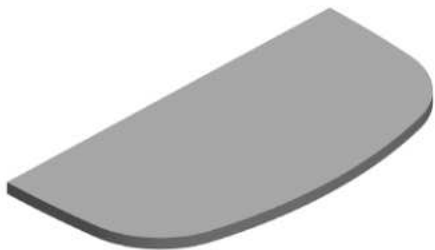
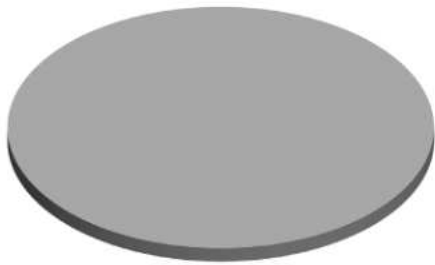


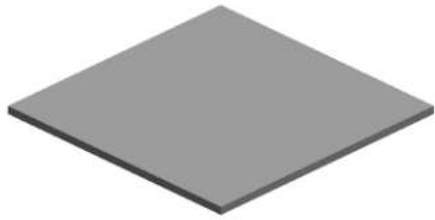


Everywhere Tables™ Post Leg Installation (P)

Parts Included:

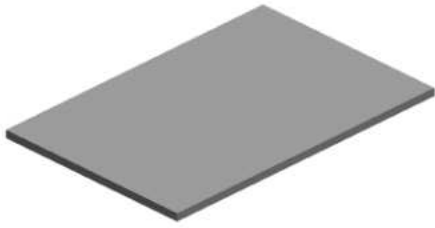

A Work Surface Options

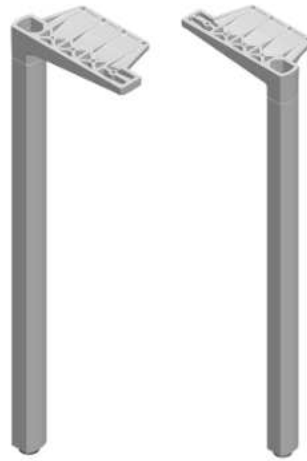


B Post Leg Option (2 Sets)



Hardware Pack

Tools Required:

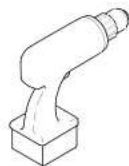

Power Driver




#2 Phillips Bit

HermanMiller

Part no. 1b6k0d rev B.

© 2010 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
™ **HermanMiller**. Everywhere Tables are among the trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication. The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

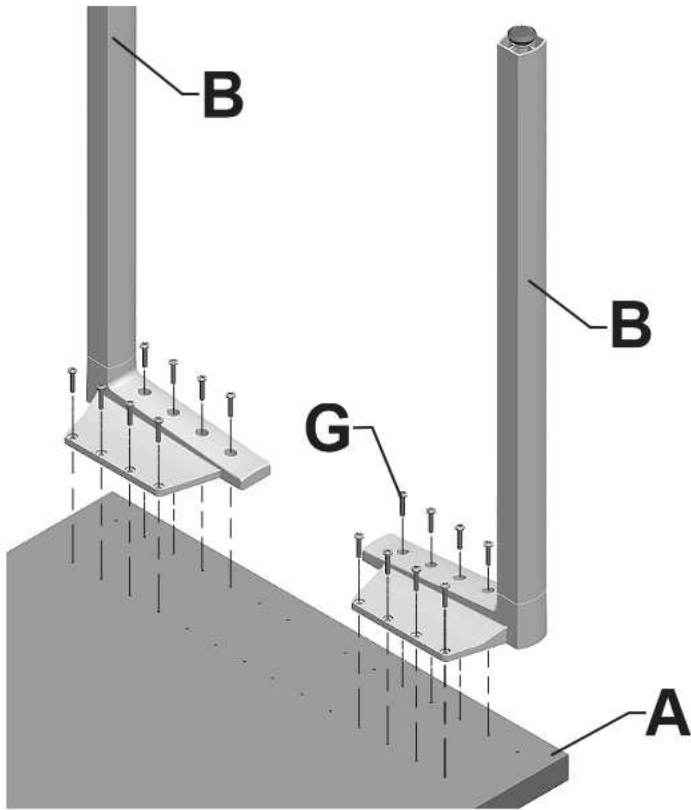

1. Align Holes in Post Legs (B) with outermost holes in Work Surface (A).
2. Install 8 Pan Head Tapping Screws (G) per Leg (HPL + Veneer) or 7 pan head Screws per leg (G) (Painted MDF).
3. For use on 'painted MDF tops' use (H)+(J) in locations where an insert is present in the hole pattern.