





Canvas Office Landscape® Receptacle, 4 Circuit Installation and Disassembly for Recycling Instructions

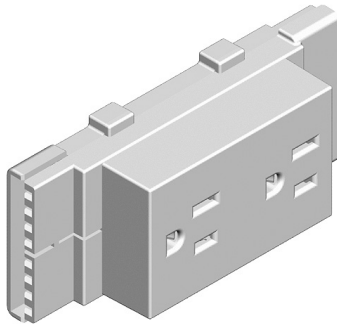

FT155. 15 Amp Duplex Receptacle

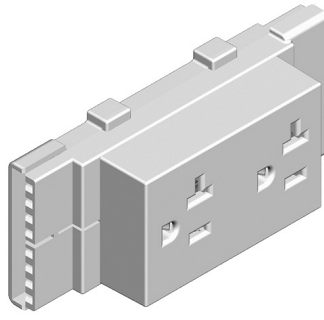

FT156. 20 Amp Duplex Receptacle





WARNING

Disconnect power before installation. Failure to do so can cause electrical shock and personal injury.



WARNING

Electrically interconnected units must be mechanically interconnected.

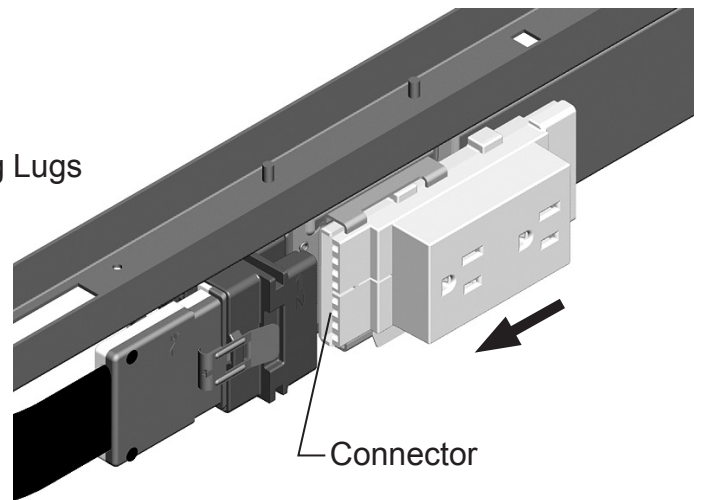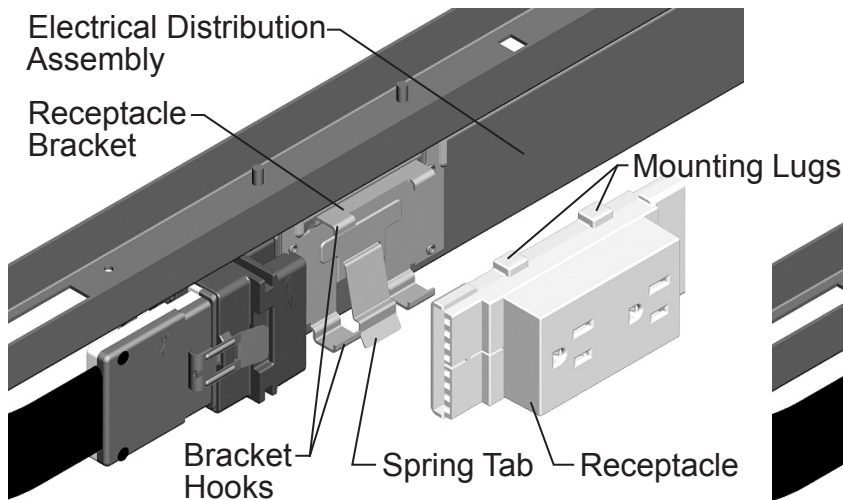

Assembly Instructions:

1. Place Receptacle into Bracket to one side of Bracket Hooks.
2. Press Spring tab and slide Receptacle Connector into position to engage Electrical Distribution Assembly. Press Receptacle further so Connector is fully inserted and Mounting Lugs are seated in Bracket Hooks. When properly installed, Spring tab will snap back between Bottom Mounting Lugs.

IMPORTANT: Save these instructions for layout changes.

HermanMiller

Part no. 1b2h4f rev D.

© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.

© Herman Miller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.

The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

Removal:

1. Depress Spring Tab.
2. Slide Receptacle away from Electrical Distribution Assembly until Mounting Lugs clear Bracket Hooks. Receptacle can now be pulled away from Assembly.

Disassembly for Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse steps 2 through 1 and also do the following: