

# HermanMiller

 
## Nevi Height Adjustment Table Installation

(For tables built after Feb. 2024)



## How to assemble your Nevi Height Adjustment Table


### Tools Required



Power Driver



 Phillips Bit



Torque Wrench




10 mm Socket



6 mm Hex bit

### Parts Included

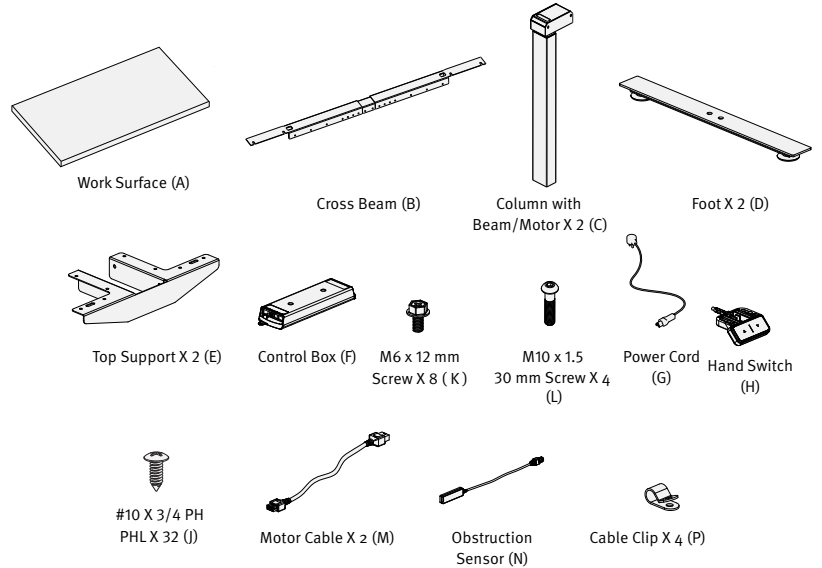

### Safety Information

Important Safety Instructions save these instructions.

#### **DANGER** To reduce the risk of electric shock:

Always unplug this furnishing from the electrical outlet before cleaning.

#### **WARNING**

To reduce the risk of death, serious injury, or property damage, read and follow this safety information and the provided instructions when assembling this product. Do not change or replace components and accessories provided.


Close Supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.

#### **BE CAREFUL WHEN ADJUSTING DESK HEIGHT**

Body parts and property can be caught between the moving work surface and an immobile obstacle (such as shelves, furniture, window sills, or walls). Keep at least one inch of clearance around desk and make sure nothing is in table's path for its entire range of motion.

#### **Before raising or lowering:**

- Check surroundings on all sides of desk are clear
- Make sure corded objects will not be pulled off table or cause other objects to fall
- Make sure desk power cord moves freely as desk moves up and down

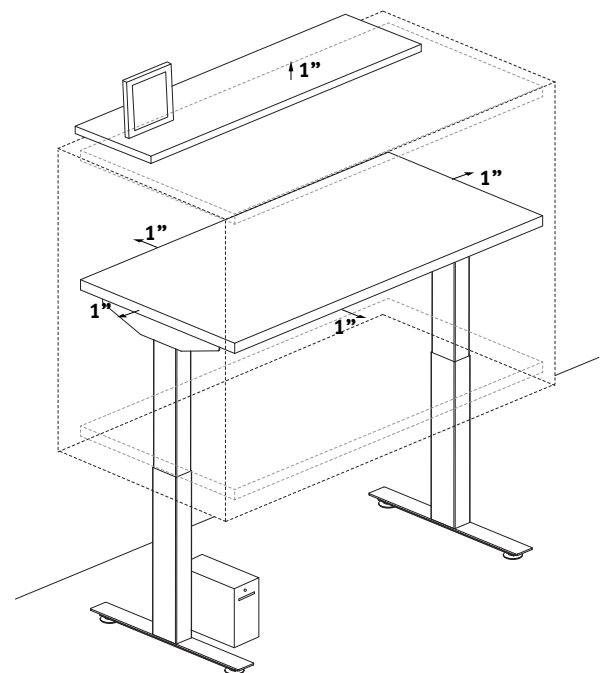



Before connecting the power cords to the workstation, follow the instructions below to properly initialize the Columns with the Control Box.

NOTE: The workstation will not RISE until the Initialization procedure is completed.

- Connect the Column Motors to the Control Box.
- Connect the Hand Switch to the Control Box.
- Connect the main Power Cord to the Control Box.
- Connect the main Power Cord to the electrical outlet; the Control Box should make a clicking sound indicating it has been programmed.
- Press the down button on the Hand Switch until the Columns reach their lowest position.
- Press the down button on the Hand Switch once again until the Tabletop moves down slightly and then back up slightly. Listen carefully if this step is performed correctly the Control Box should make a clicking sound.
- After completing the Initialization procedure, the workstation may be raised and lowered.

#### Use Care When Moving Desk

- Clear objects and equipment from table before rolling to reduce the risk of tipping over.
- Adjust the desk to its lowest height before moving
- To disconnect, then remove plug from outlet
- Do not move a loaded desk

#### Do Not Open Electrical Components

Do not attempt to service table components. There are no user-serviceable parts inside the motor control units or table legs. If your table needs service, contact customer service. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged. Return the furnishing to a service center for examination and repair.

#### Keep Table Frame Dry

Keep all electrical components away from water and high humidity. Clean only with a dry or slightly damp cloth. Do not spray cleaning solutions directly onto table system.



WARNING: Risk of Electric Shock, Fire, and Injury. Review the assembly instructions to confirm that the appropriate critical components and accessories are being used with the furnishing.

AVERTISSEMENT: Risque d'électrocution, d'incendie et de blessure. Consultez les instructions d'assemblage pour confirmer que les composants et accessoires critiques appropriés sont utilisés avec le meuble.



WARNING: RISK OF INJURY, not to be used in locations where children, or people with cognitive disabilities are anticipated to be present.

AVERTISSEMENT: RISQUE DE BLESSURE, ne pas utiliser dans des endroits où des enfants ou des personnes souffrant de troubles cognitifs sont censés être présents.

#### Do Not Overload Desk

To prevent table from tipping or collapsing, make sure the desk frame is not overloaded by the weight of table top and objects on table. Evenly distribute load; excess loads near edges can reduce stability and lead to tip over.


- Do not exceed maximum load (including weight of desktop) of 225 lb. (102 Kg) for two-leg configuration.
- Do not exceed edge load of 25 lb. when positioning monitors or mounting accessories.
- Do not sit or stand on table

#### Grounding Instructions

Not valid for most Nevi desks power cord for smart NEO Control box is not grounded. Only 2 prong . 3 prong cord only used for 3-Leg configuration that uses a compact control box. Make sure that the product is connected to an outlet having the same configuration as the plug (as shown in Illustration A) that is properly installed and grounded in accordance with all local codes and ordinances.

Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.


**No adapters are to be used with this product. Keep cord away from heated surfaces.**

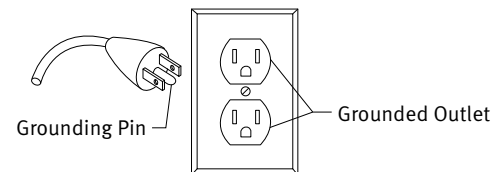

Grounded Outlet Box


### Step 1: Fasten the Top support onto the Table Top

1.1 Be sure to use approved screws per the table top supplier.  
(#10 X 3/4 PH PHL (J)).

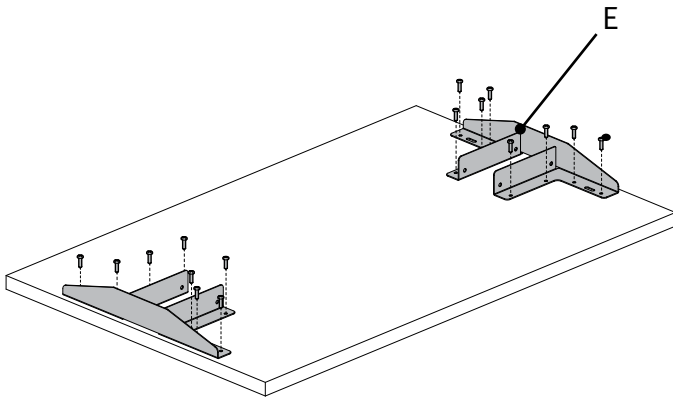


### Step 2: Assemble To Top Support (K) Beam and Column


2.1 Align top support holes with motor box holes. Assemble by starting the M6 x 12 mm length screws (4 per column) leave screws loose.

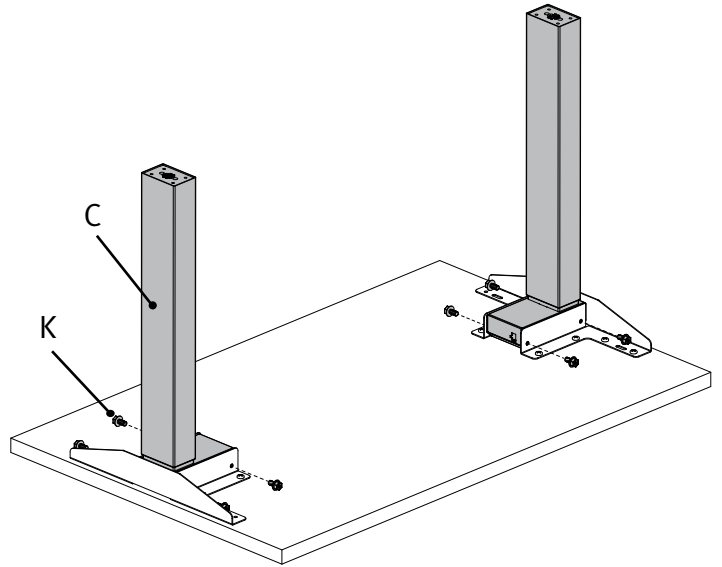


2.2 Slide the three sections of the cross beam together.

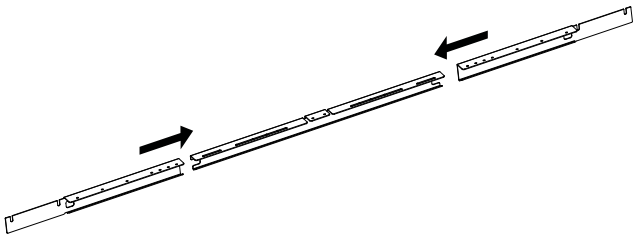

2.3 Align the slots in the assembled cross beam with the screws in the motor box.

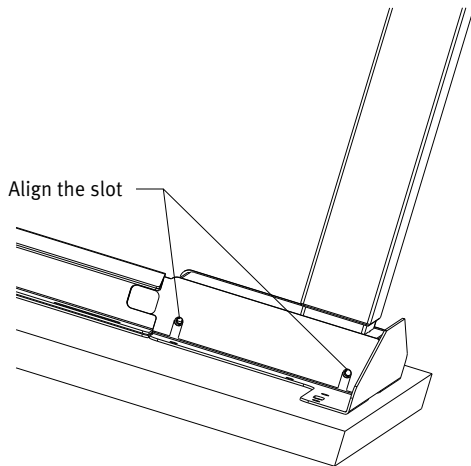


Note: For a T-Leg Table the Cross beam mounts to the back side of the motor box, for a C-Leg Table the Cross Beam Mounts to the front side of the motor box.

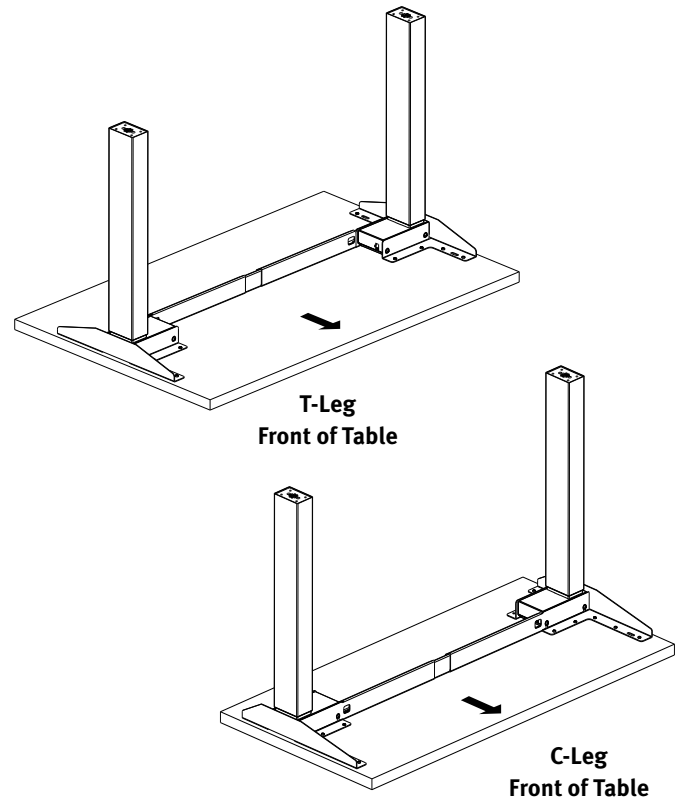

2.4 Tighten all eight M6 bolts in the motor boxes. When torque wrench is available, tighten fasteners to 11 Nm. (8 Ft-Lbs). If you do not have access to a torque wrench, then tighten fasteners to snug, plus a 1/8 turn. Repeat as necessary for remaining columns.

### Step 3: Assemble the Foot to the Column

3.1 Assemble using the M10 x 1.5 x 30mm length screws (L) (2 per column). When torque wrench is available, tighten fasteners to 11 Nm. (8 Ft-Lbs). If you do not have access to a torque wrench, then tighten fasteners to snug, plus a ¼ turn.

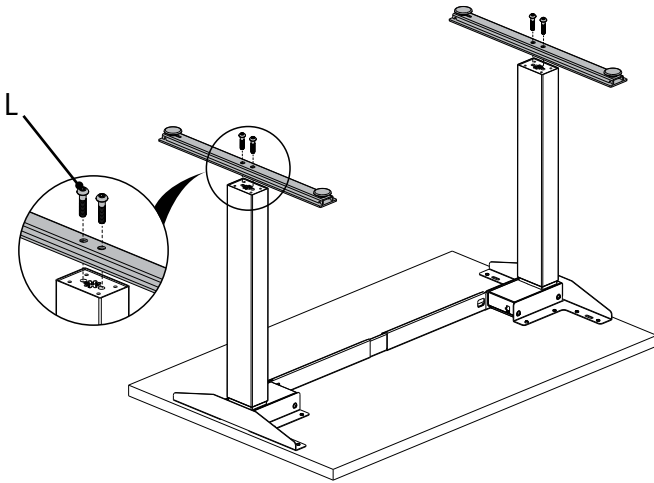


### Step 4: Fasten the Cross Beam to the Table Top

4.1 Secure the Cross Beam with the table top with (#10 X 3/4 PH PHL (J)).


4.2 The center section of the cross beam is centered on the table, the outside sections slide with the size of the table.

**Note:** Some holes may need to be pre drilled.

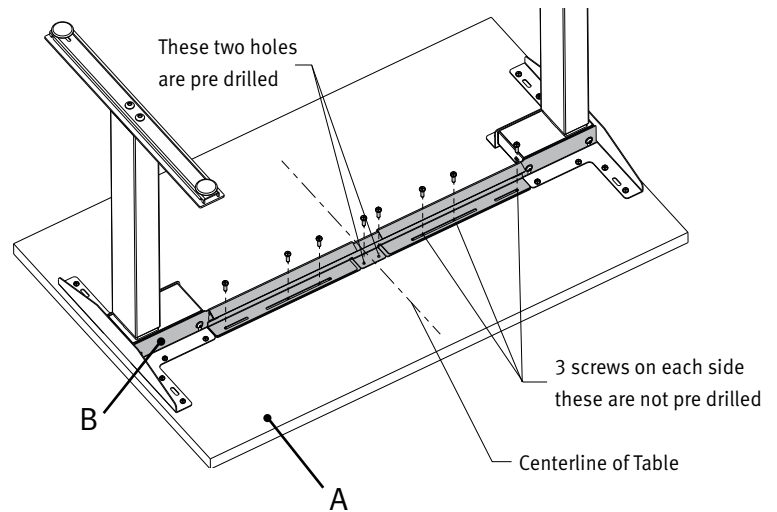

### Step 5: Fasten the Control Box and Handswitch to the Table Top

5.1 Make sure the control box and handswitch are fastened in a location where all the cables will connect without being in tension. Be sure to use approved screws per the table top supplier.

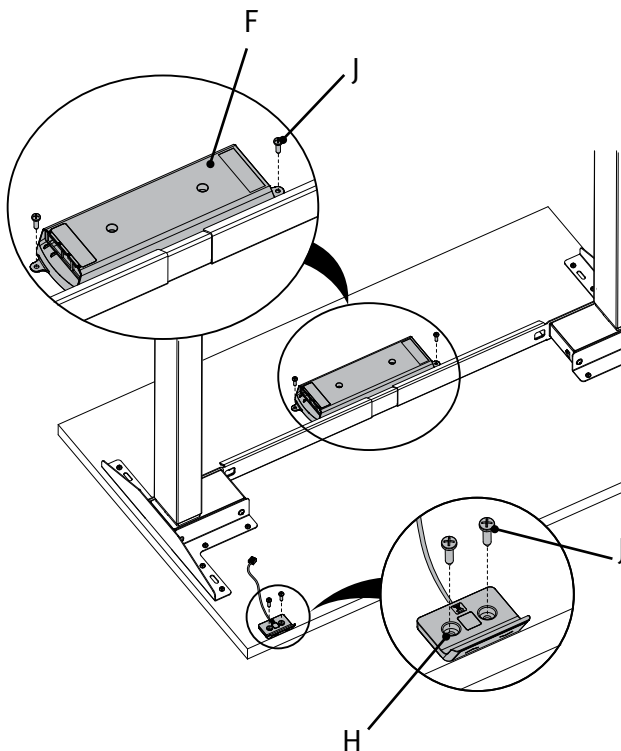

### Step 6: Connect the Motor Cable to the Control Box

6.1 The motor cable plug-connection has to click into place.


Connections to the control box:

M1-M2 = Connectors for the columns


D1 = Connectors for the handset

AC = Connector for the power cord (2-pin)


D2 = Connector for Obstruction Sensor

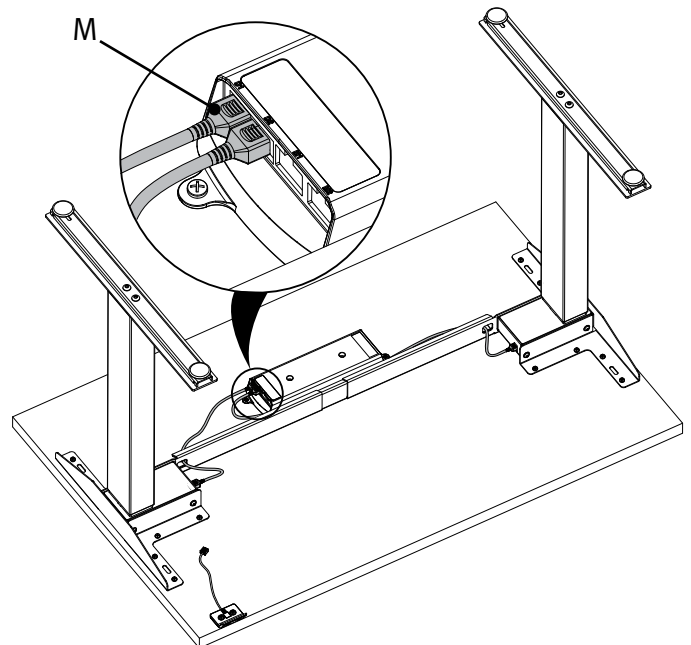


6.2 Connect the Handswitch (D1) Cable to the Control Box

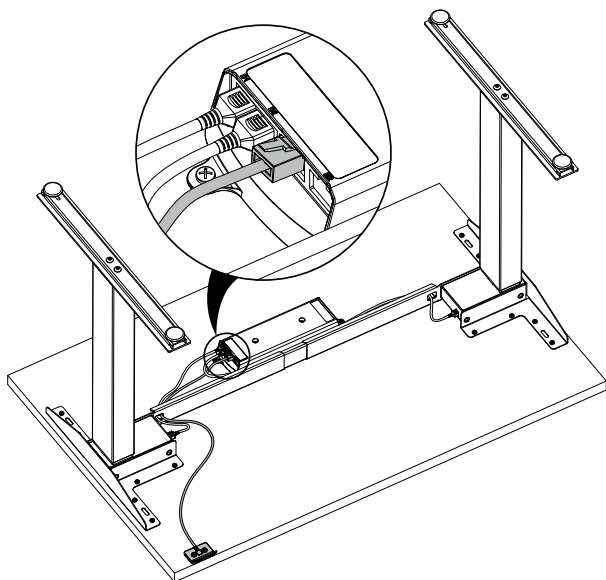


6.3 Connect the Supplied Powercord (AC) to the Control Box.

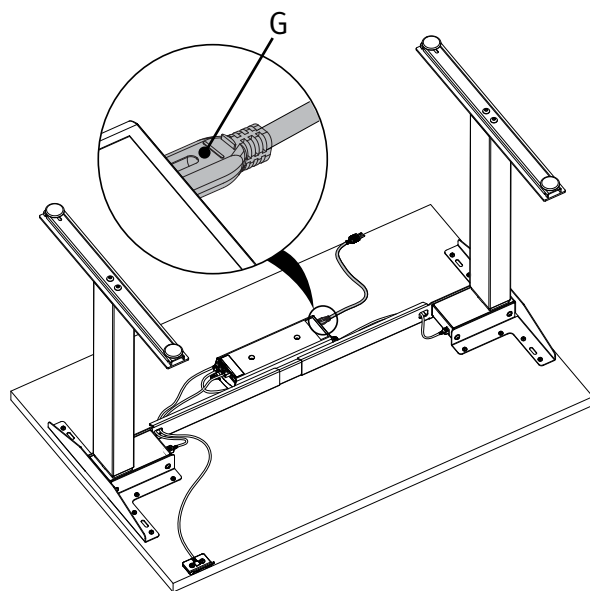

6.4 Connect the obstruction Sensor (D2). Peel the backer off the adhesive on the sensor and press firmly on to the bottom of the work surface near the control box.

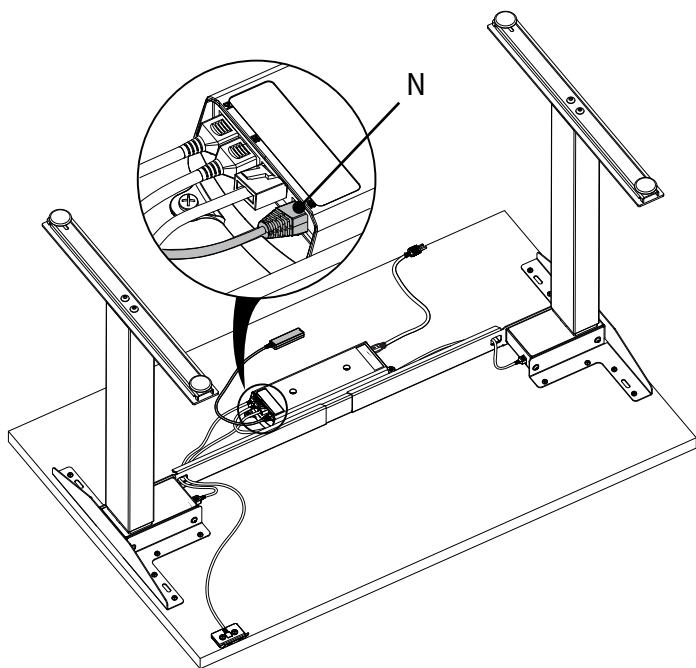

6.5 Attach cords to the table top with wire management clips.

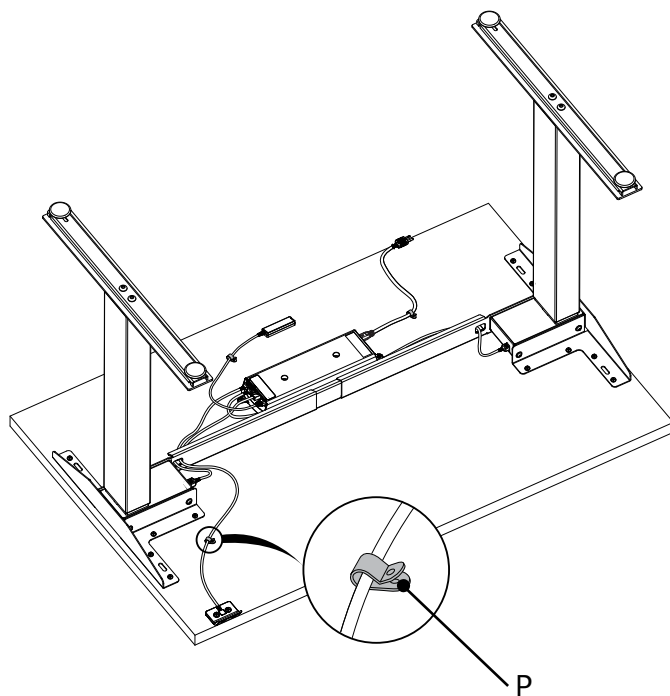

### **Disassembly for Recycling:**

#### **Materials Identification and Segregation:**

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse steps.

### **Troubleshooting Help:**

If you are having difficulty getting your new table to operate properly, scan the code below to reach the Nevi Troubleshooting Guide.

