

HermanMiller

Cosm Chair 1D Upper Arm assembly Replacement




How to disassemble and assemble your 1d upper arm.

Tools Required



Flat Screw Driver




T-20 Torx Bit

Step 2

2.1 Using T-20 torx bit, unscrew the arm pad retainer bolt and take out the arm pad.

2.2 Remove the old 1d upper arm assembly.

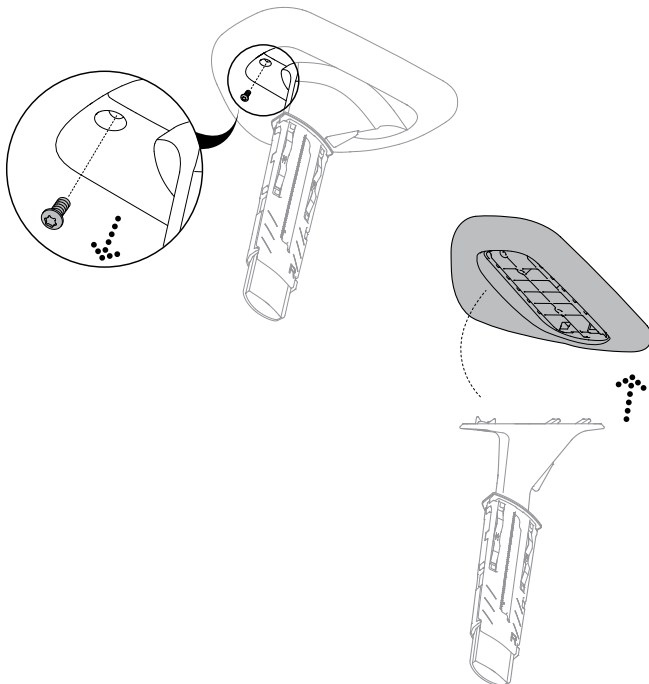

Step 1

1.1 Insert the flat screw driver into the notch and gently pry against the latching tab and pull out the 1d upper arm assembly at the same time.




New 1D Upper Arm Assembly Installation

Step 3

3.1 Place the two hooks of new 1d upper arm assembly under the ledge at the front of arm pad.

3.2 Hook in the front of arm pad and install it using T-20 torx bit.

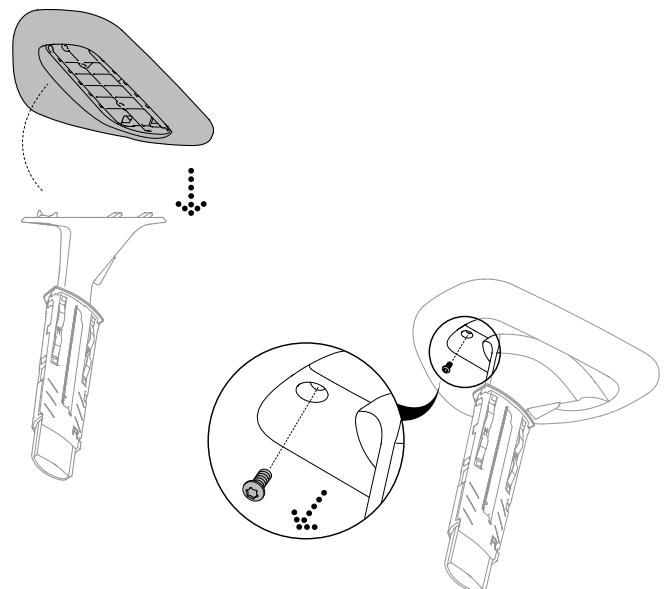

Step 4

4.1 Slide the 1d upper arm assembly and push in until it latches.

