

Embody™ Base Assembly Replacement

PARTS INCLUDED:




Base




1. Lay chair on back.

TOOLS REQUIRED:

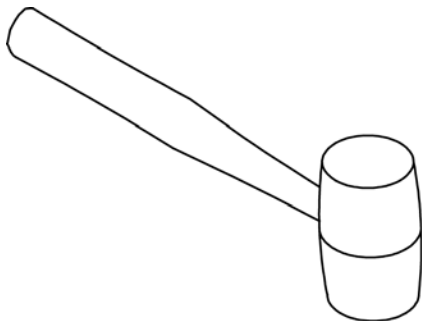

Hammer

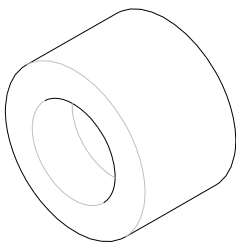

Nylon Cap



2. Remove all the caster by grabbing and pulling out.

1B4YHN REV A



3. Place white nylon cap over bottom of cylinder and strike the cap with 2 pound hammer until base comes loose.



4. Transfer casters by pressing in with thumb in shown position.



5. Slide new base on cylinder.

6. Place chair upright.

7. Set down firmly several times to set cylinder.

1B4YHN REV A