


Embody™ Cylinder Replacement

PARTS INCLUDED:




Cylinder


TOOLS REQUIRED:



Flat Screwdriver

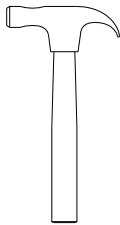

Hammer

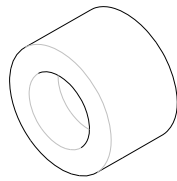

Nylon Cap




Lift-Off Tool

2



1. Slide flat head screw driver blade under cable collar and pry up gently until cable collar is free.

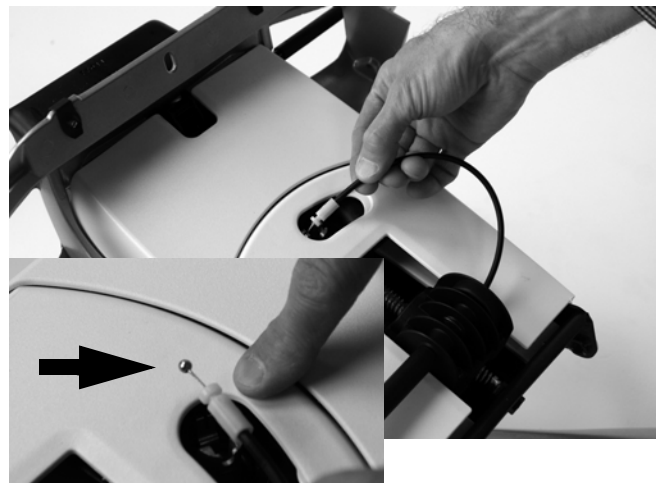

2. Grasp the cable and push it forward to release the ball end from cylinder.

1



Raise chair seat to highest position. Lay chair on back.

1B4YHP REV A

© 2008 Herman Miller, Inc., Zeeland, Michigan Printed in U.S.A.
HermanMiller, HermanMiller, Embody, are trademarks of Herman Miller, Inc.
Illustrations and specifications are based on the latest product information available at the time of publication. The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

3



Nylon Cap


Place white nylon cap over bottom of cylinder and Strike the cap with 2 pound hammer until base comes loose.

6



Place one hand on the can of cylinder and hit knock-off tool with end of hammer striking until cylinder separates from tilt housing.

4

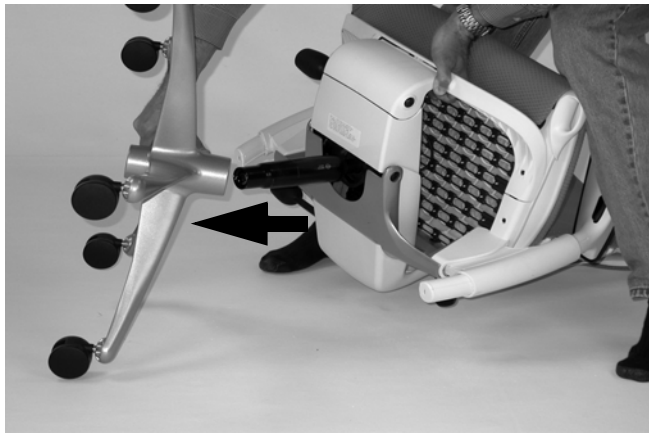


Remove base.

7



Insert replacement cylinder into Tilt.


5

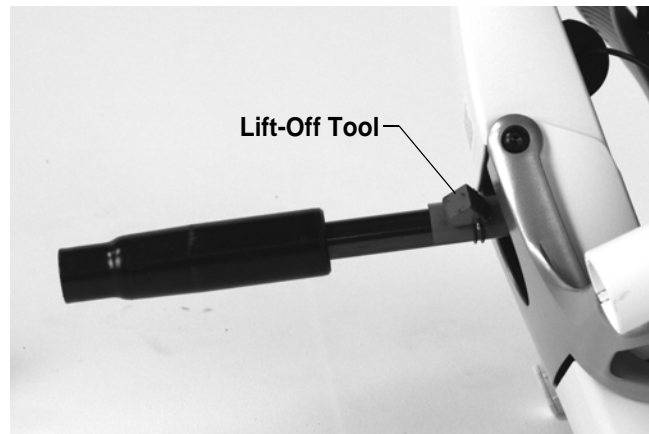

Lift-Off Tool

Strap lift-off tool onto end of cylinder that touches the tilt housing.

8

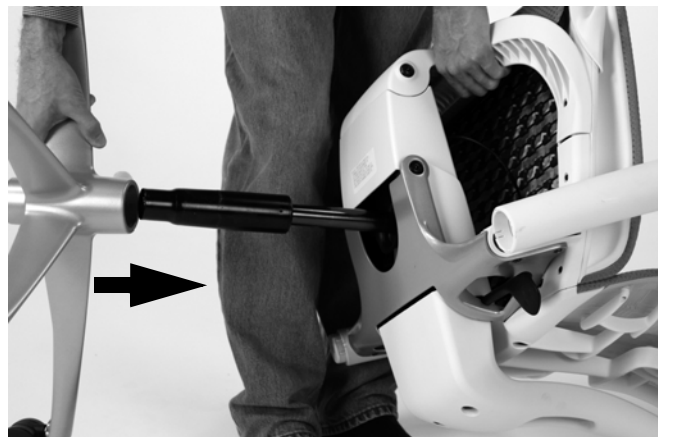


Slide base onto cylinder.

1B4YHP REV A

© 2008 Herman Miller, Inc., Zeeland, Michigan Printed in U.S.A.
HermanMiller, HermanMiller, Embody, are trademarks of Herman Miller, Inc.
Illustrations and specifications are based on the latest product information available at the time of publication. The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

8

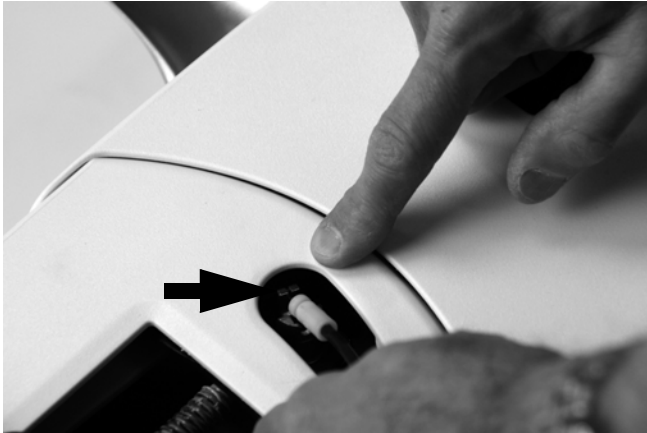

Re-connect the cable to the top of the cylinder, ball end first, and re-snap the cable to the top head of cylinder.

Place chair upright.

Sit down firmly several times to set cylinder.

1B4YHP REV A