





Tools Required:



T-20 Torx Driver


Steps: Indexing Arm Pad

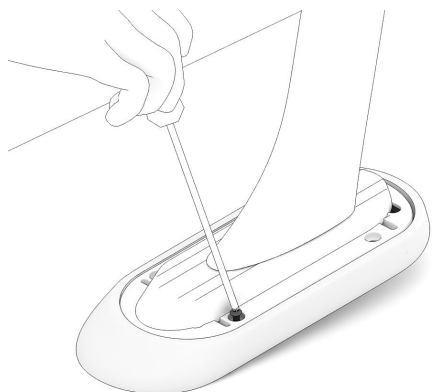


1. Remove all four screws using T-20 torx screw driver.



2. Slide pad forward and off.

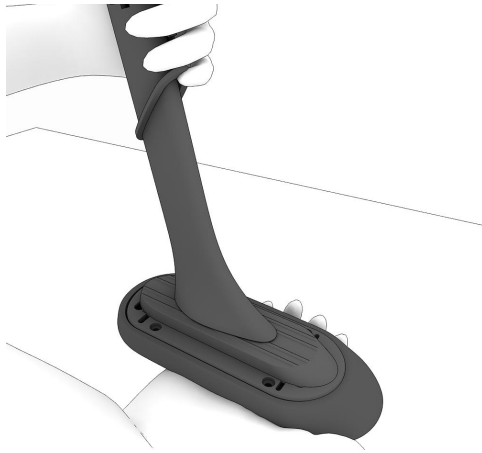


3. Place the arm into position.

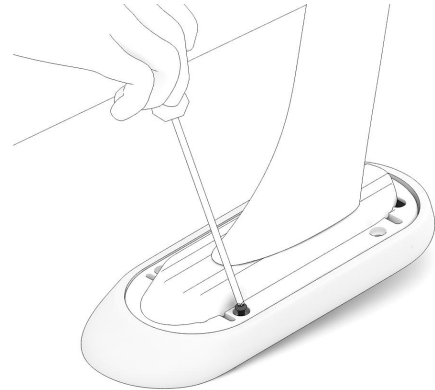


4. Using T-20 torx screw driver tighten all four screws.
11 in.lbs, 1.2 N.m

Steps: Non Indexing Arm Pad

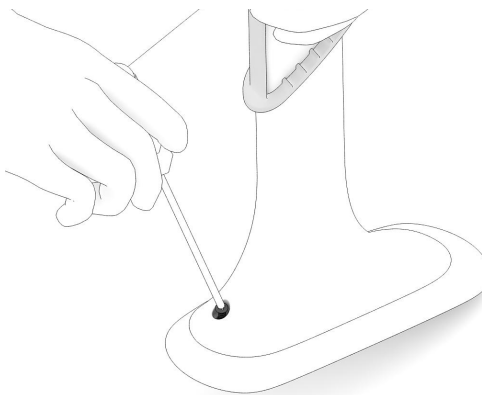


1. Using T-20 torx bit remove the back screw.

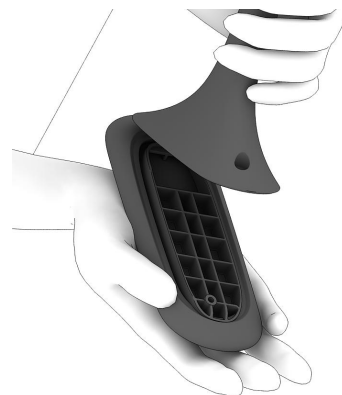

2. Slide pad forward and off.



3. Place the arm into position. Make sure hooks goes under pad.

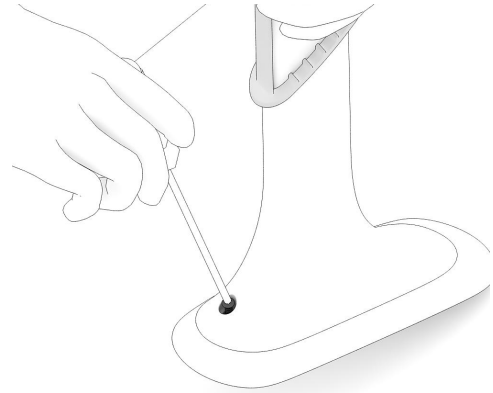

4. Using T-20 torx screw driver tighten the screw.
11 in.lbs, 1.2 N.m