




Canvas Office Landscape® 120° Connector Installation and Disassembly for Recycling Instructions

Parts Included:

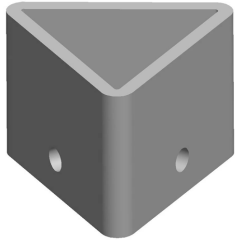

A Connector Tube
FT131.X46(2)
FT131.X57(3)



C 3/8-16 Hex Head Cap Screw

D Washer

Hardware Pack
FT131.246(4)
FT131.346(6)
FT131.257(6)
FT131.357(9)



E Light Seal
FT131.2XX(1)
FT131.3XX(3)


Notice:

Do not tighten screws until at least 2 frames are completely connected.

Notice:

Make certain that fasteners are Torqued to the specified values.


Tools Required:

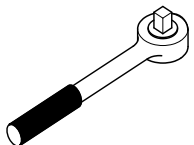


Ratchet



9/16" Socket

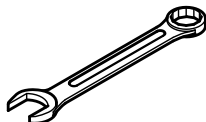

9/16" Wrench

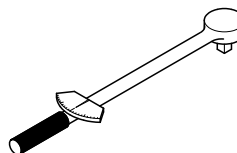

Torque Wrench




Scissors



Safety Glass

Assembly Instructions:

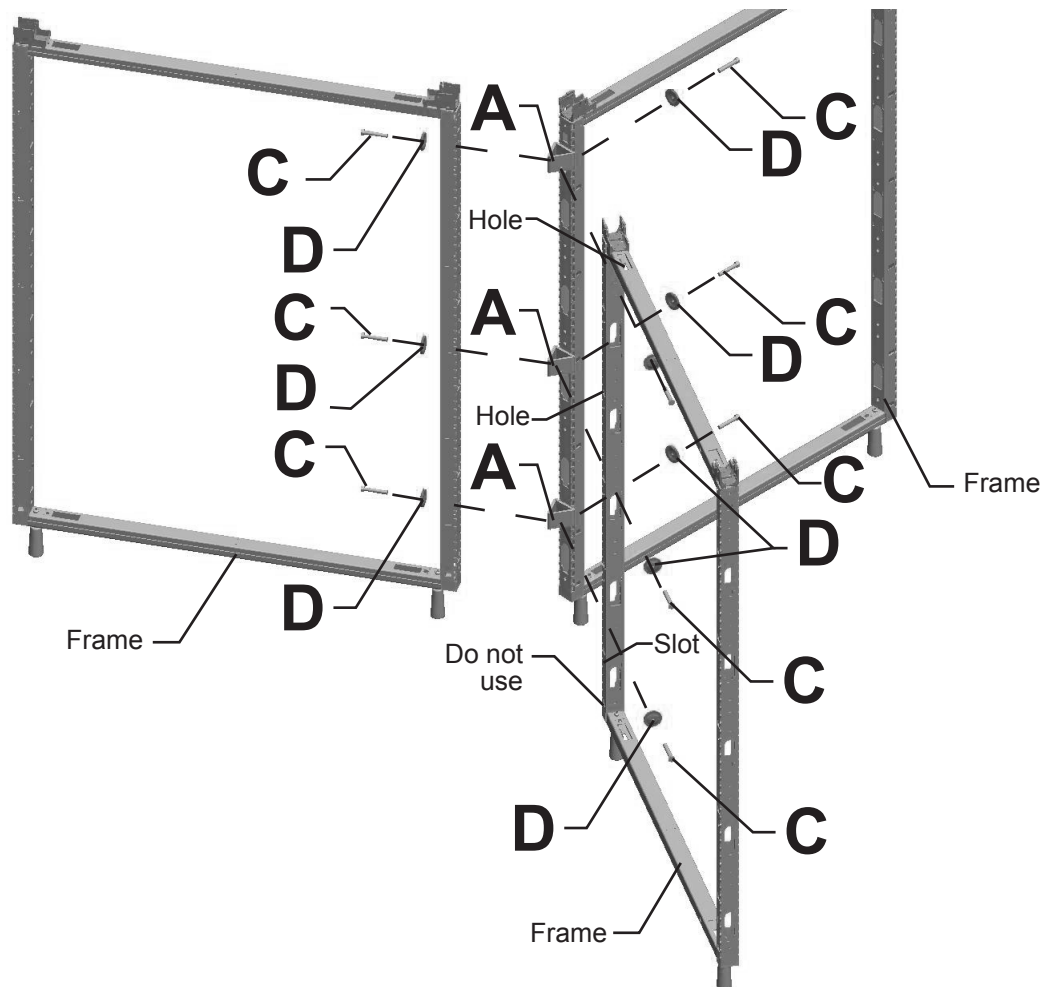

1. Align 3 Frames.
 2. Connect Frames to Connector Tube (A) using Screws (C) and Washers (D) at Top Hole location. Do not tighten Screws.
- For change of Height Configuration, see next page.


Notice:

For proper trim alignment:
Threaded holes in connector Tube (A) to be oriented at the bottom of the parts as shown.

3. Assemble Connector Tube (A) to Frames at Slot location second from bottom with Screws (C) and Washers (D). Do not tighten Screws.
4. For Frames 57" and taller: install Connector (A), Screws and Washers in Middle Hole.
5. **Important: Torque Screws to 200 in-lbs. Start with Top Connector Tube, then Bottom and Middle last.**



Change of Height Configuration:

1 Cont.

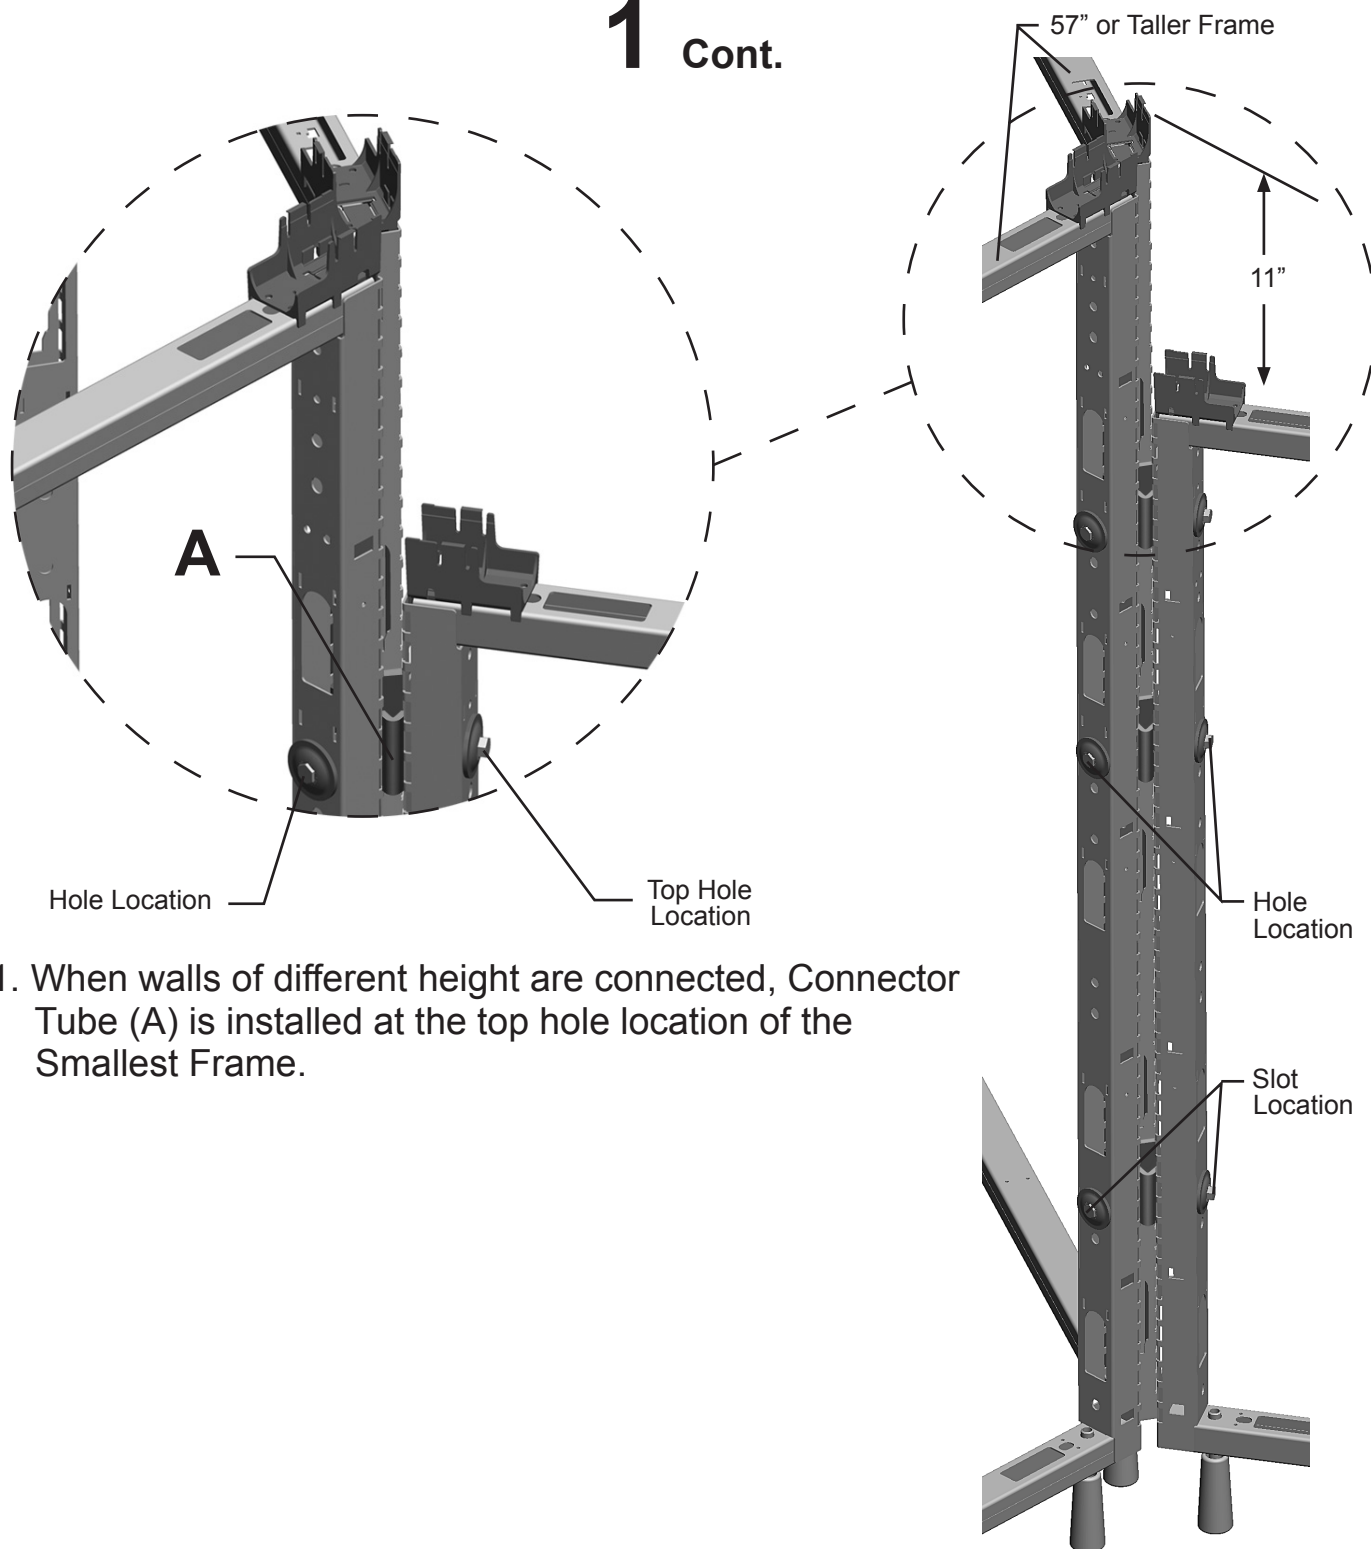

1. When walls of different height are connected, Connector Tube (A) is installed at the top hole location of the Smallest Frame.

Change of Height Configuration Examples:

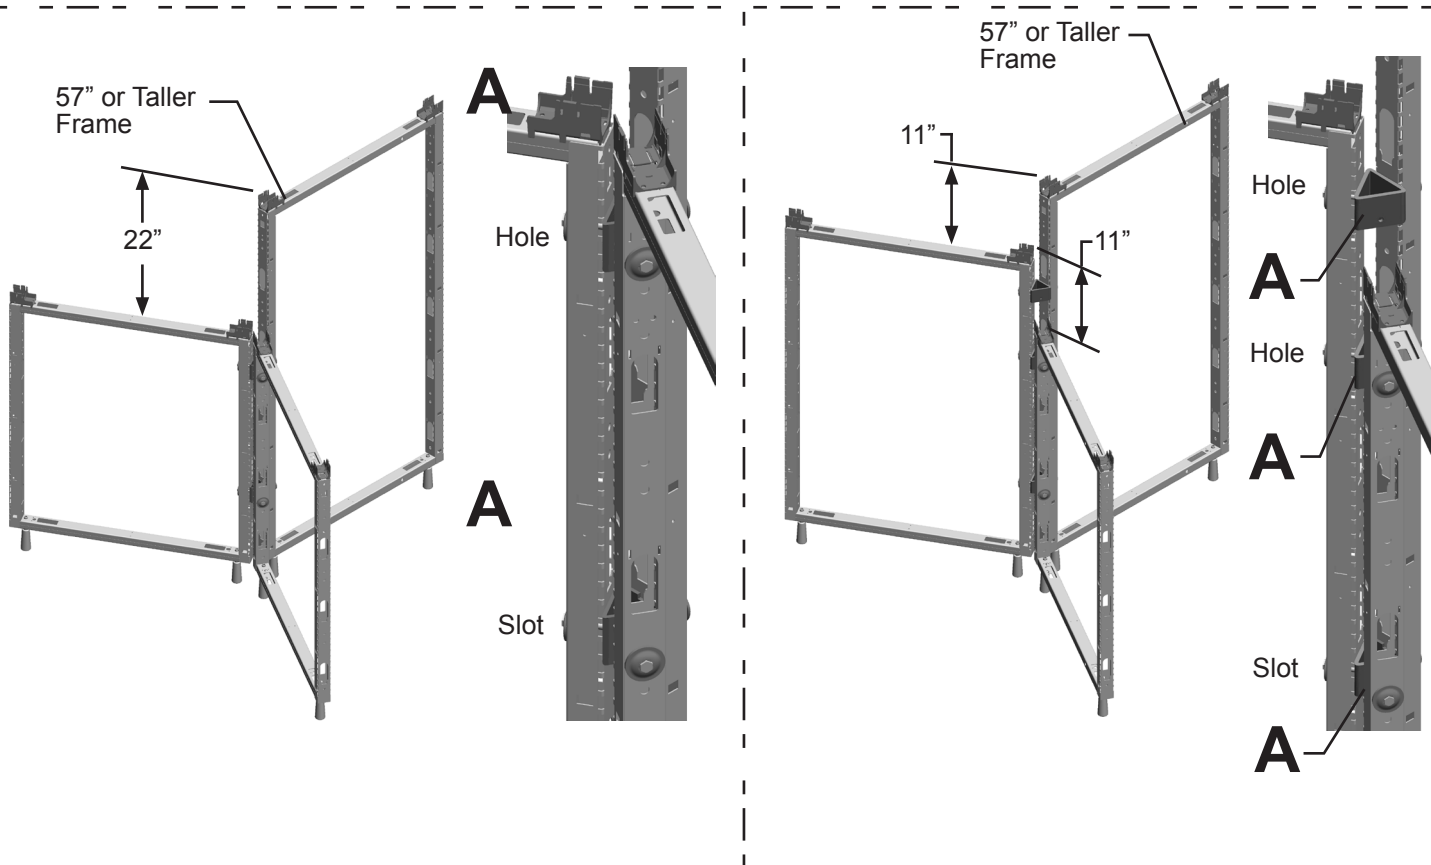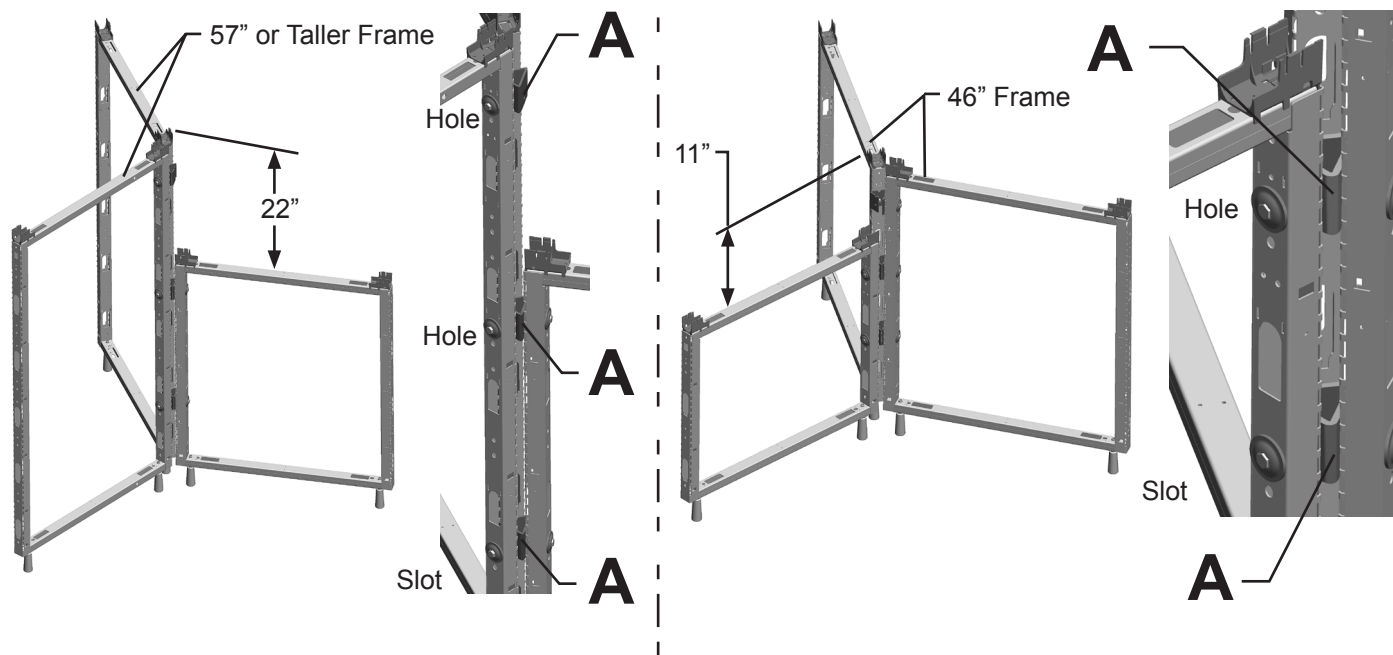

HermanMiller

Part no. 1b3cxn rev H.





© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.

© Herman Miller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.

The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

Change of Height Configuration Examples:

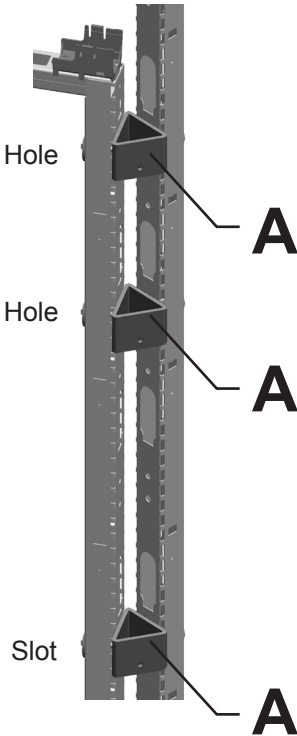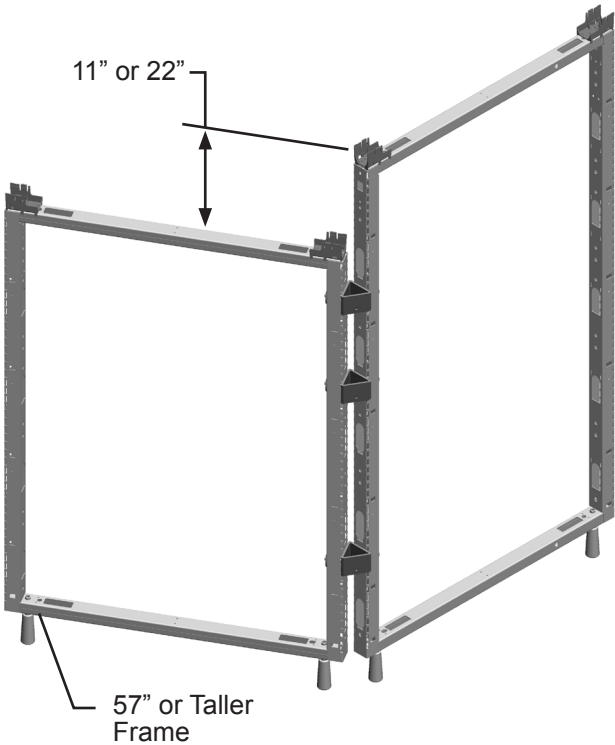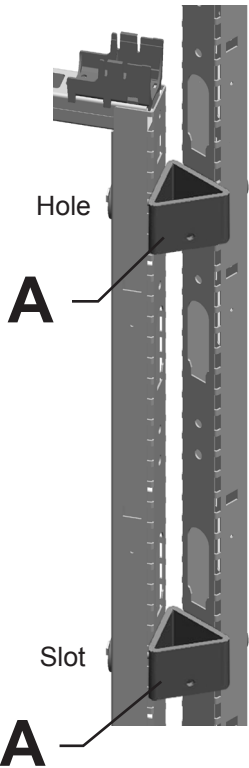
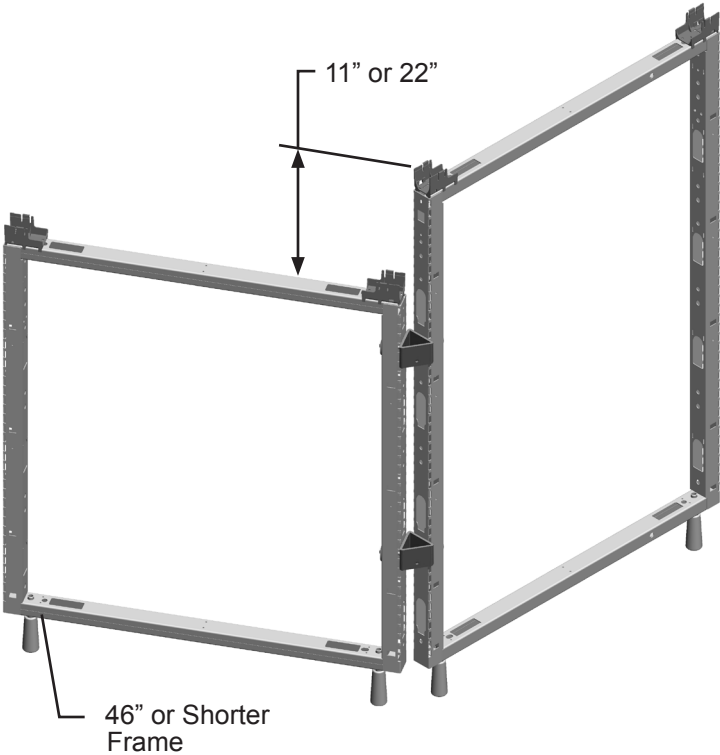


HermanMiller


Part no. 1b3cxn rev H.

© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
©  **HermanMiller** and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.
Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.


1

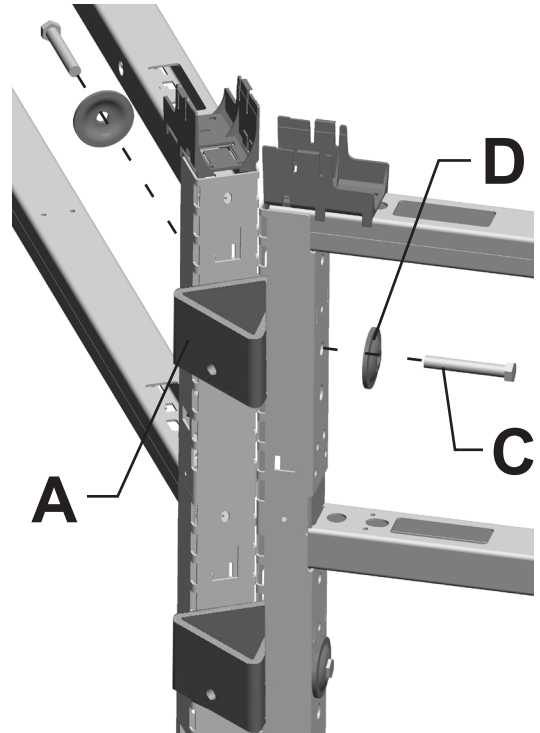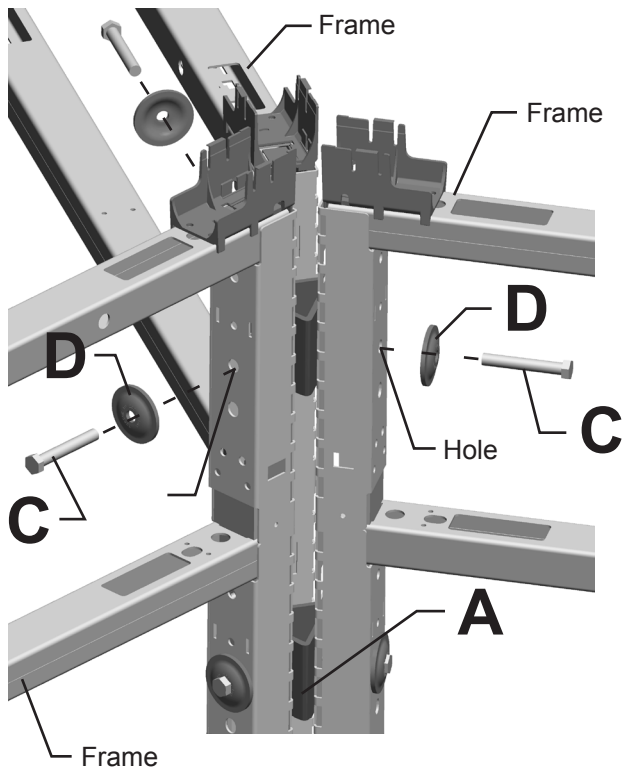


1. Align 2 to 3 Frames.
2. Assemble Frames to Connector Tube (A) with Screw (C) and Washer (D) at top Hole location of shortest Stacking Frame. Install Screws (C) and Washers (D) into remaining Frames.
3. **Important: Torque All Screws to 200 in-lbs.**

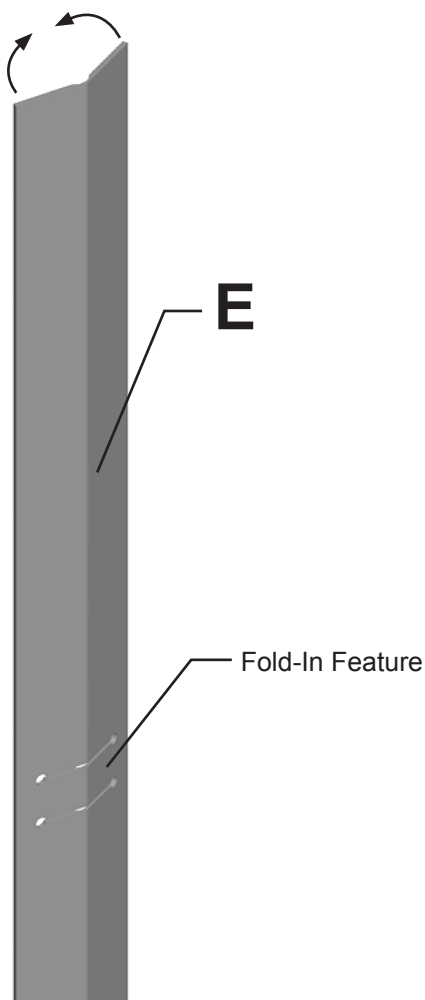

2

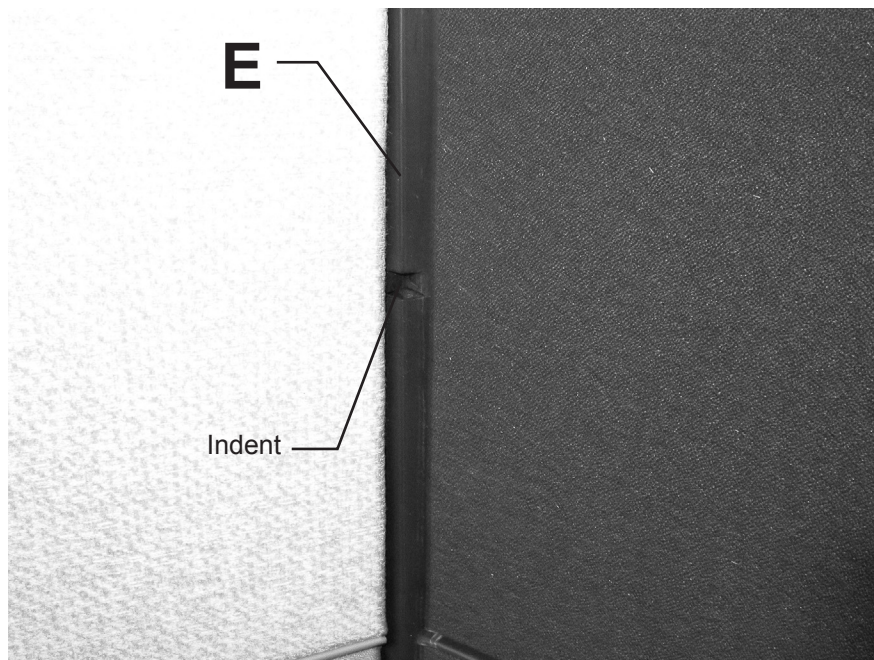

1. After Cladding has been installed, push in Fold-in Feature in Light Seal (E).
2. Pinch sides together at top of Light Seal and insert between Cladding starting at top of Cladding. Let Indent rest on top of Connector Tube.
3. Cut bottom of Light Seal, if needed, at bottom edge of Cladding.
4. Continue to insert Light Seal between Cladding.

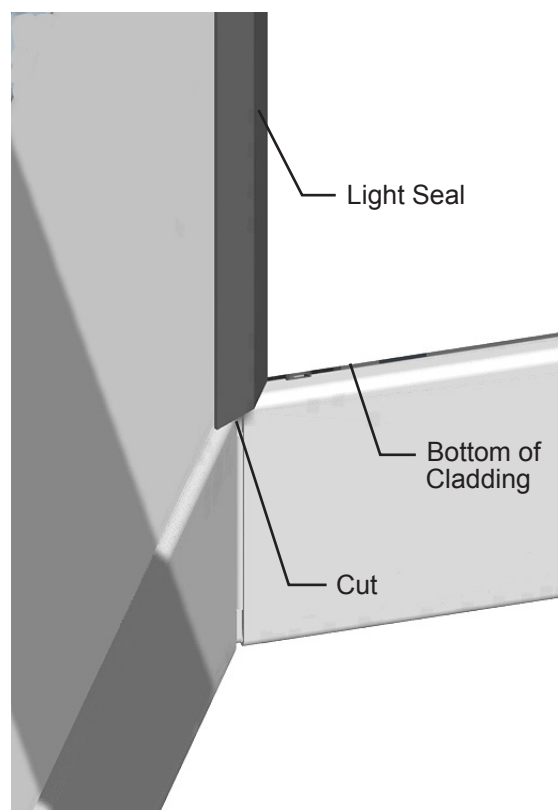

Disassembly for Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse the above installation steps.