





Canvas Office Landscape® Interiors Change of Height Kit Installation and Disassembly for Recycling Instructions

Parts Included:

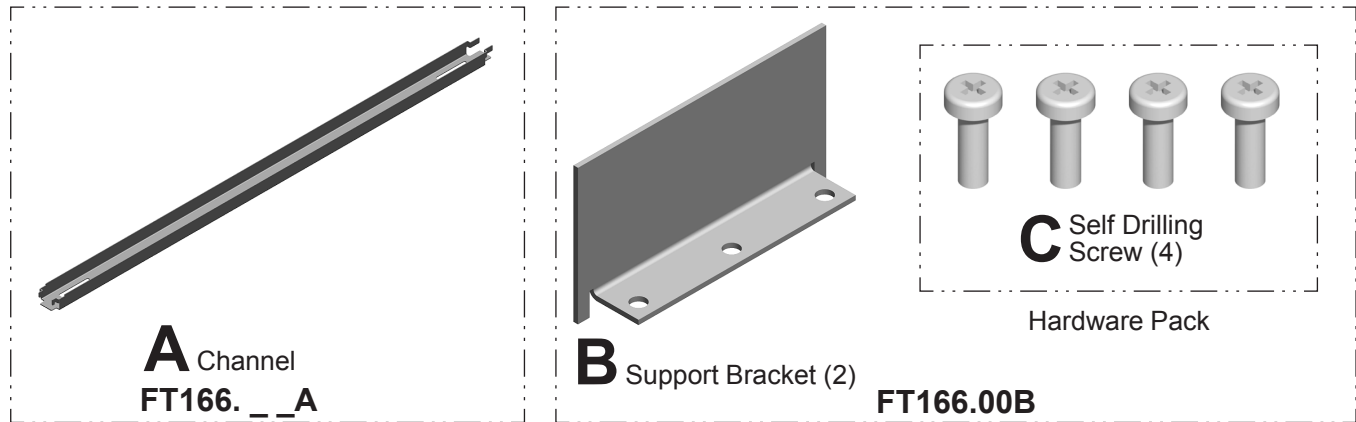

Assembly Instructions:

1

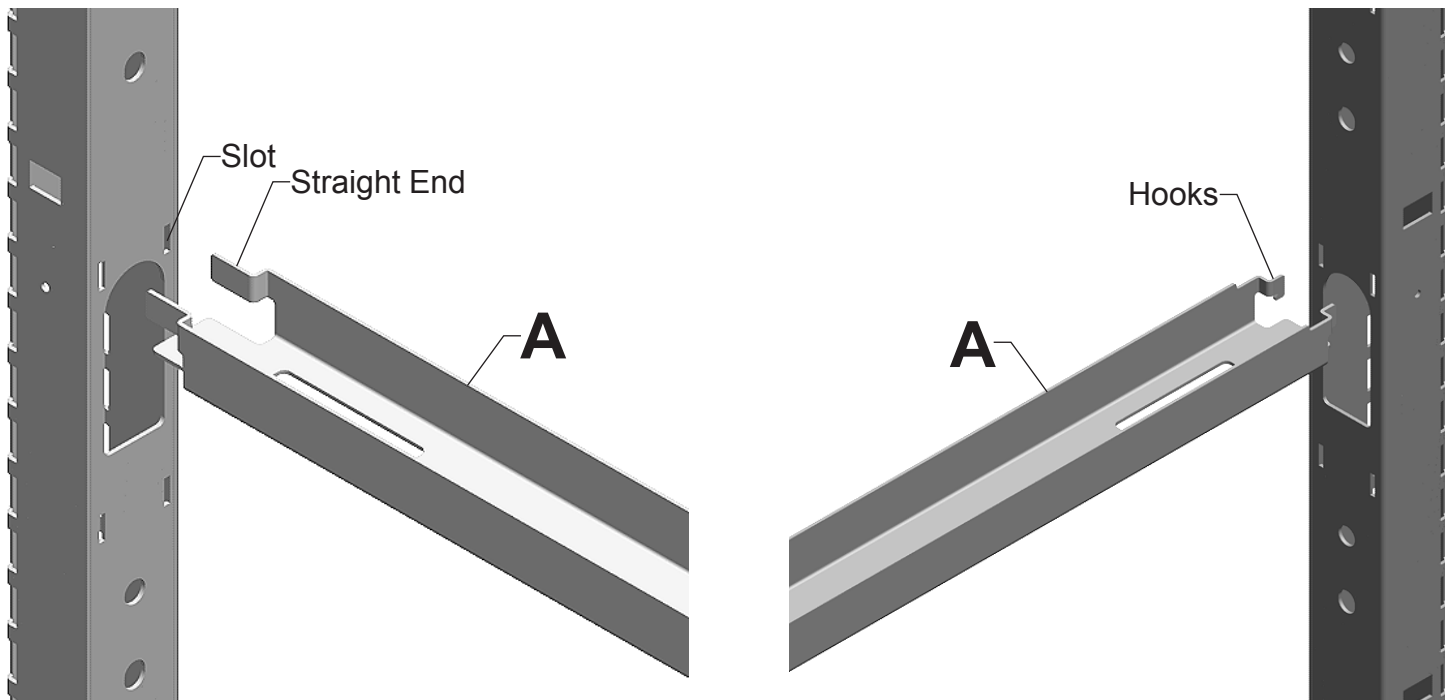

1. Insert Straight End of Channel into Slots above cut-out in frame.
2. Engage Hooks on other end into Channel into Slots above cut-out on opposite side of frame.


HermanMiller

Part no. 1b4jdt rev C.

© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
© Herman Miller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.
Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

2

In the case where change of height is created by addition of a Stacking Frame and Off Module Tile must be installed at top of Lower Frame, Support Bracket (B) must be installed on Top Rail of Lower Frame.

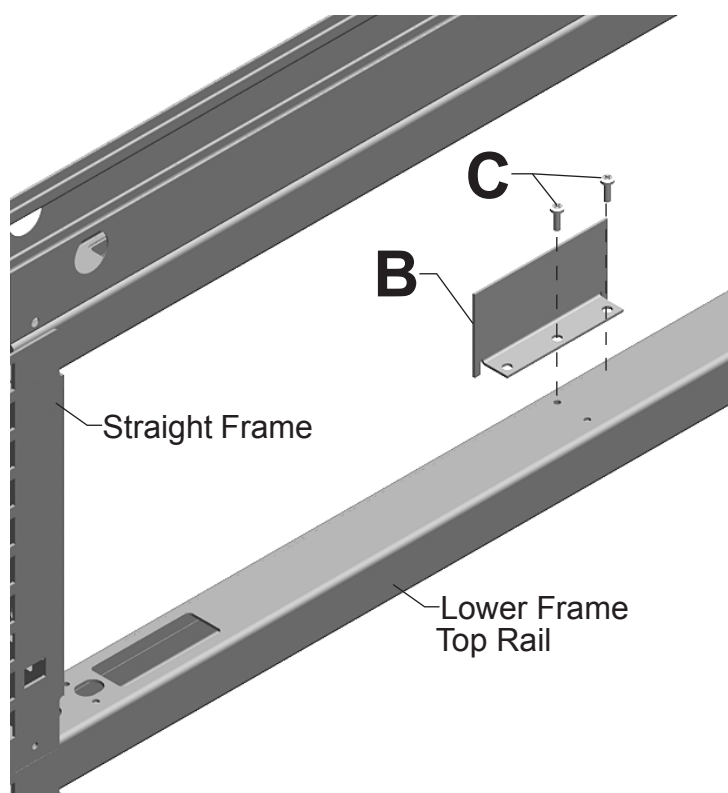

- If Off Module Return Frame will be connected (FT127.B). The Bracket (B) should be installed directly behind where the Off Module Connector will be installed.
- If no Off Module Return Wall will be installed, the Bracket (B) should be installed at center of Top Rail. The Center Holes in Rail can be used to locate Bracket.

Disassembly for Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse steps 2 through 1.