




Canvas Office Landscape® Interiors Door Lock Installation and Disassembly for Recycling Instructions

Parts Included:

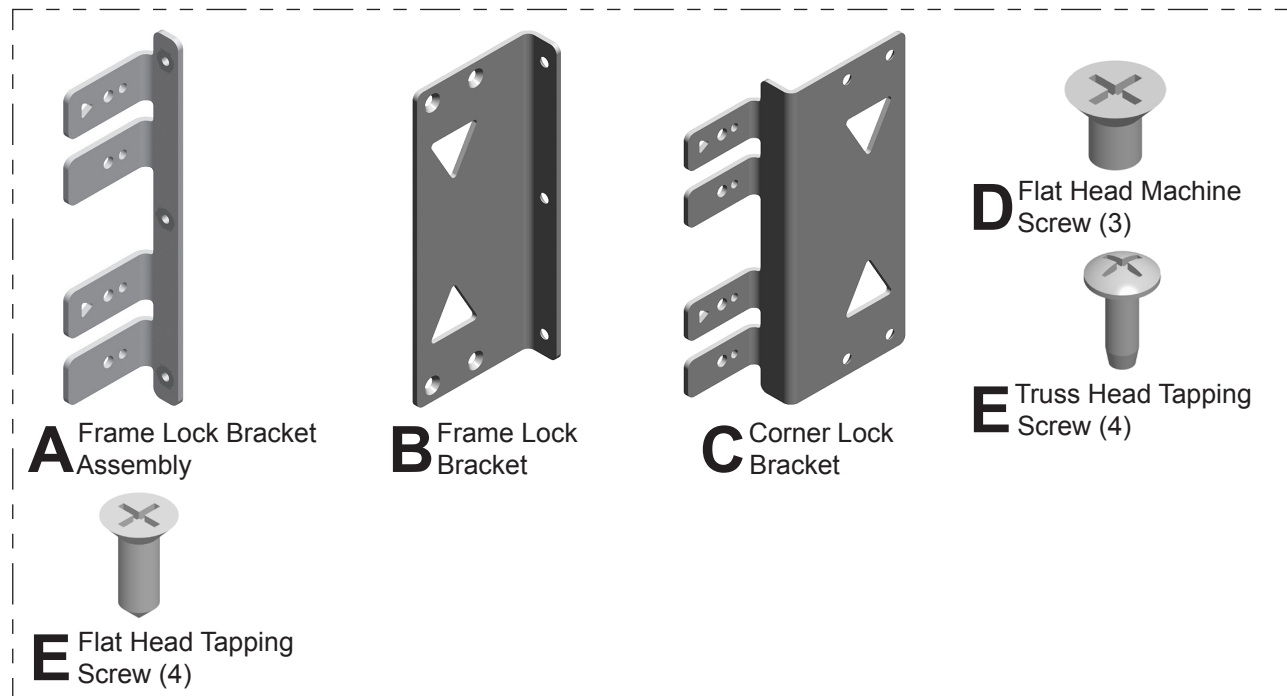


Hardware Pack



G Lock Assembly
(LH Shown)




H Handle

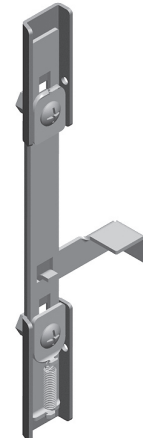

J Latch Holder

Hardware Pack

Tools Needed:



Power Driver



Phillips Bit



5/64 Allen Wrench



#18 Drill Bit
(11/64 or .169")



Safety Glass


HermanMiller

Part no. 1b4p6v rev C.


© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
© Herman Miller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.


Installing Lock Housing for Inline Frames:

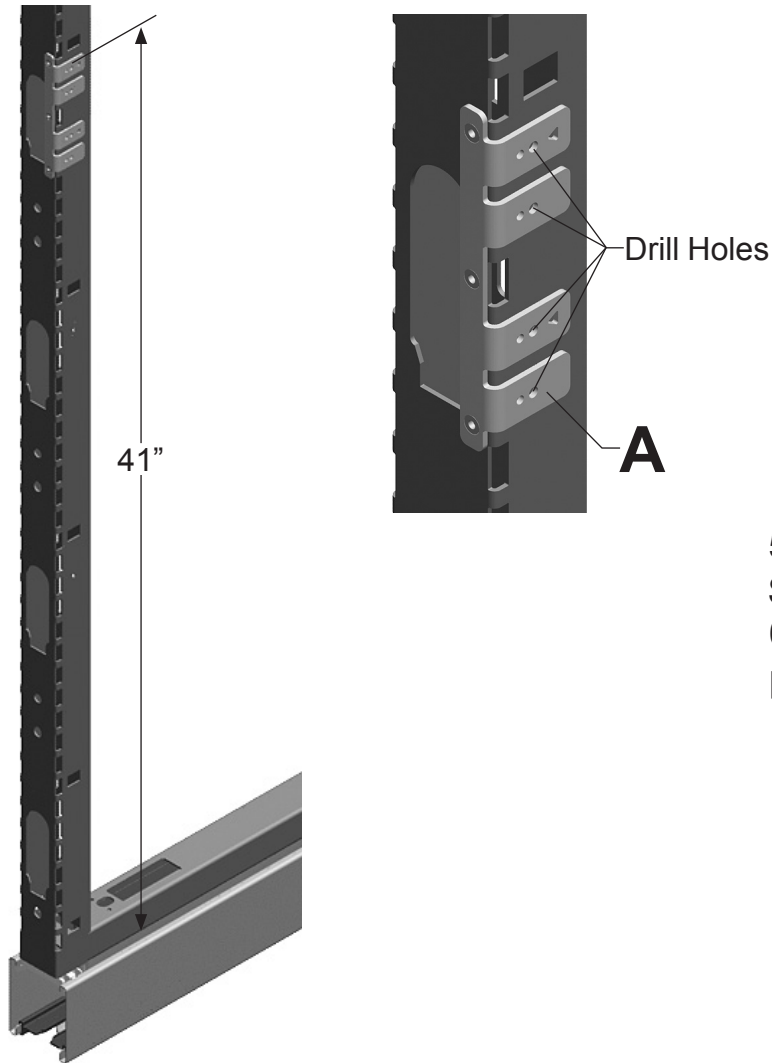

1. Remove Cladding if already installed.
2. Position Lock Bracket Assembly (A) against side of Frame as shown.
3. Measure from bottom of Frame to top of Lock Bracket Assembly Tab 41".
4. While holding Bracket tight against Frame and positioned on slot, use as template to drill 4 mounting holes. Use thru holes not threaded holes on Bracket.

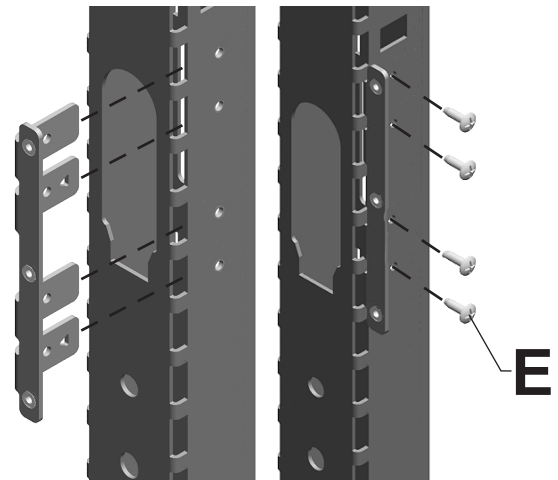


5. Insert Tabs on Bracket Assembly into Slots in Frame.
6. While holding Bracket Assembly in place, install 4 Truss Head screws (E).

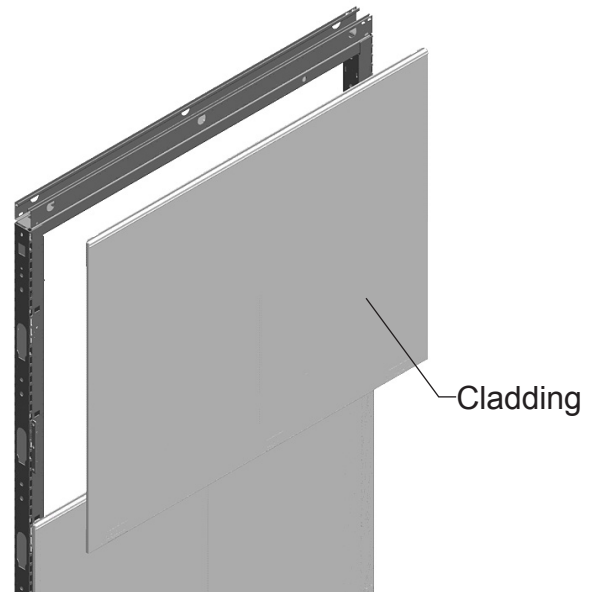


7. Return or install Cladding to Frame.

HermanMiller


Part no. 1b4p6v rev C.

© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
©  Herman Miller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.


Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

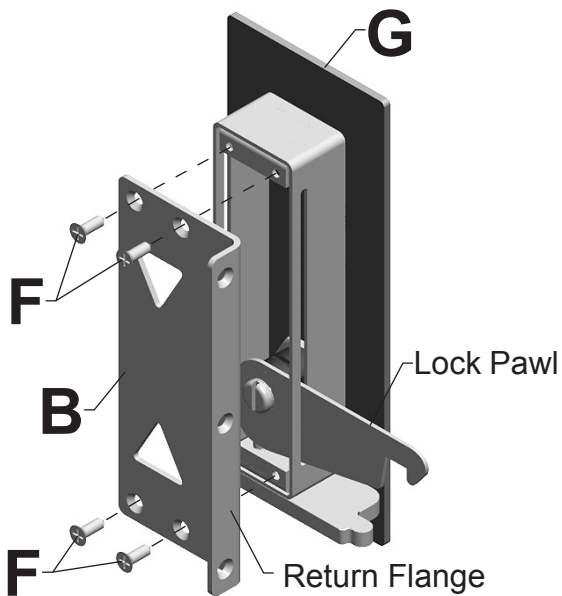

8. Assembly Lock Bracket (B) to Lock Assembly (G) with 4 Flat head Screws (F). Make sure Return Flange is on same side as Lock Pawl.


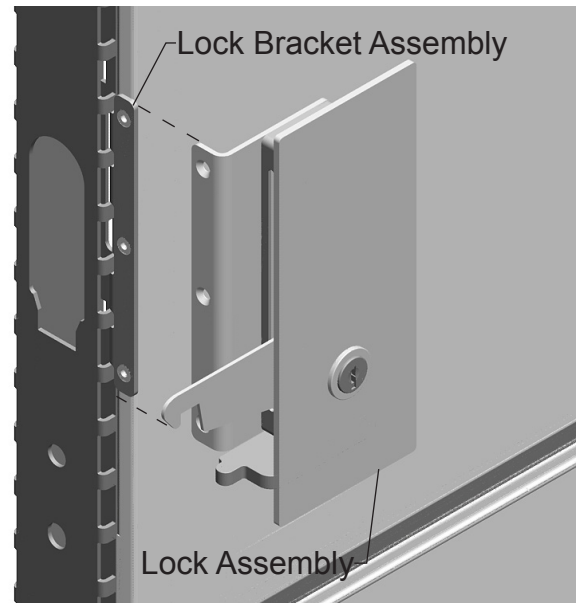


9. Position Lock Assembly to Lock Bracket Assembly.

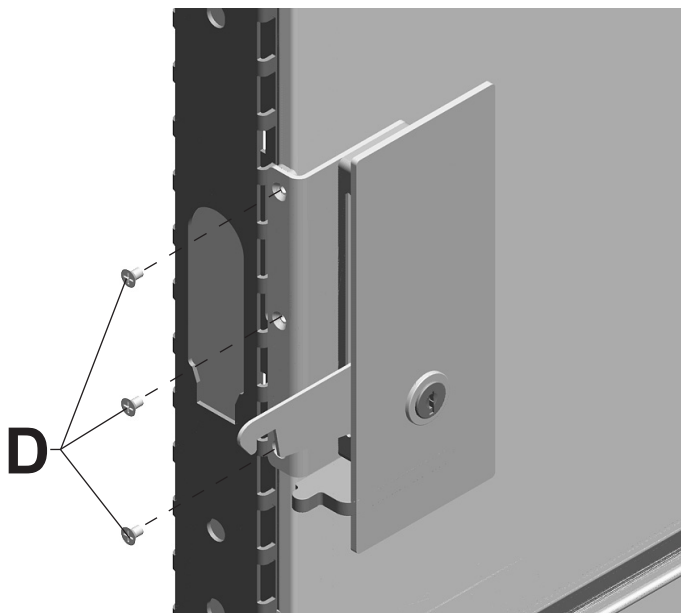


10. Install 3 Flat Head Screws (D).

Installing Lock Housing on Corner Connector Cover:

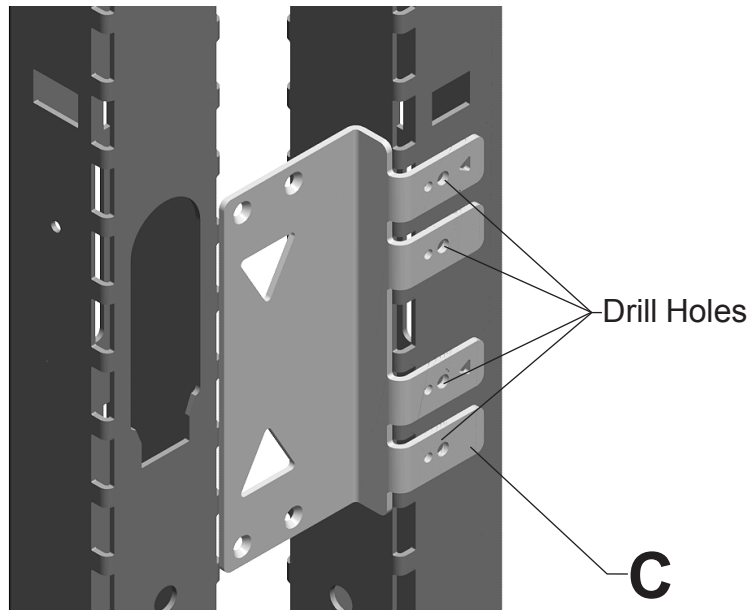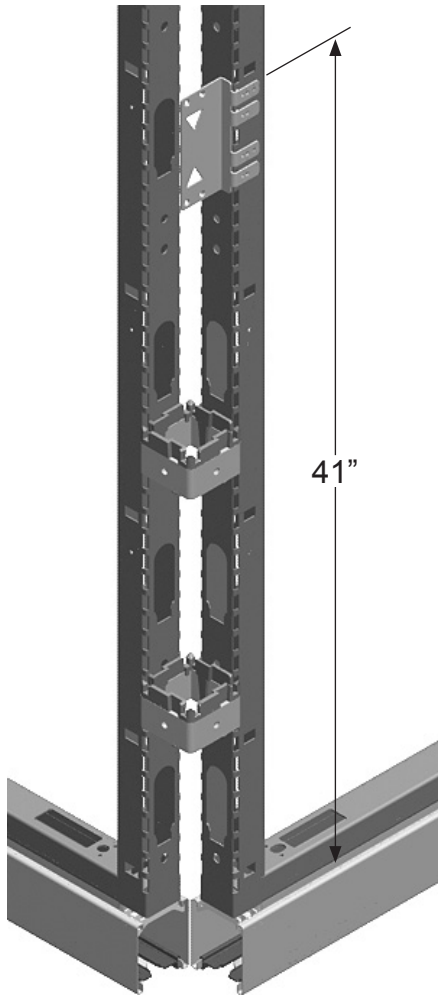


11. Remove Cladding and Corner Connector Cover if already installed.
12. Position Lock Bracket Assembly (C) against side of Frame as shown.
13. Measure from bottom of Frame to top of Lock Bracket Assembly Tab 41".
14. While holding Bracket tight against Frame and Positioned on slot, use as template to drill 4 mounting holes. Use thru holes not threaded holes on Bracket.

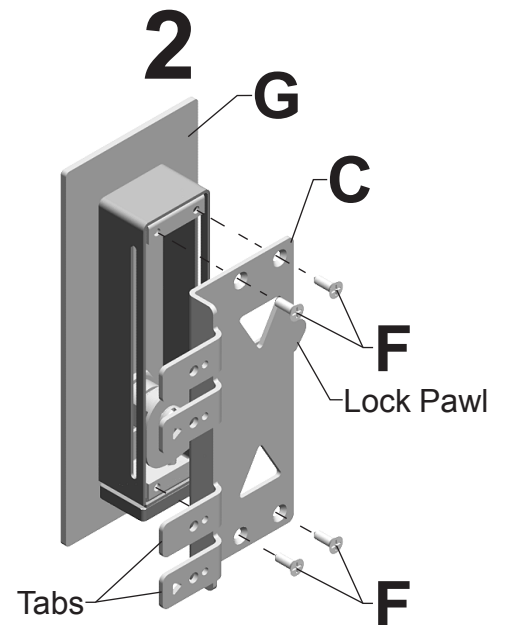


15. Assemble Corner Lock Bracket (C) to Lock Assembly (G) with 4 Flat Head Screws (F). Make sure Tabs point in opposite direction of Lock Pawl.

Corner
Connector
Cover

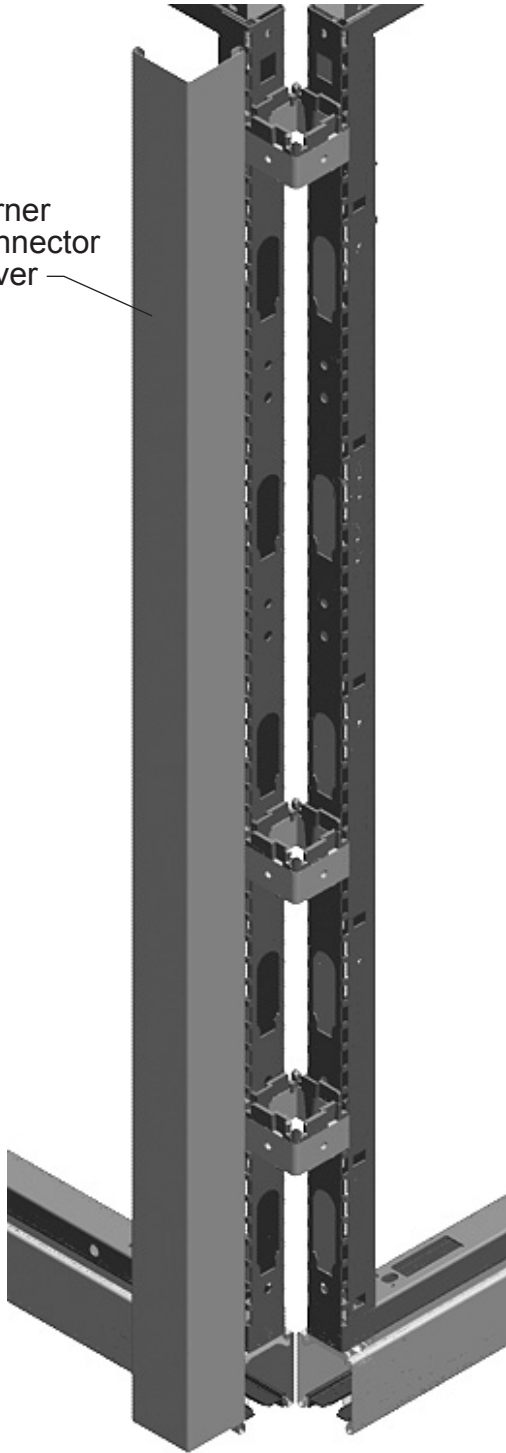


16. Return or install Corner Connector Cover onto Frames.

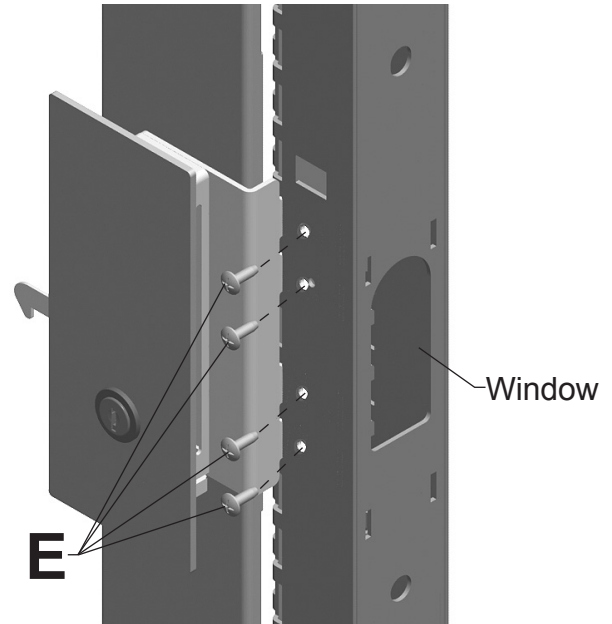

17. Insert Tabs on Bracket Assembly into slots in Frame.


18. While holding Bracket Assembly in place thru window in Frame, install 4 Truss Head Screws (E).

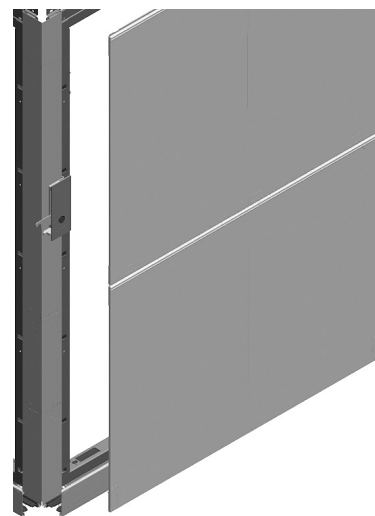

19. Return or install Cladding onto Frame.


HermanMiller

Part no. 1b4p6v rev C.


© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
 ®  **HermanMiller** and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.
 The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

Installing Door Handle:

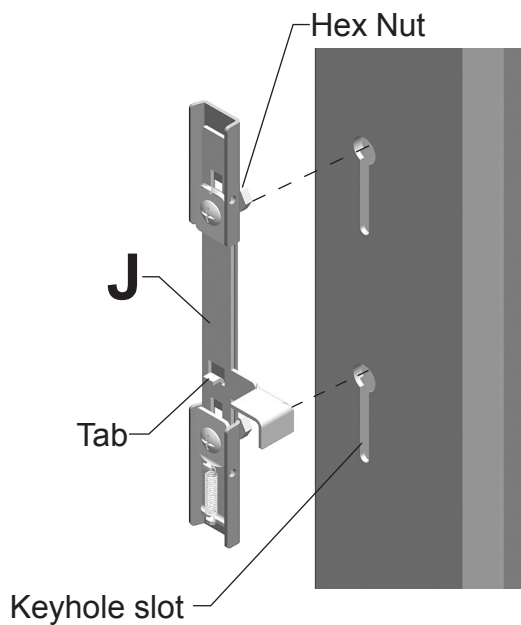


20. Insert Hex Nuts on Latch Holder (J) into Keyhole Slots in door and slide down to bottom of slot. Do not tighten.

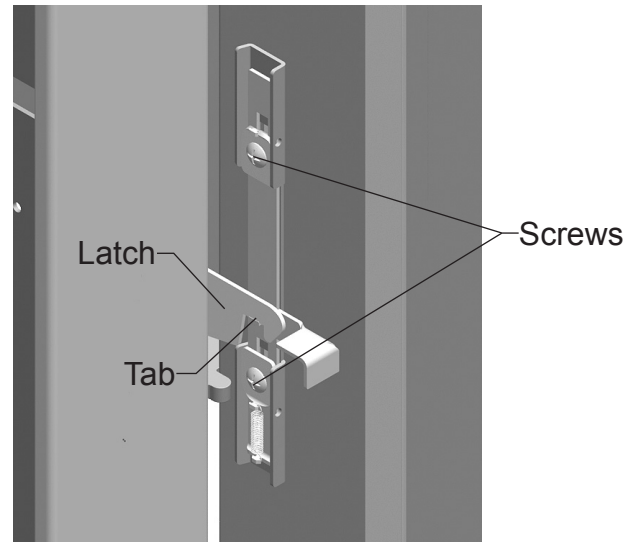



21. Close door and lock.

22. Slide Latch Holder up until Tab fully engages with Latch. Tighten Screws (from inside office).

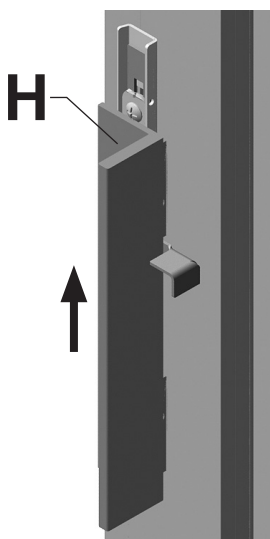

23. Place Handle (H) onto middle of Latch Holder. Slide Handle up until top of Ribs on back of Handle align with top edge of Latch Holder.

24. Secure Handle to Latch with 2 Set Screws. Do not over tighten.

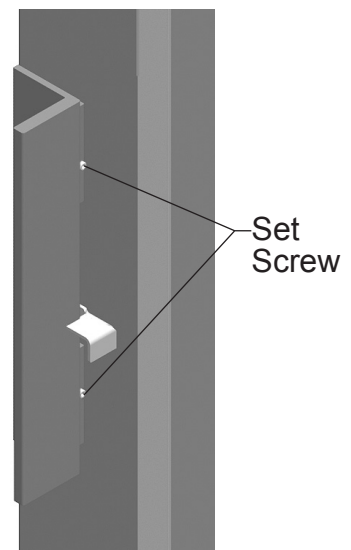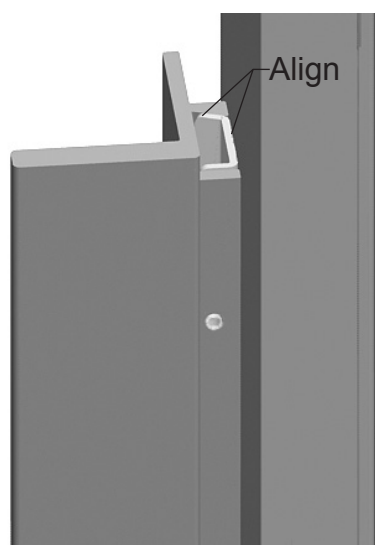

Disassembly and Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse steps 24 through 1.