




Intent® Furniture Cabinet/Wall Attachment Bracket Installation and Disassembly for Recycling Instructions


Parts Included:

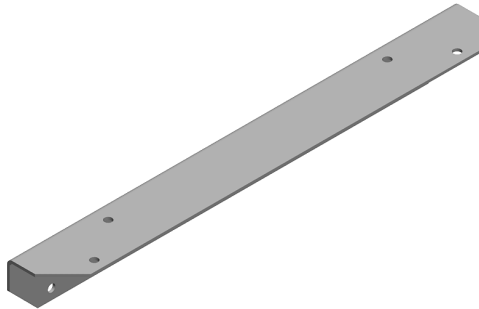


A Mounting Bracket



B Pan Head Tapping
Screw (8)

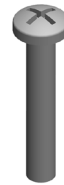


C Pan Head Machine
Screw (4)

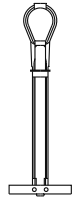

D Toggle Bolt (4)

Tools Required:

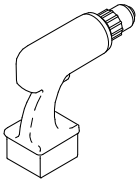


Power Driver



2 3/8" Boring Tool




Phillips Bit

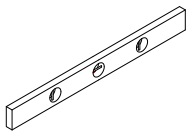

Level




Safety Glass

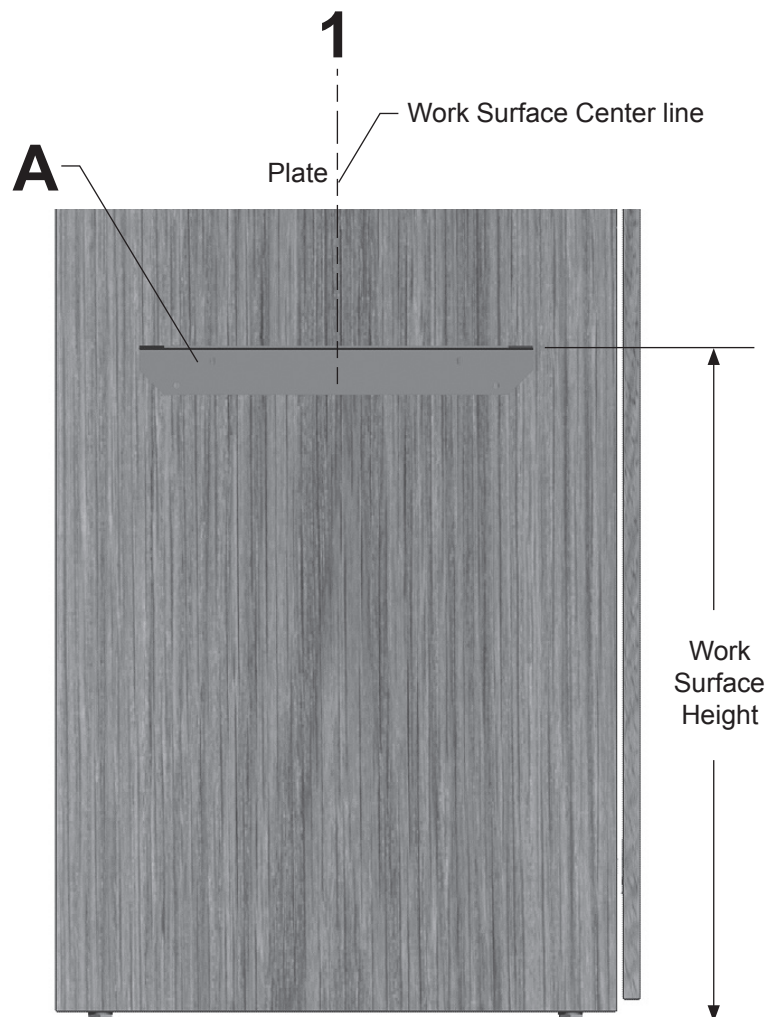


1. Determine depth of Work Surface. Locate Bracket (A) onto Cabinet so that it will be centered on work surface. Measure up from floor to top of bracket for desired work surface height.

2

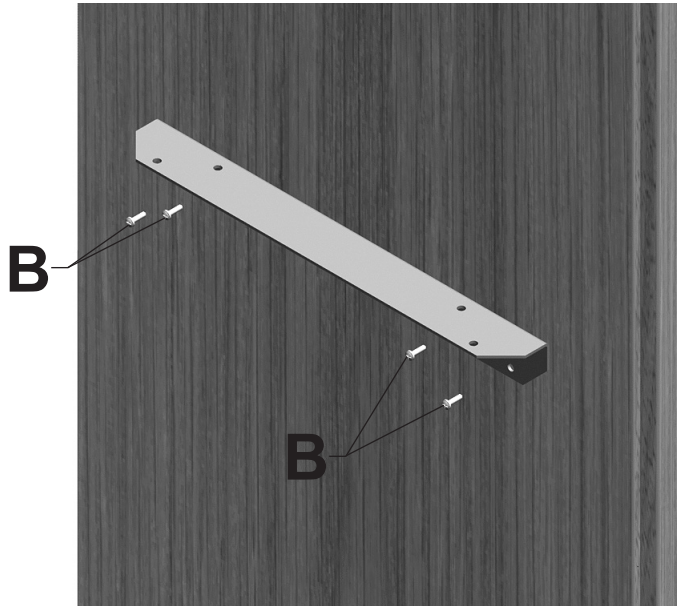


1. Make sure Bracket is Level.
2. Drill 4 pilot holes.
3. Secure Bracket to Cabinet with 4 Pan Head Tapping Screws (B).

3

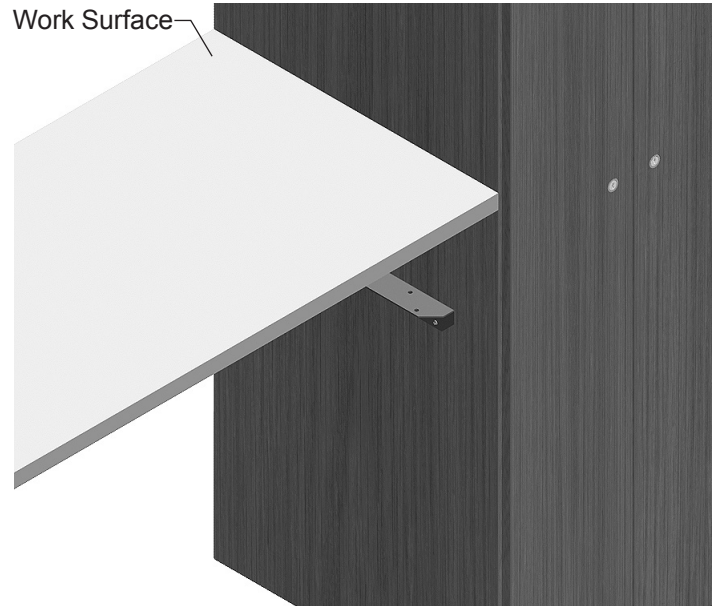


1. Set Work Surface onto Bracket.

4

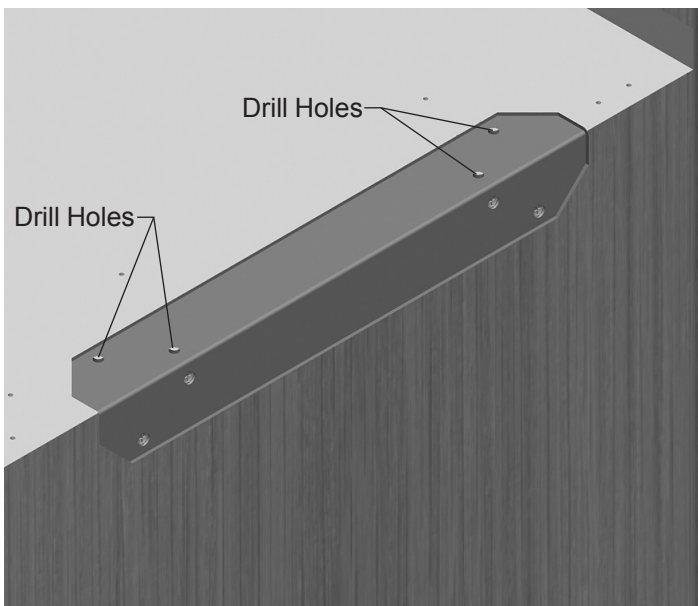

1. From under Work Surface, drill 4 Holes .5" deep.


5

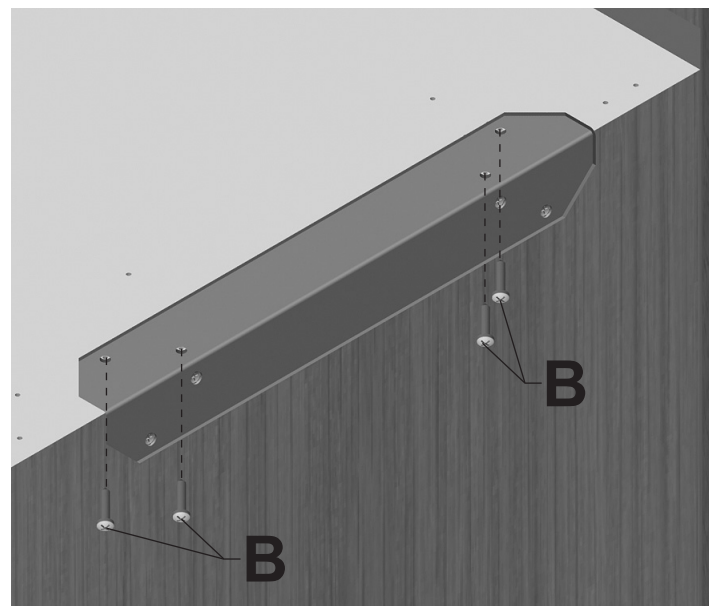


1. Install 4 Tapping Screws (B).

HermanMiller

Part no. 1b5dlld rev B.

© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
 ©  Herman Miller and Intent are among the registered trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.
 The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

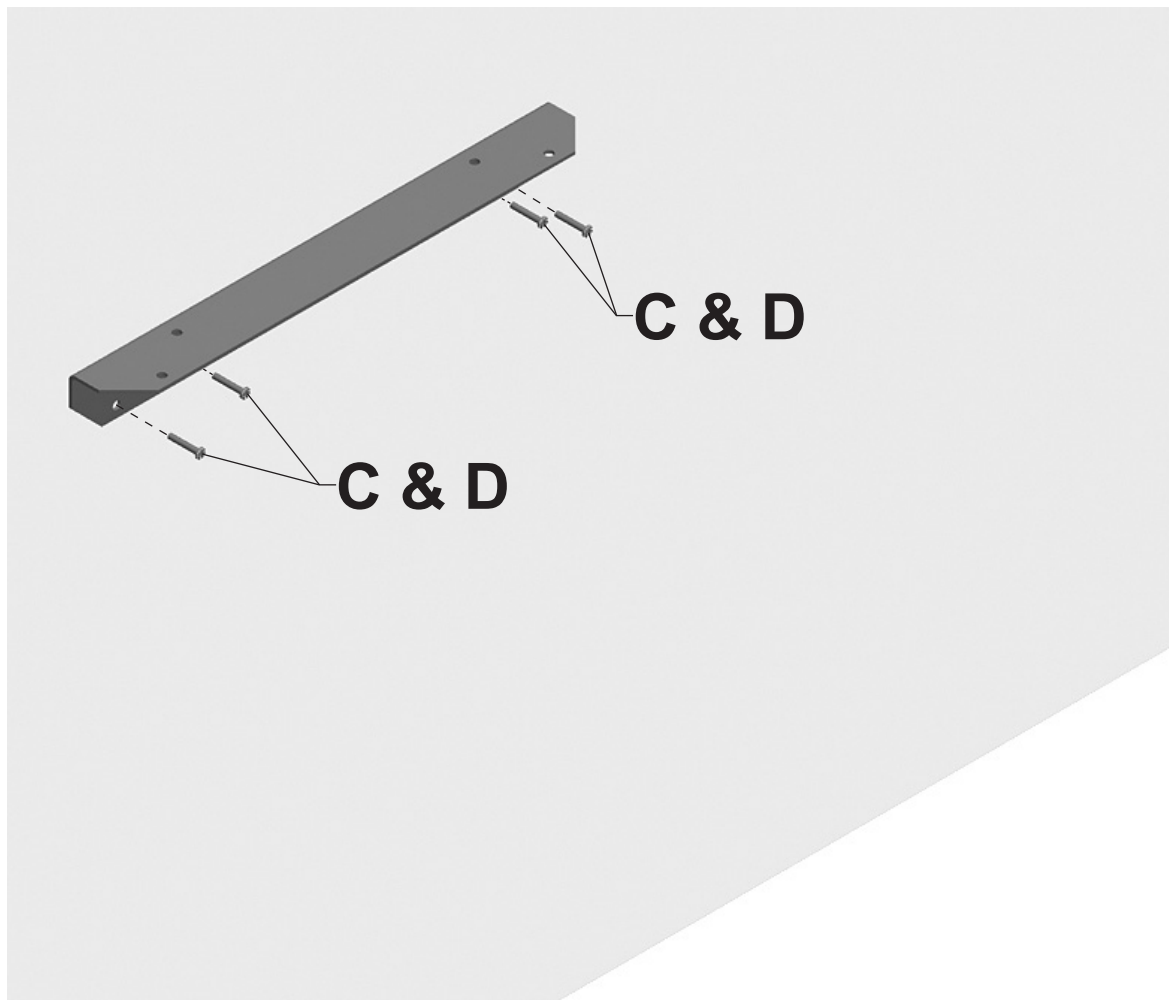

1. When installing Bracket to dry wall, use Screws (C) and Toggle Bolt (D). For other types of wall material, use proper fasteners.

Disassembly and Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse the above installation steps: