





Canvas Office Landscape® Interiors Rail Tile Installation and Disassembly for Recycling Instructions

Parts Included:

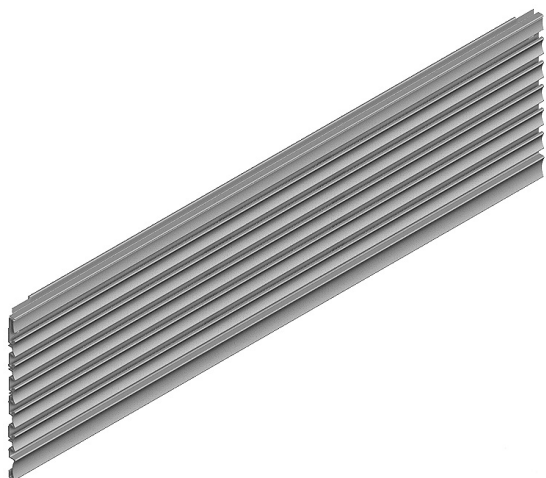


A Rail Tile (M,T & W Versions)

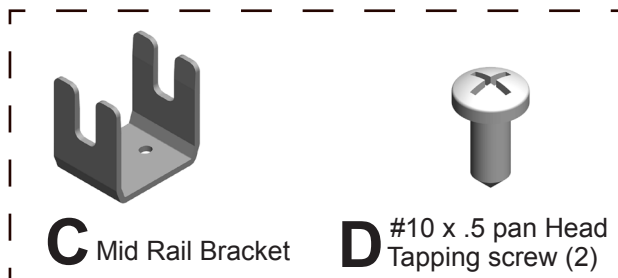

C Mid Rail Bracket

D #10 x .5 pan Head Tapping screw (2)

Hardware Park (T Version)

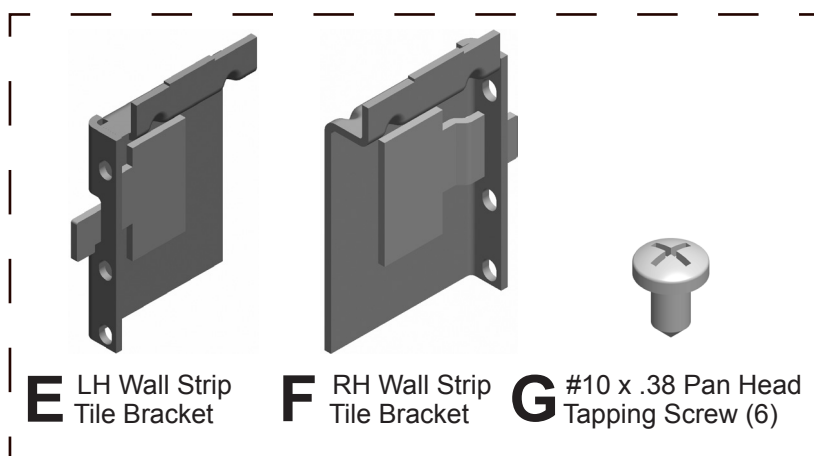


E LH Wall Strip Tile Bracket

F RH Wall Strip Tile Bracket

G #10 x .38 Pan Head Tapping Screw (6)

Hardware Park (W Version)


Tools Needed:

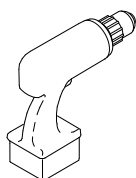

Power Driver



#2 Phillips Bit

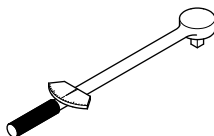

Torque Wrench




9/64 Drill Bit



Safety Glass

Assembly Instructions:

1

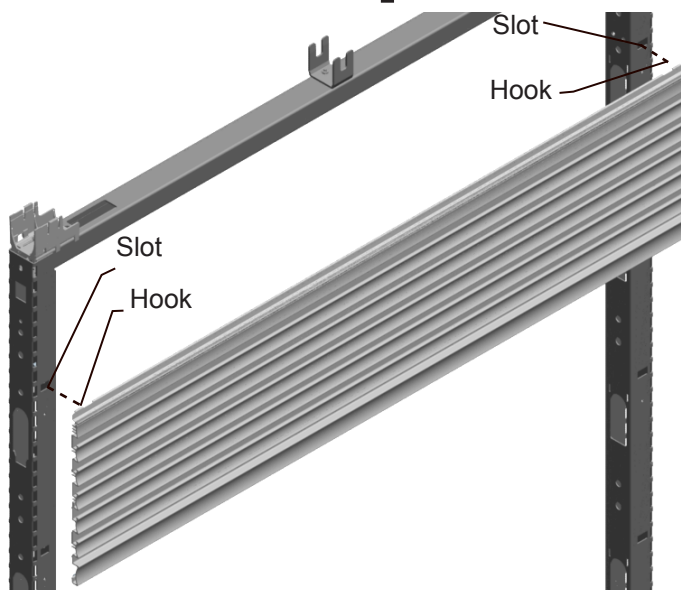

M Version

1. Insert Hooks on Tool Rail (A) into slots in Frame. Let bottom of Tool Rail rest against Frame.

HermanMiller

Part no. 1b5h1x rev F.

© 2014 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.

© Herman Miller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.


The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

T Version




WARNING

Incorrect installation can allow tile to fall, causing product damage and/or personal injury. Torque specification must be strictly adhered to.

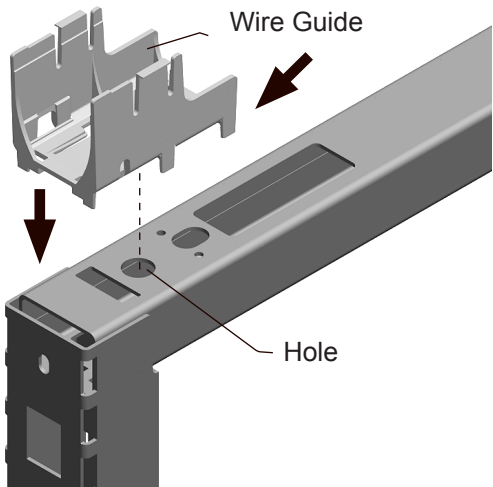


1

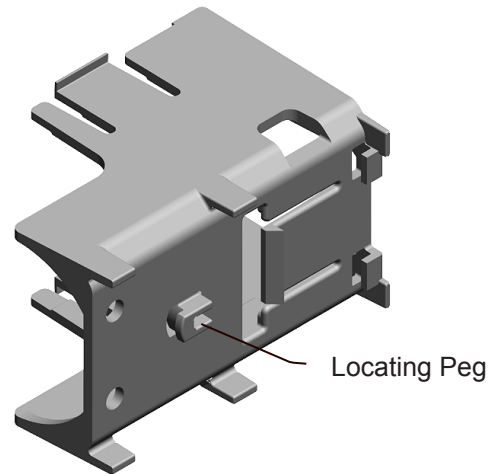

1. Set Wire Guide onto end of Frame with Location Peg into hole in frame. Slide Wire Guide toward end off Frame until it locks in place

2

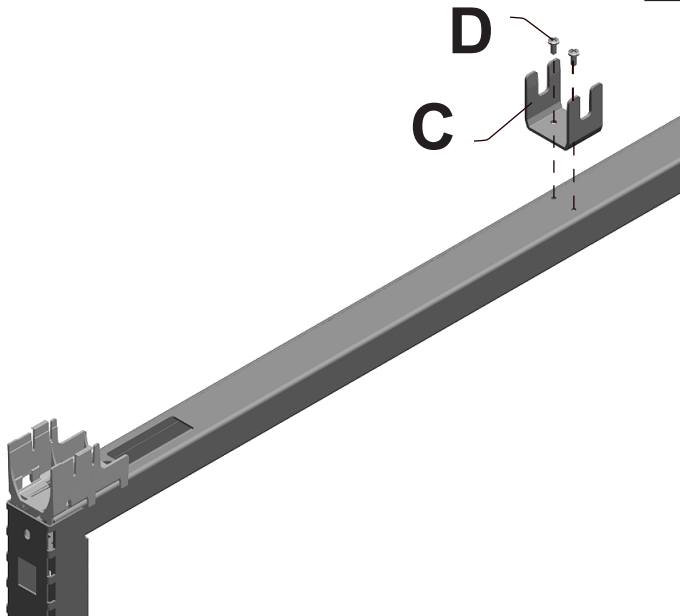


2. Install Mid Rail Bracket (C) to frame with 2 Tapping Screws (D). Torque Screws to 11-15 in-lbs.

HermanMiller

Part no. 1b5h1x rev F.





© 2014 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.

©  **HermanMiller** and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.



Illustrations and specifications are based on the latest product information available at the time of publication.

The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

3

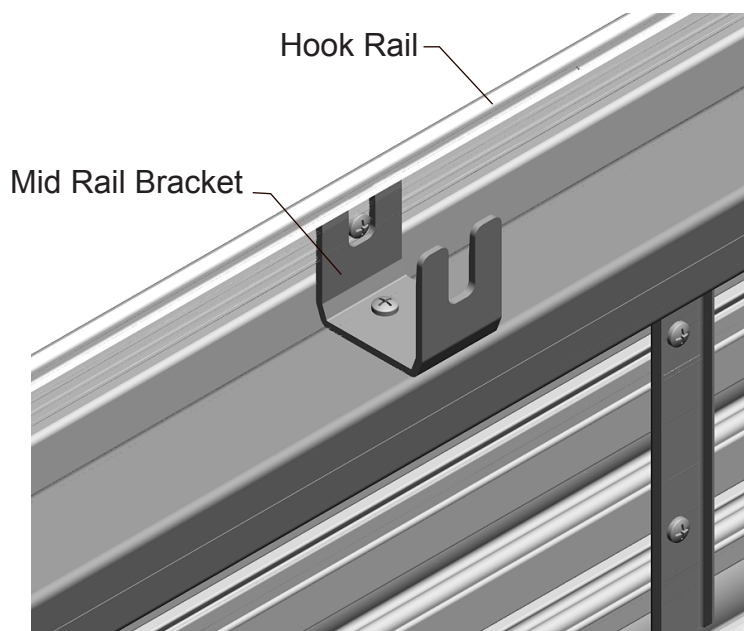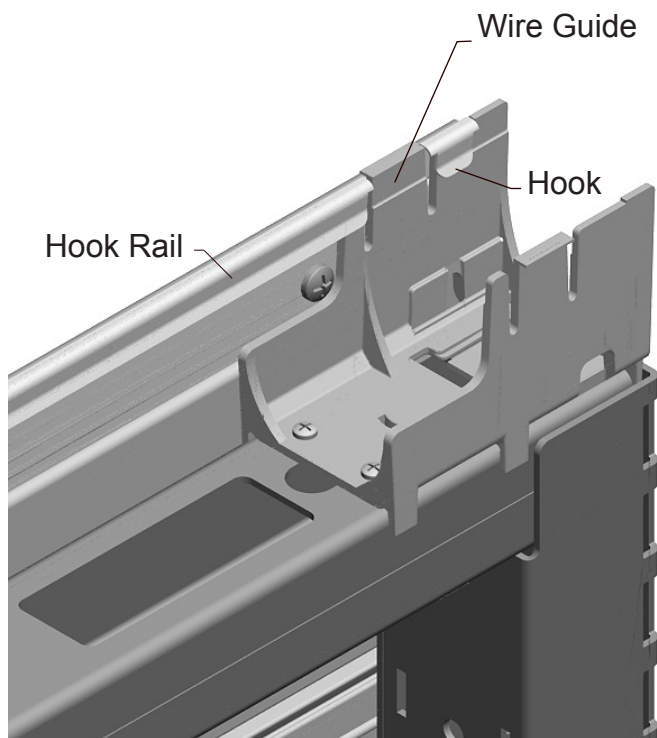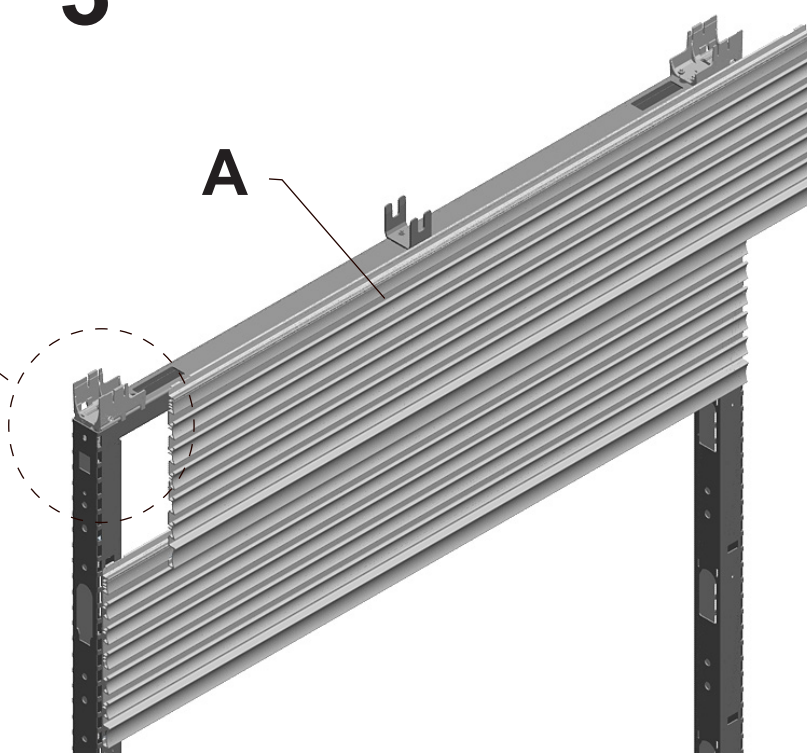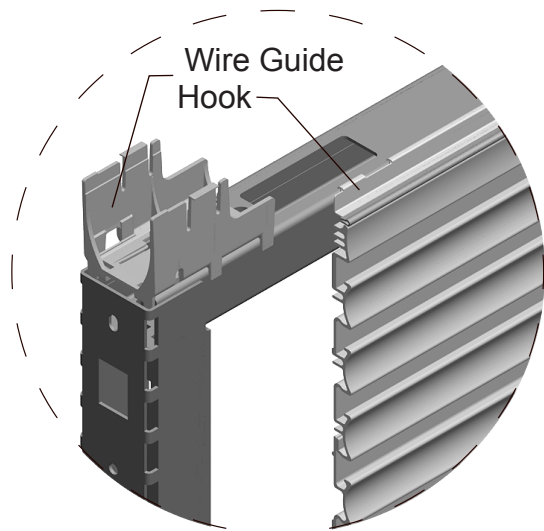

3. Hook Rail Tile (A) onto Wire Guides with Hook Rail capturing Mid Rail Bracket.

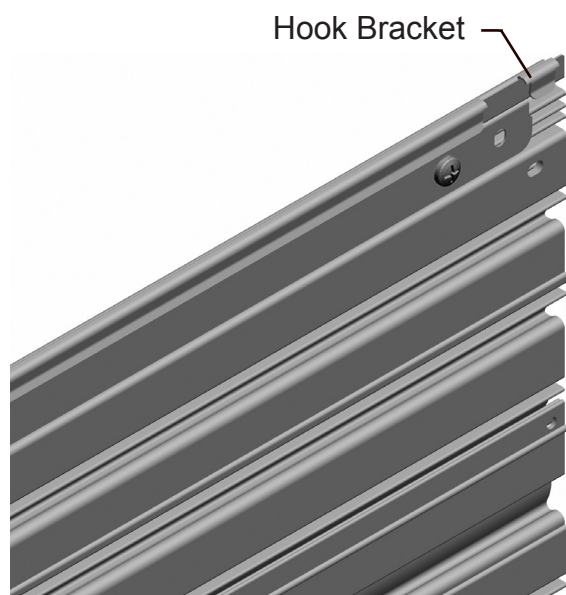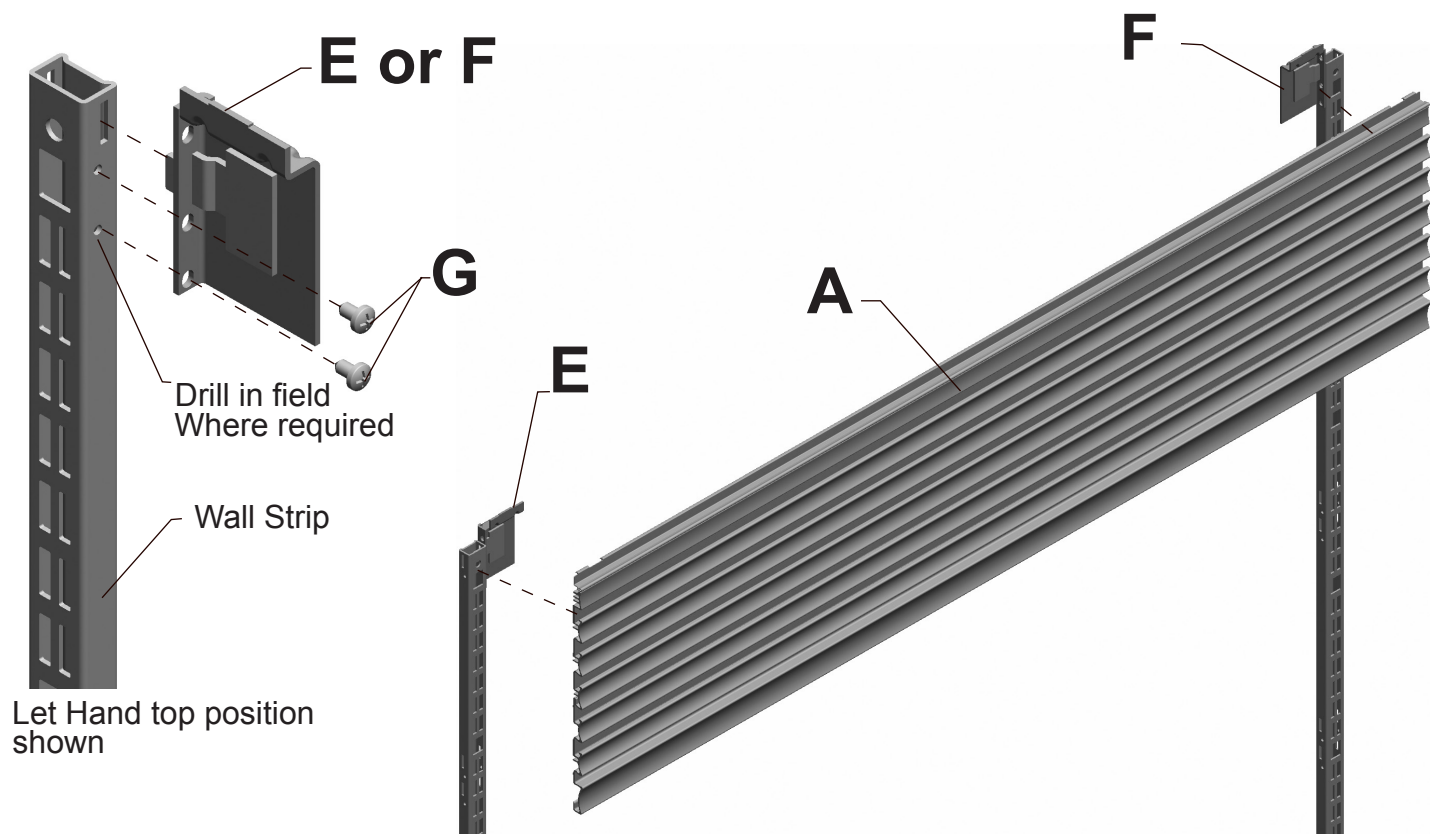

Note : See instruction sheet 1B2K51 furnished with wall Strips for proper wall Strip installation Procedures.

1. Insert Wall Strip Tile Brackets (E & F) into slots on sides of wall Strip.
2. Install Tapping Screw (G) into each Bracket. Torque Screws to 11-15 in-lbs.

Note : Brackets in Top Position will only use two Screws as shown, all other positions use all three Screws.

3. Hang Rail Tile (A) onto Brackets by Hook Brackets on back of Tile. Let bottom of Tile set against wall strips.

Disassembly for Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non-marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse the above installation steps.