






Canvas Office Landscape® Architectural Finished End and Change of Height Finished End Installation and Disassembly for Recycling Instructions

Parts Included:

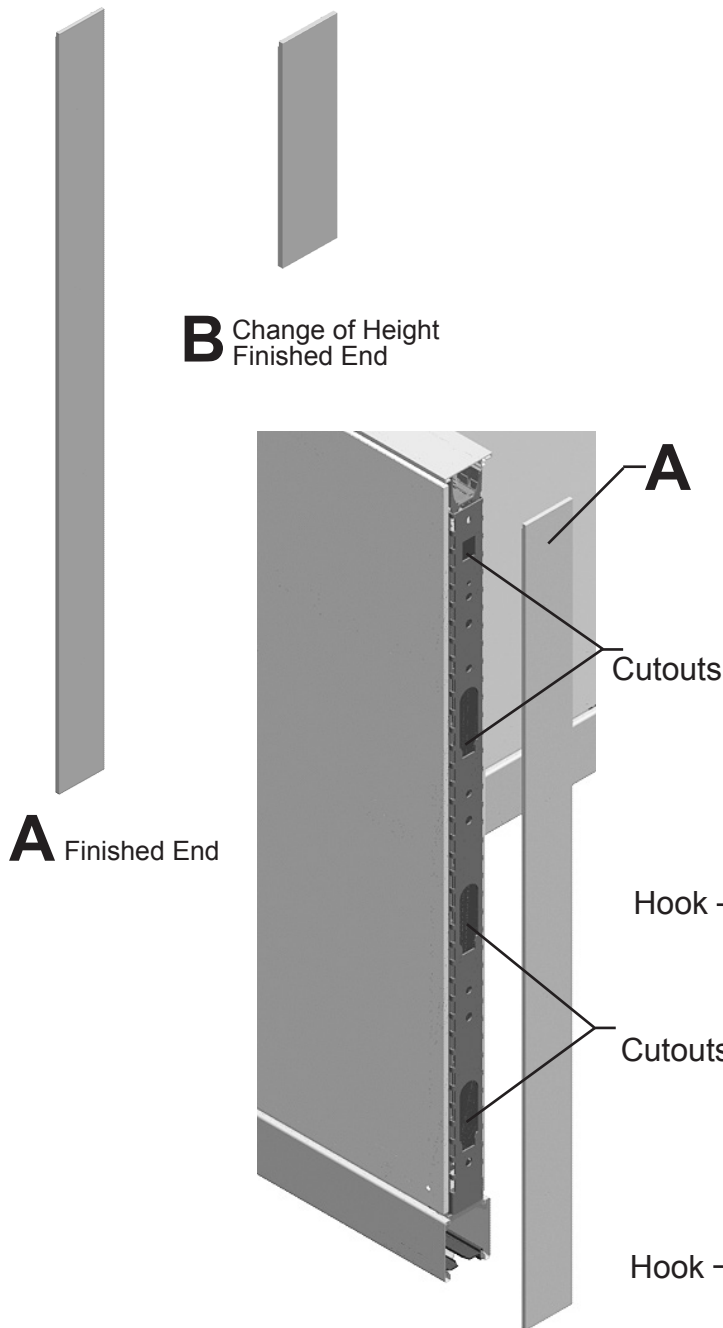



Assembly Instructions:

Finished End:

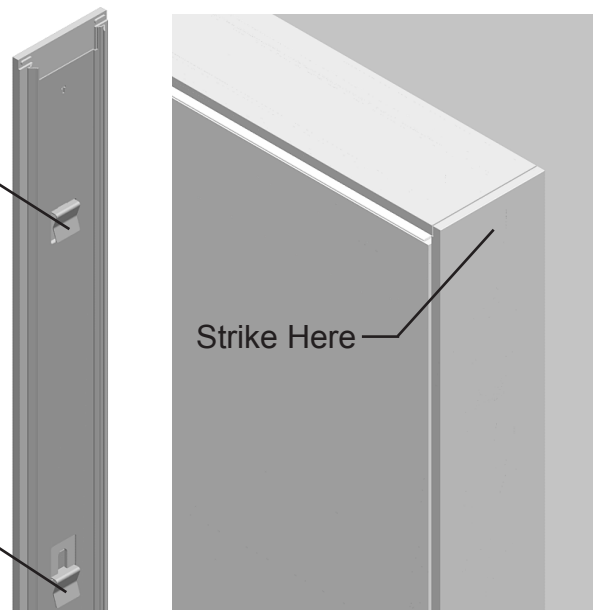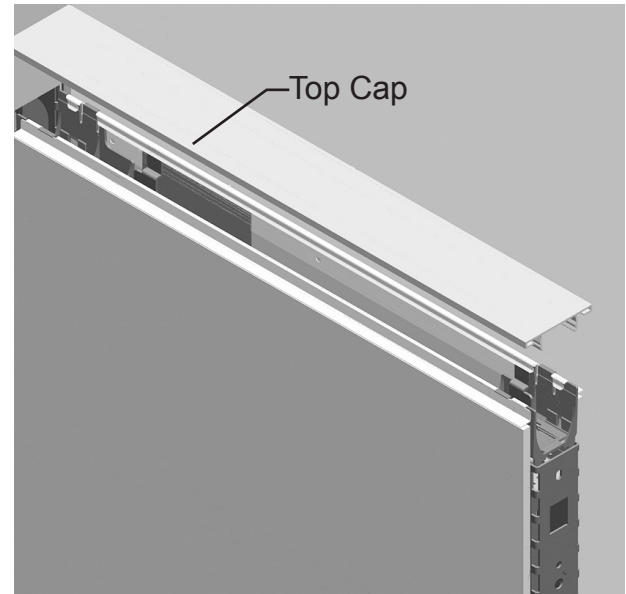

1. Install Top Cap onto top of frame.
2. Insert Hooks on back of Finished End(A) into Cutouts in frame.
3. Firmly press down on Finished End to fully engage Hooks into Cutouts.
4. Firmly strike top of Finished End with palm of hand to mate End Trim with Top Cap.

Change of Height Finished End:

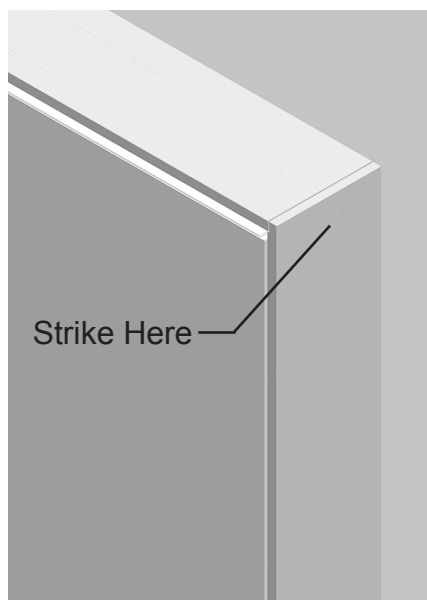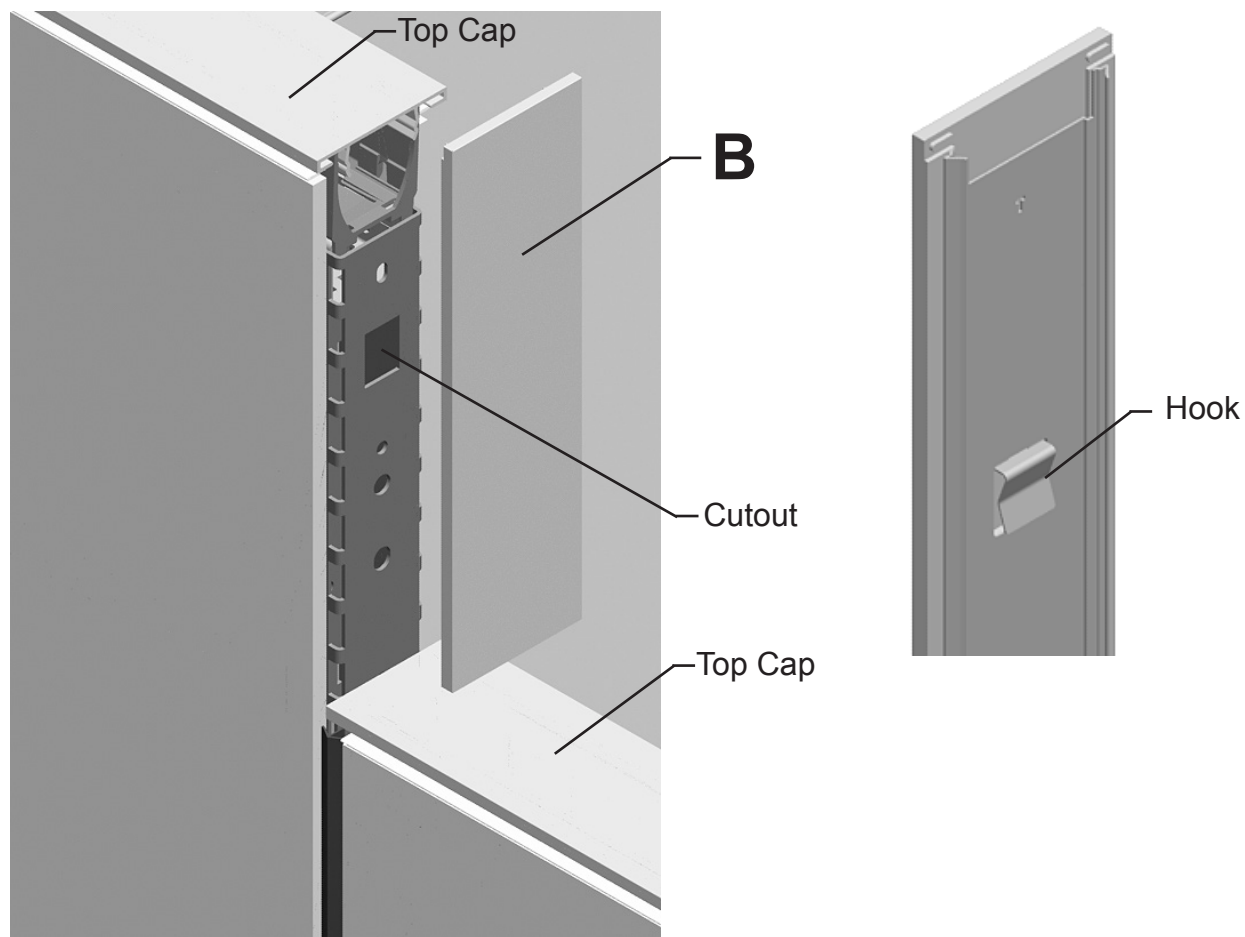

1. After installing Top Caps on adjacent frames, insert Hooks on back of Change of Height Finished End(B) into Cutouts in Frame.
2. Firmly press down on Change of Height Finished End to fully engage Hooks into Cutouts.
3. Firmly strike top of Finished End with palm of hand to mate Finished End with Top Cap.

Disassembly for Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse the above installation steps.