





Canvas Office Landscape® Interiors Door Lock Installation and Disassembly for Recycling Instructions

Parts Included:

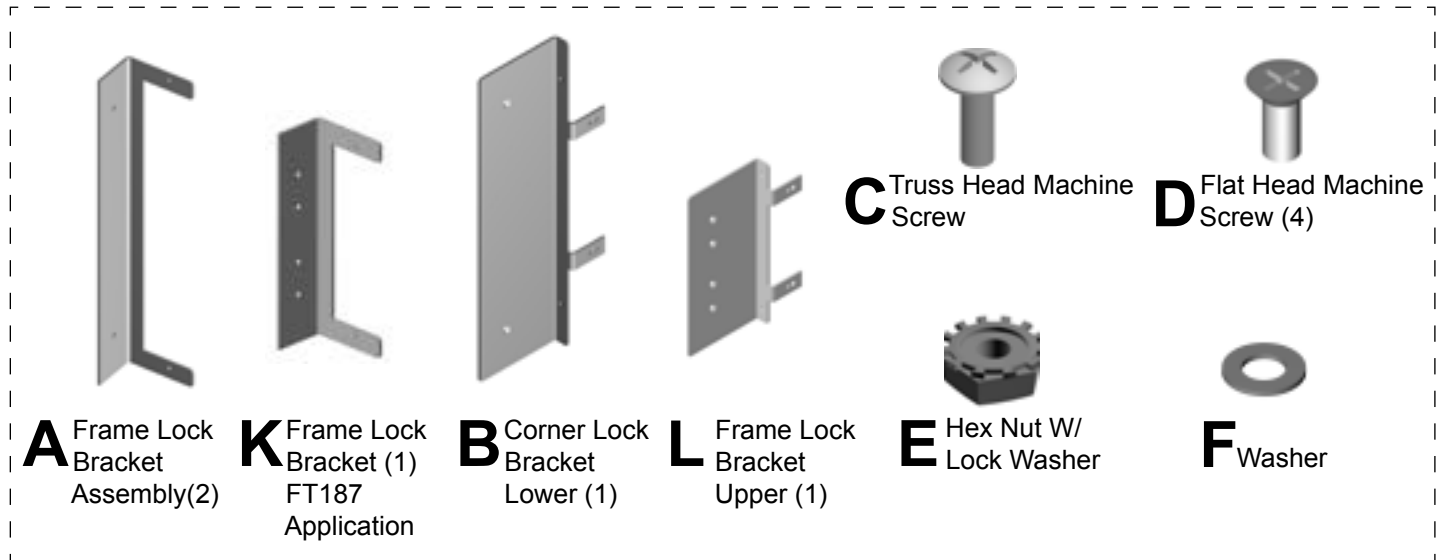

Hardware Pack

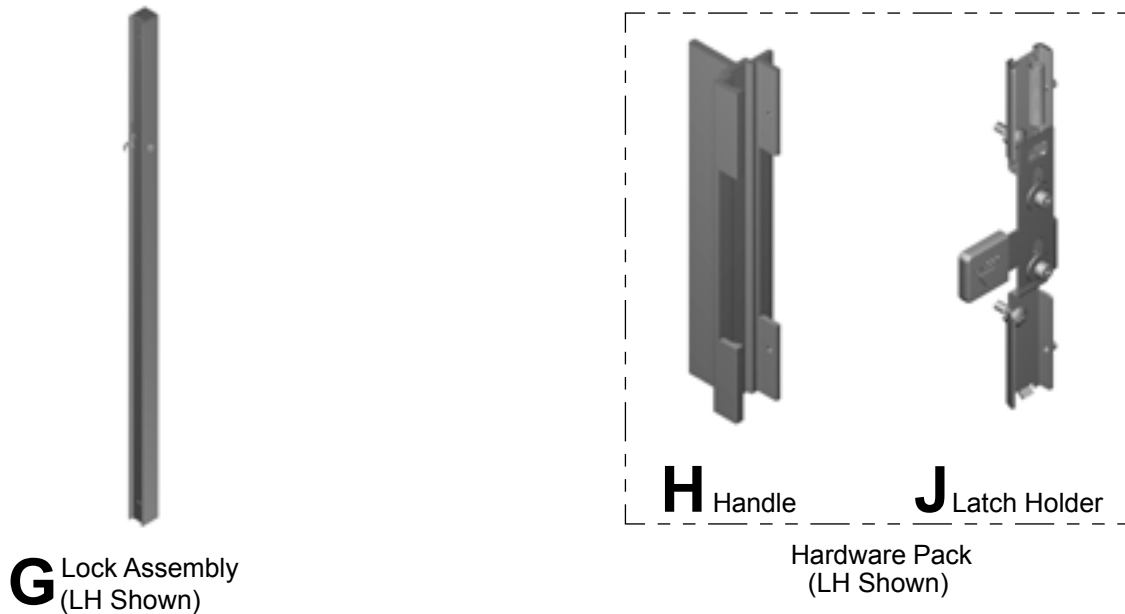

Tools Needed:




HermanMiller

Part no. 1bcky b rev C.

© 2016 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
© Herman Miller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

Inline Installation Steps:- Cladding should be installed prior to lock

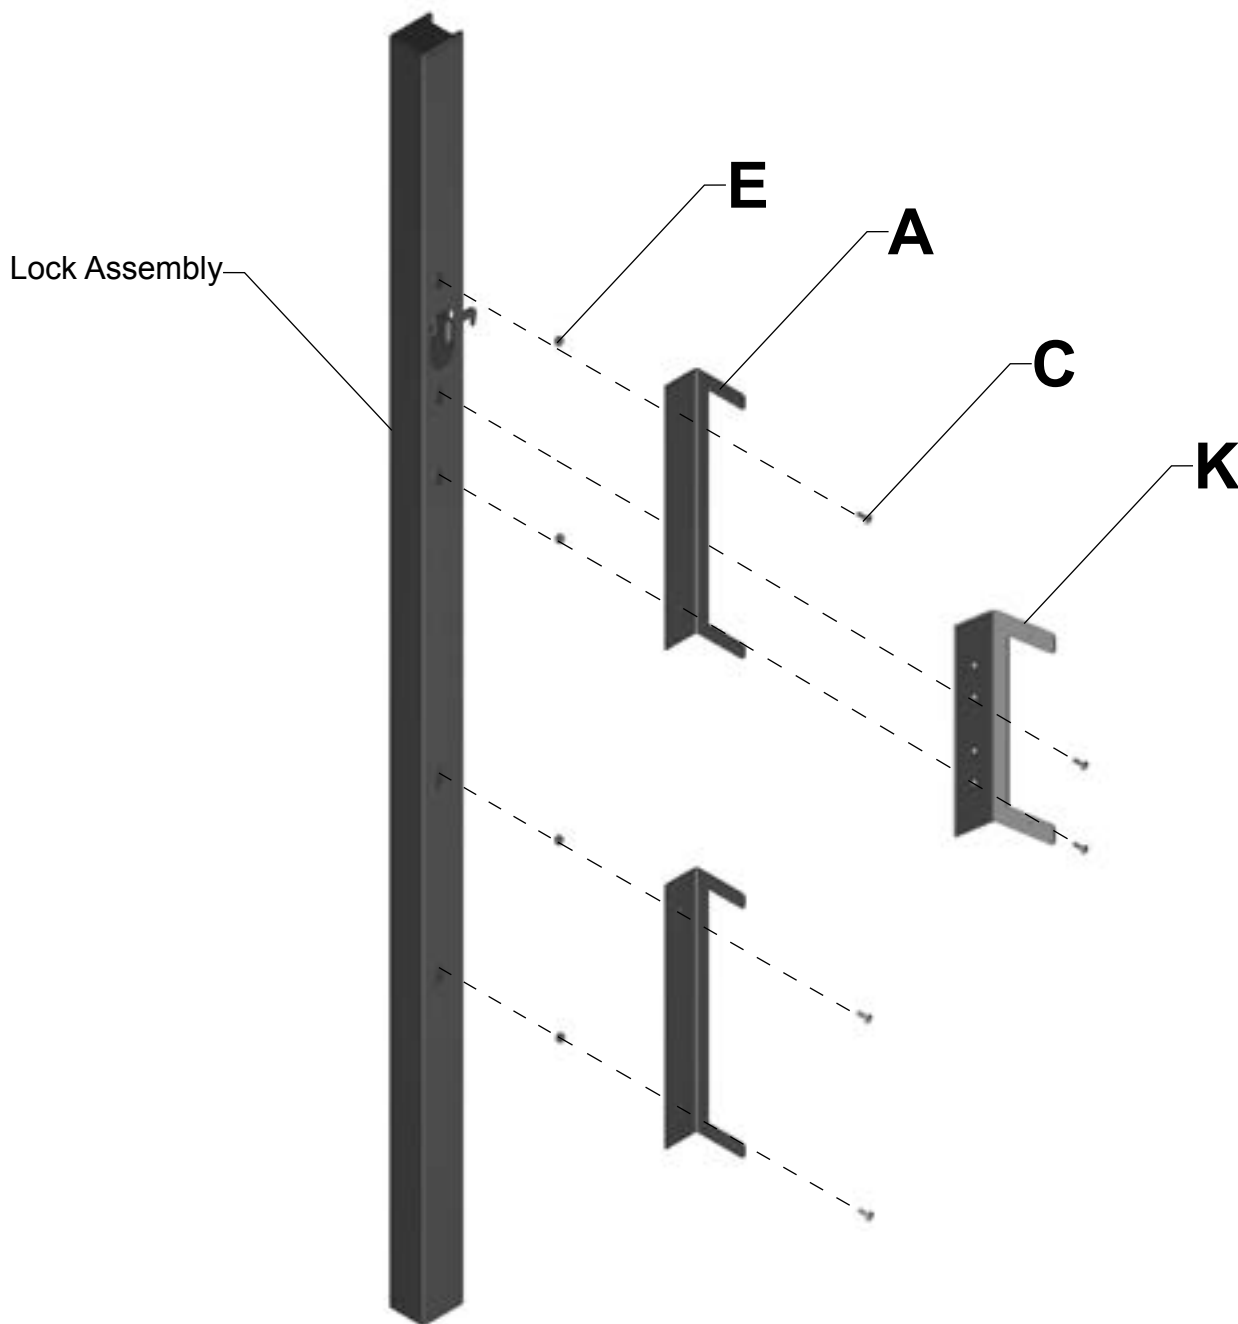

1. Install Mounting Brackets (A) onto Lock Assembly as shown using 4 Hex Nuts W/ Lock Washer (E) and 4 truss Head Screws (C).


Note:

A. Top bracket for standard application.

K. Top bracket for FT187 application.


HermanMiller

Part no. 1bckyb rev C.

© 2016 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
©  HermanMiller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

Note: Omit Top Washer on Short Bracket.

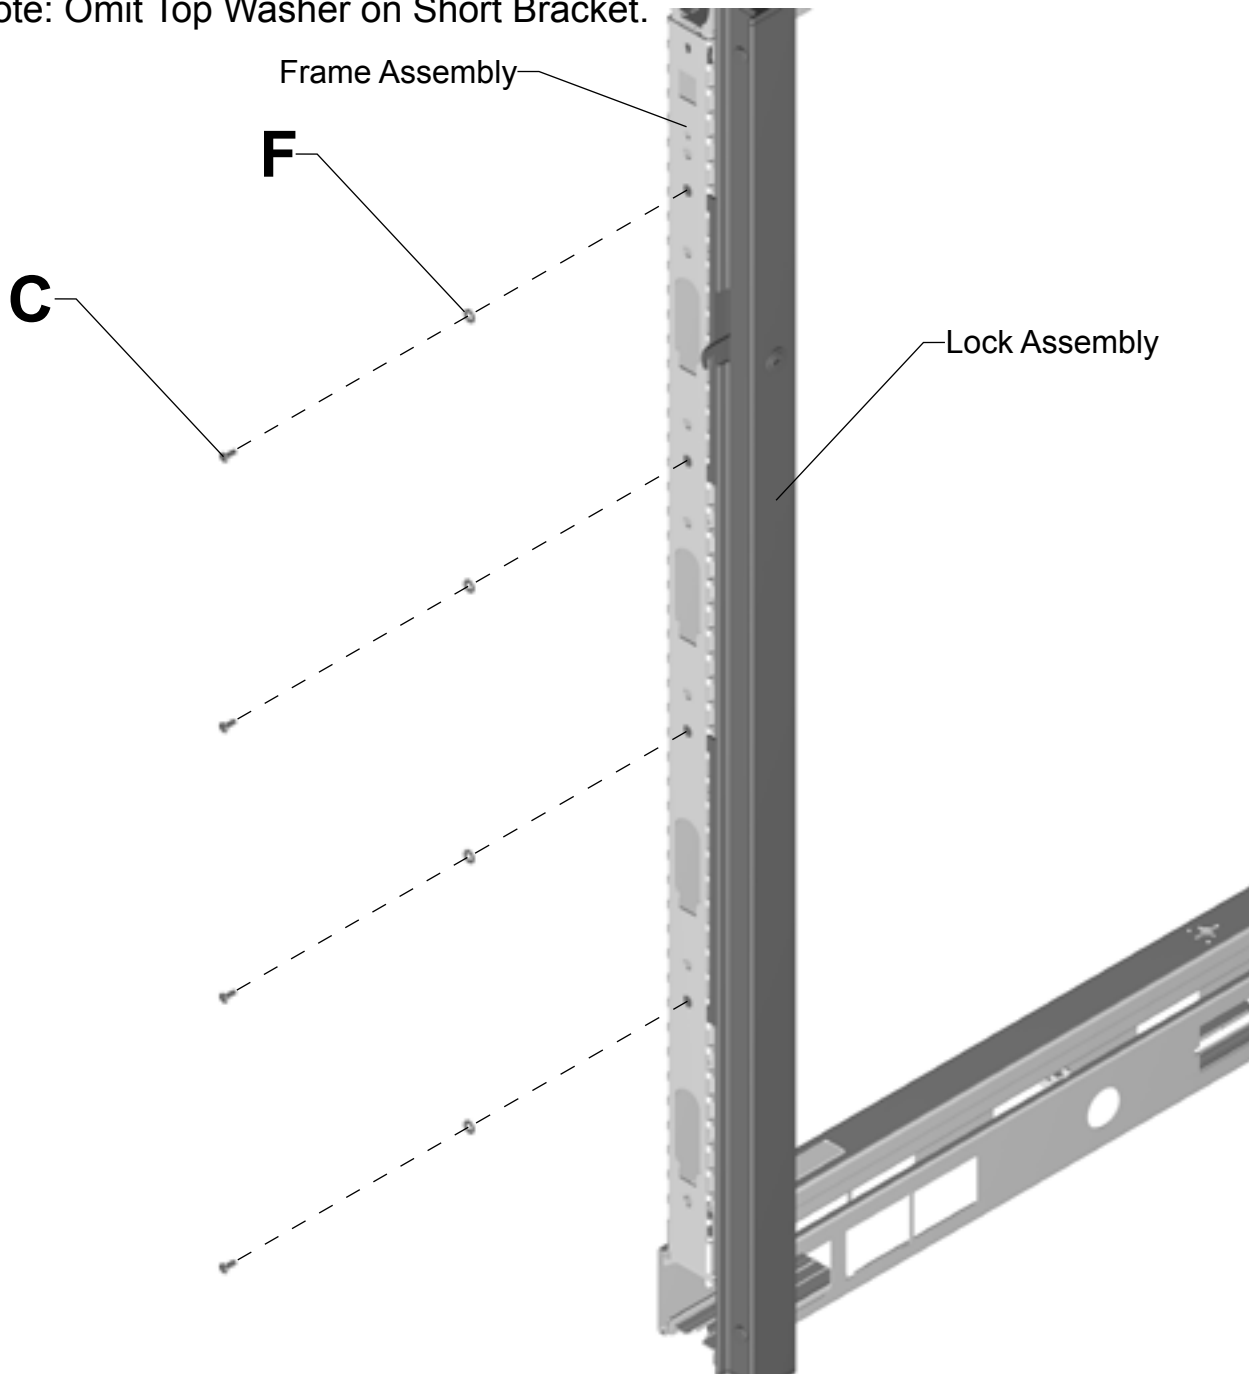


2. Insert Brackets into Frame Slots and Secure using 4 Washers (F) for Long Brackets and 3 Washers (F) when using Short Bracket and Truss Head Screws (C).

3. Install Cladding and finished end.


HermanMiller

Part no. 1bcky rev C.

© 2016 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
©  Herman Miller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.


Installing Lock Housing on Corner Connector Cover:

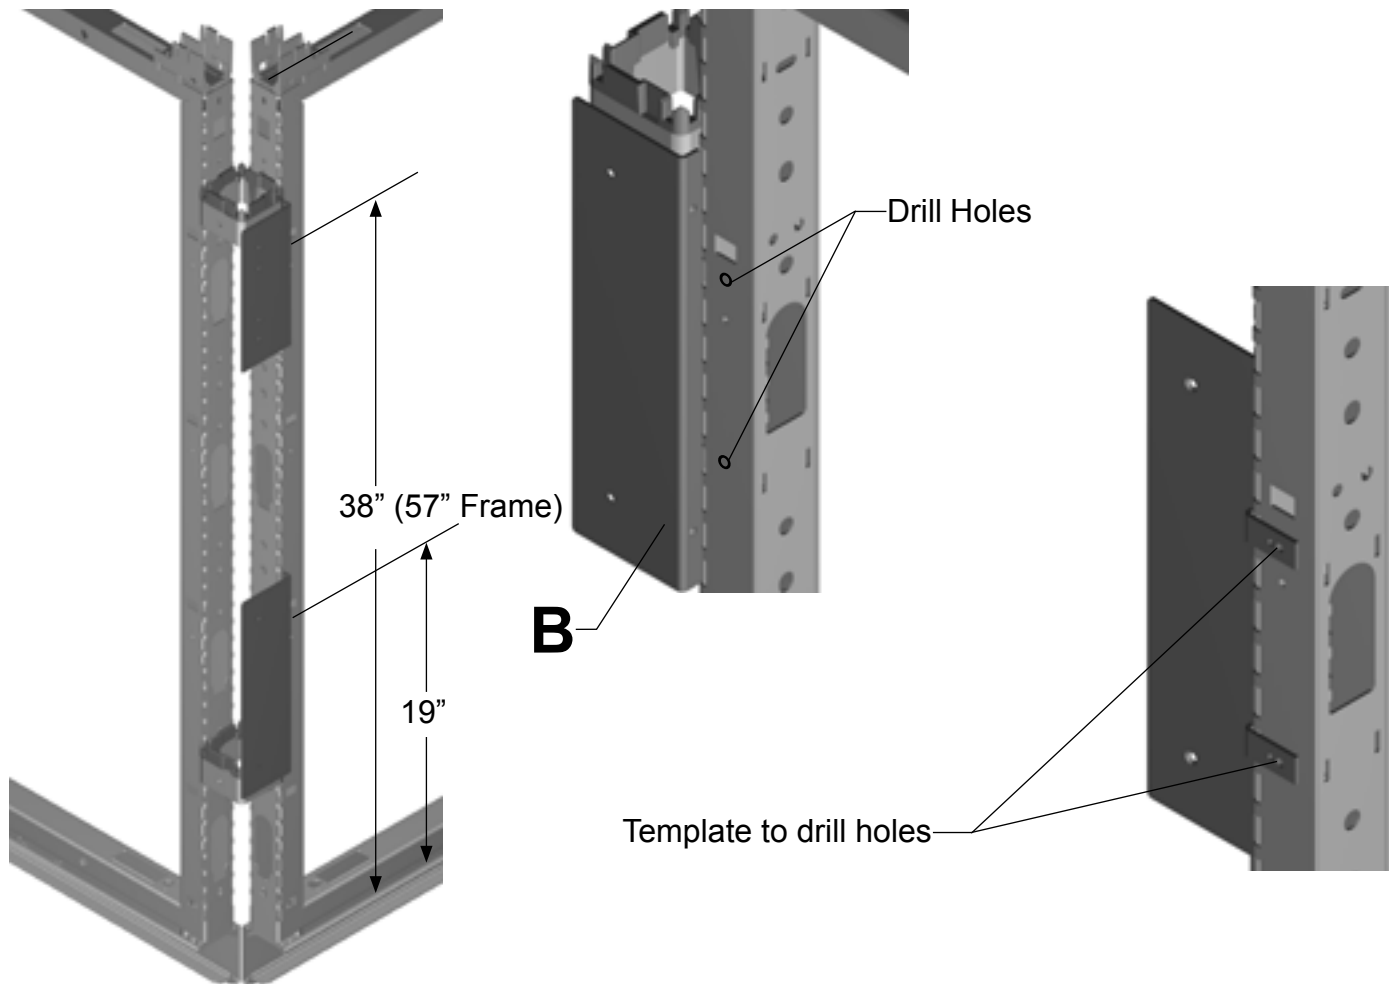

Note: The measurement will be changed based on the height of the frame, 52" for 68" frame and 41" for 57" frame.

1. Remove Cladding, connector cover should be installed prior to the lock attachment if already installed.
2. Position Lock Bracket Assembly (B) against side of Frame as shown.
3. Measure from bottom of Frame to top of Lock Bracket Assembly Tab 38" for 57" Frame, 49" For 68" Frame.
4. While holding Bracket tight against Frame and Positioned on slot, use as template to drill 4 mounting holes. Use thru holes not threaded holes on Bracket.


Corner Installation Steps:

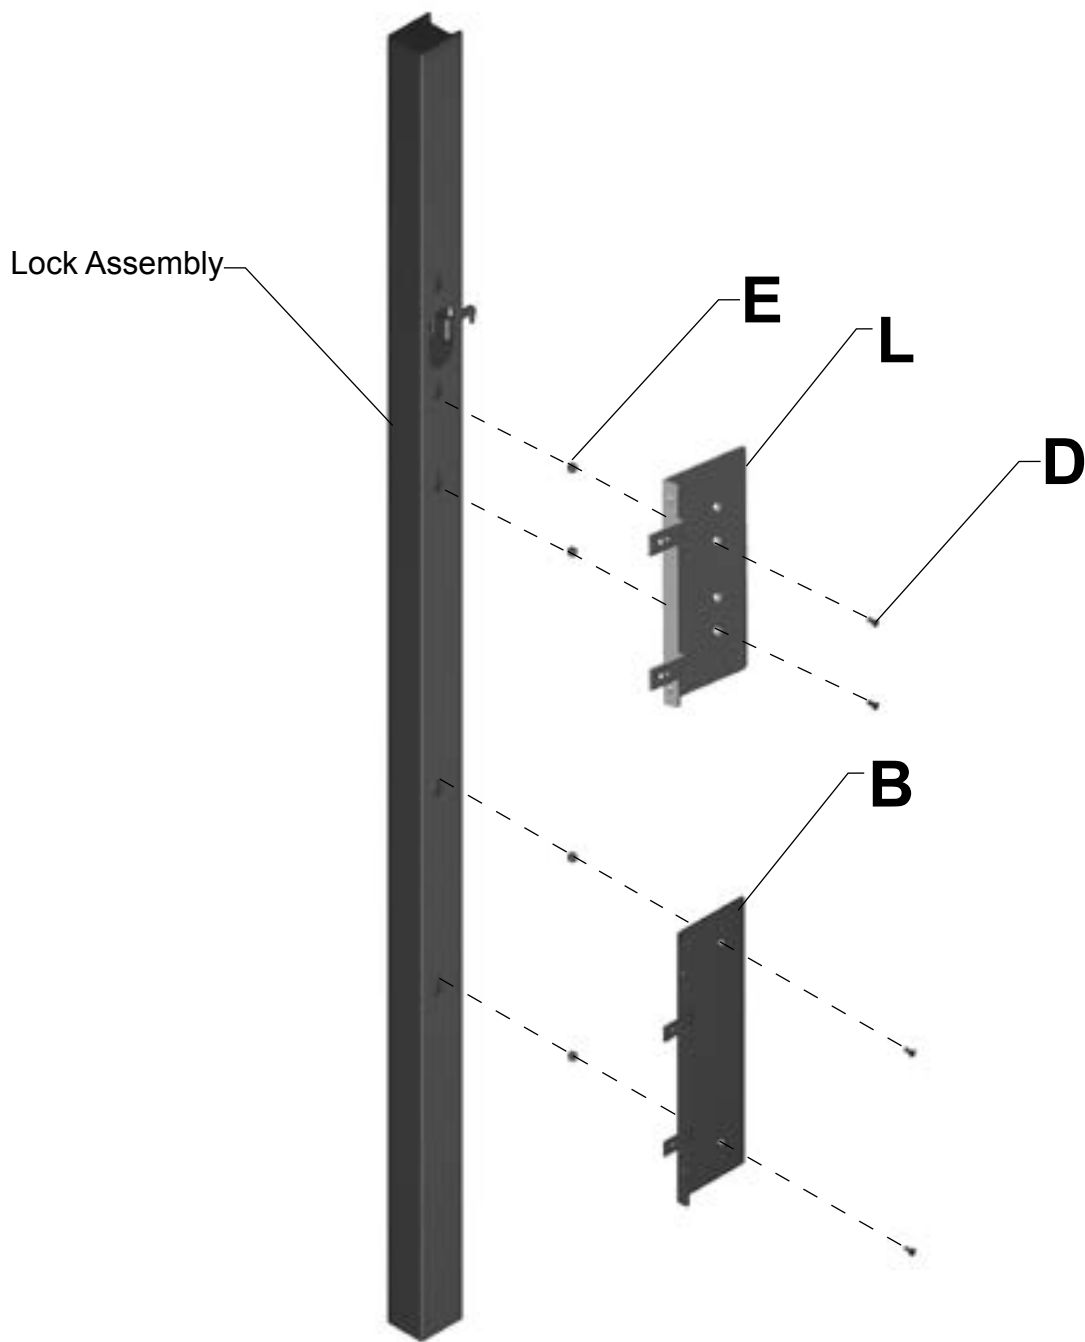


1. Install mounting Brackets (B) onto Lock Assembly as shown using 4 Hex Nuts W/ Lock Washer (E) and 4 Flat Head Screws (D).

HermanMiller

Part no. 1bckyb rev C.

© 2016 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
©  HermanMiller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.


Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

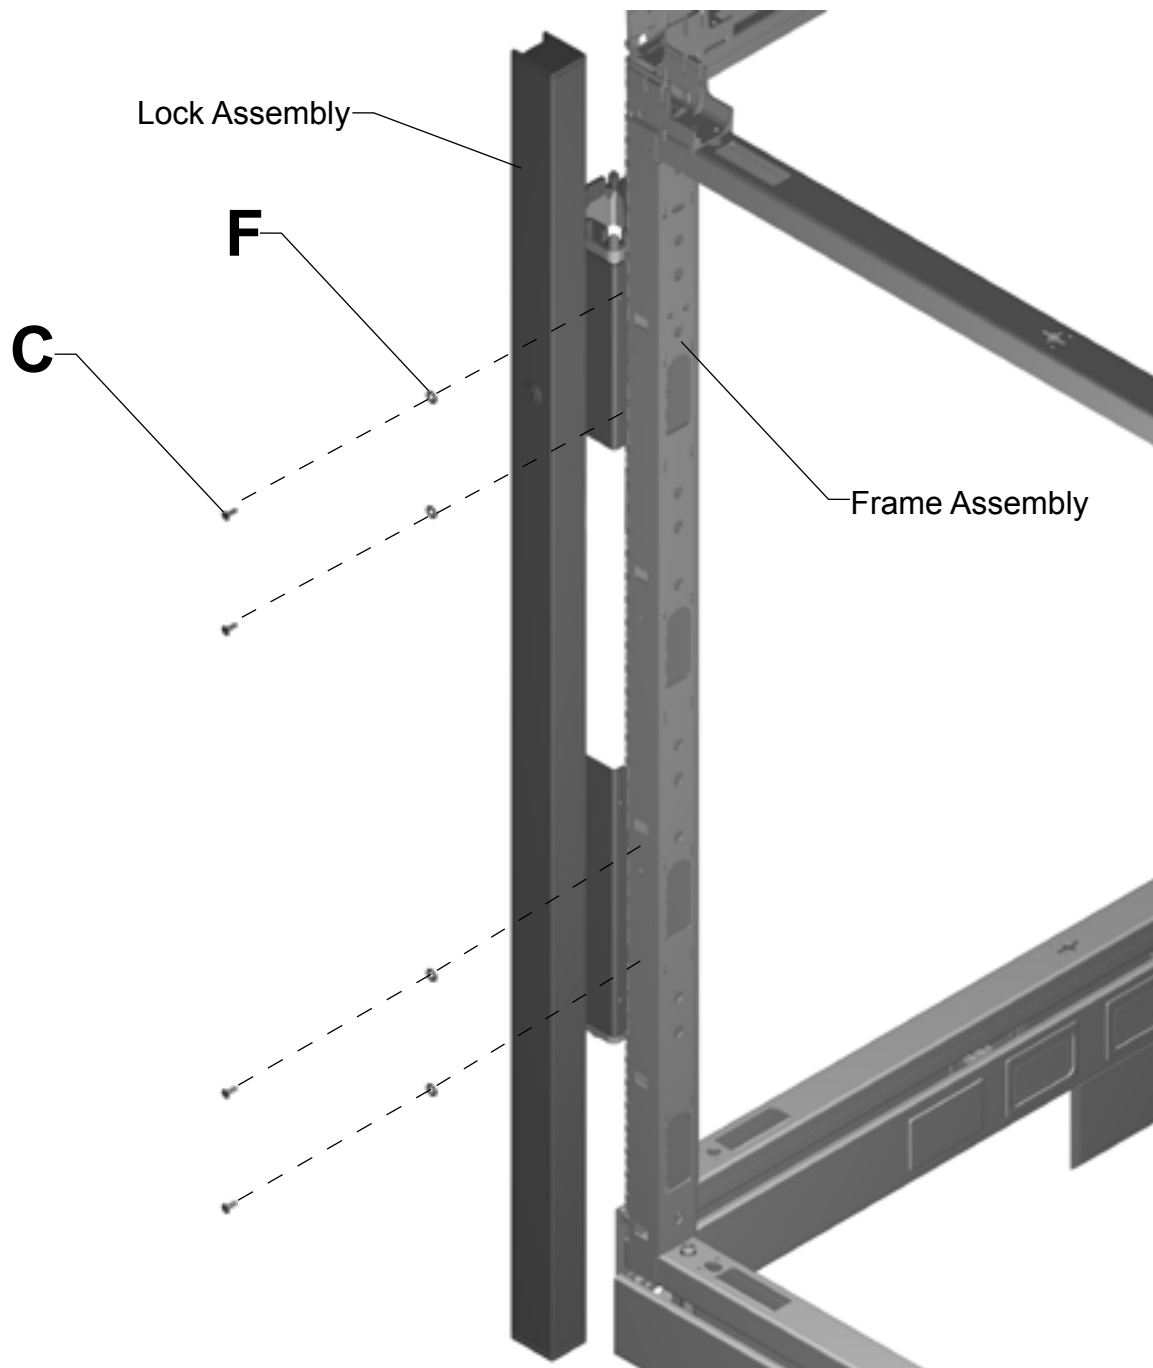

2. Insert Brackets into Frame Slots and Secure using 4 Washers (F) and Truss Head Screws (C).



HermanMiller

Part no. 1bckyb rev C.

© 2016 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
©  HermanMiller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.




Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

Installing Door Handle:

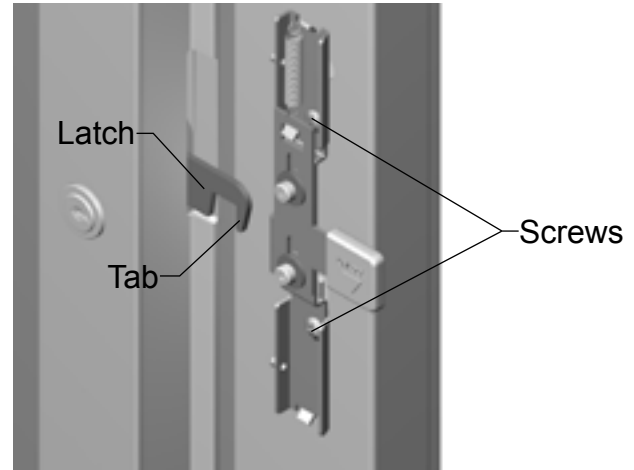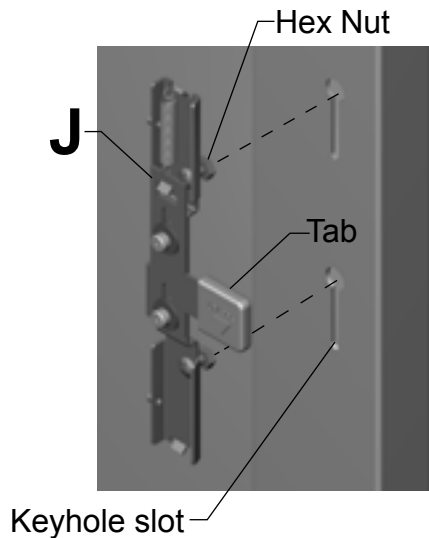

1. Insert Hex Nuts on Latch Holder (J) into Keyhole Slots in door and slide down to bottom of slot. Do not tighten.

2. Close door and lock.
3. Slide Latch Holder up until Tab fully engages with Latch. Tighten Screws (from inside office).

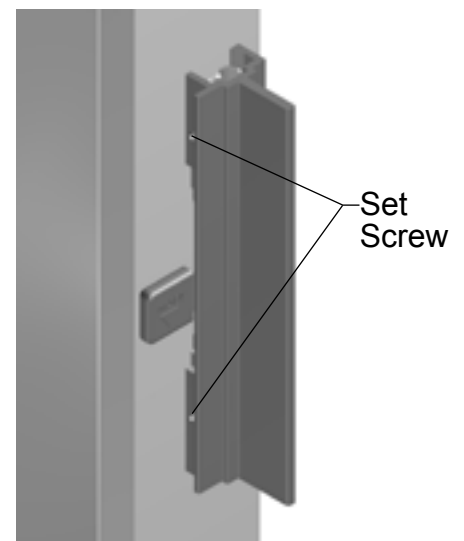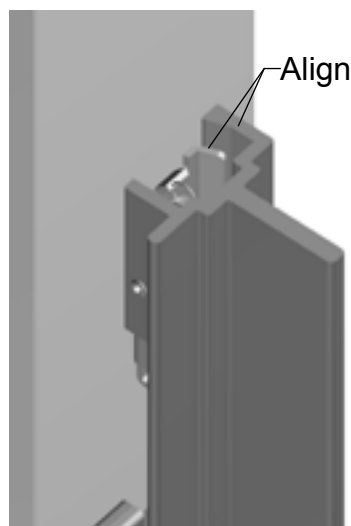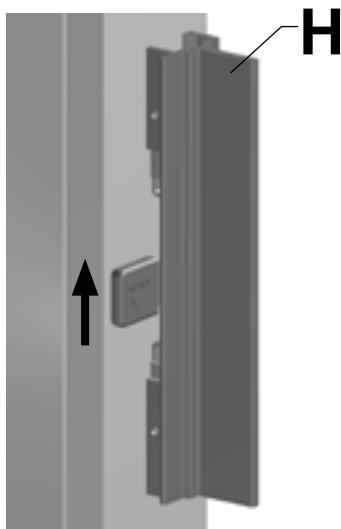

4. Place Handle (H) onto middle of Latch Holder. Slide Handle up until top of Ribs on back of Handle align with top edge of Latch Holder.

5. Secure Handle to Latch with 2 Set Screws. Do not over tighten.

Disassembly and Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse the steps.