

HermanMiller

Canvas Channel Architectural Finished End Installation and Disassembly for Recycling Instructions




How to assemble your architectural finished end

Assembly Instructions:

Finished End:

Step 1



- 1.1 Install top cap onto top of frame.
- 1.2 Insert hooks on back of finished end into cutouts in frame.
- 1.3 Firmly press down on finished end to fully engage hooks into cutouts.
- 1.4 Firmly strike top of finished end with palm of hand to mate end trim with top cap.

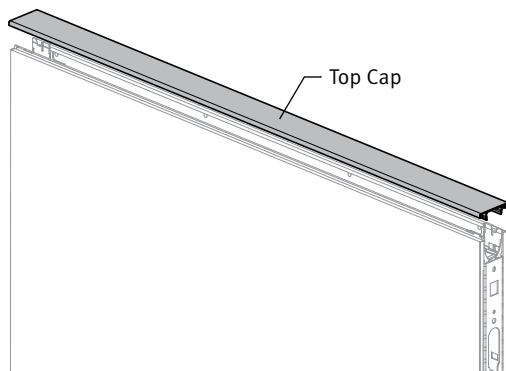

Parts Included



Finished End

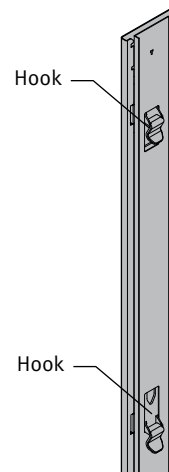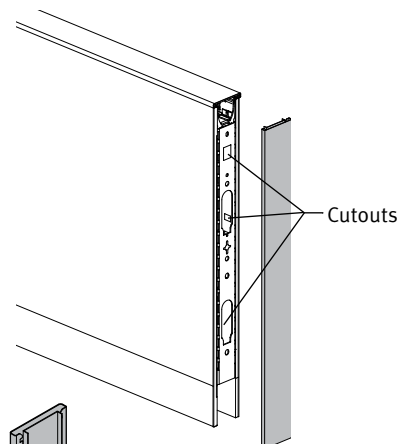

Strike Here

Disassembly for Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse the above installation steps.

For more information about our products and services please visit us at
hermanmiller.com or call (800) 851 1196.

©2017 Herman Miller, Inc., Zeeland, Michigan Printed in U.S.A. Part No. **1BKTMB – A**