


# HermanMiller

## Overlay™ Trellis Installation and Disassembly for Recycling Instructions




### Parts Included

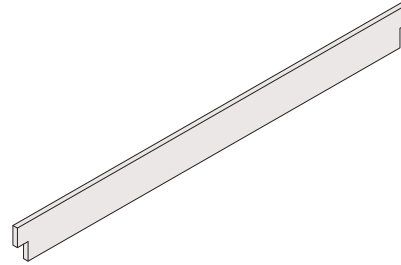

Trellis

## How to assemble your Trellis.

### Tools Required

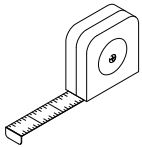

Tape Measure





Safety Glass

### Step 1

1.1 Identify which end of Trellis is needed for proper placement. Position Trellis onto Beams.



Full Width Spanner End

Intermediate or Shared  
Spanner End

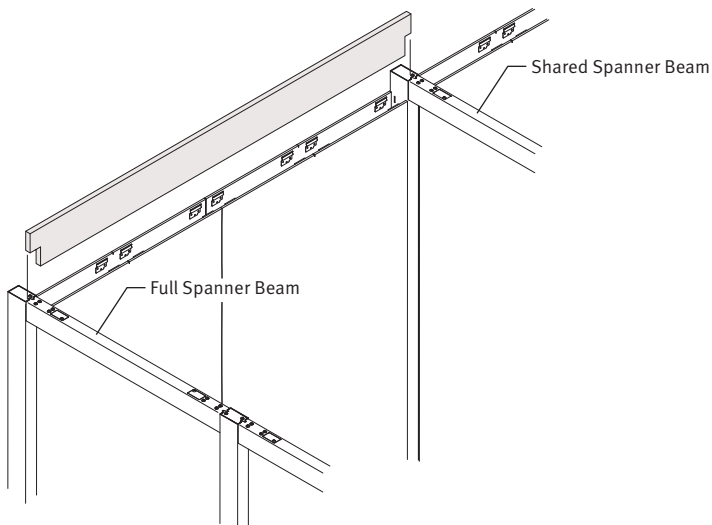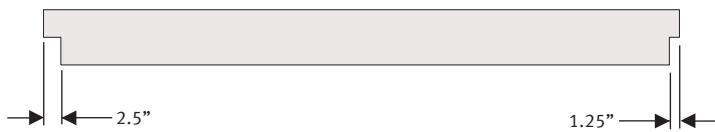


Full Spanner with Door  
Track End

Intermediate or Shared  
Spanner End

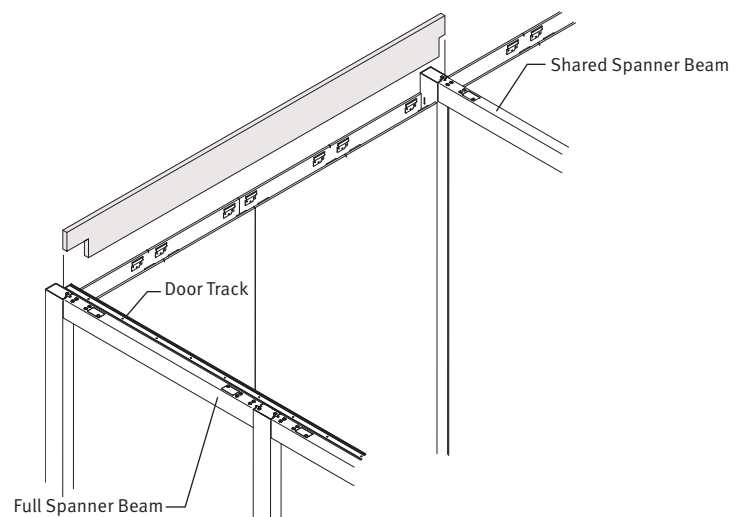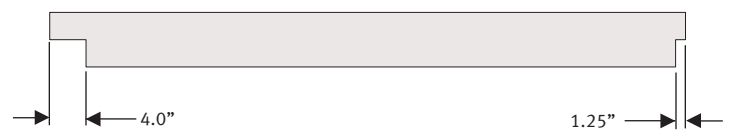

## Step 2

- 2.1 Position first Trellis 5" in from outer face of performance wall cladding. This should be against fastener on top of spanner.
- 2.2 Continue placing trellises along top of spanner with 11.25" gap between.
- 2.3 Adjust as needed.

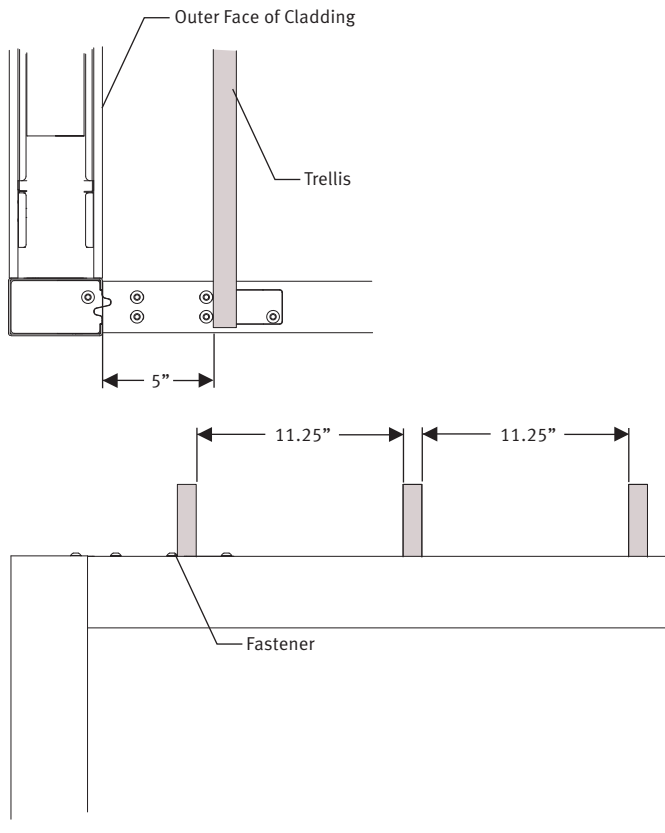

## Disassembly and Recycling:

### Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse the above installation steps.