




Canvas Office Landscape™ Display Wall, Technology Module Installation and Disassembly for Recycling Instructions


Parts Included:

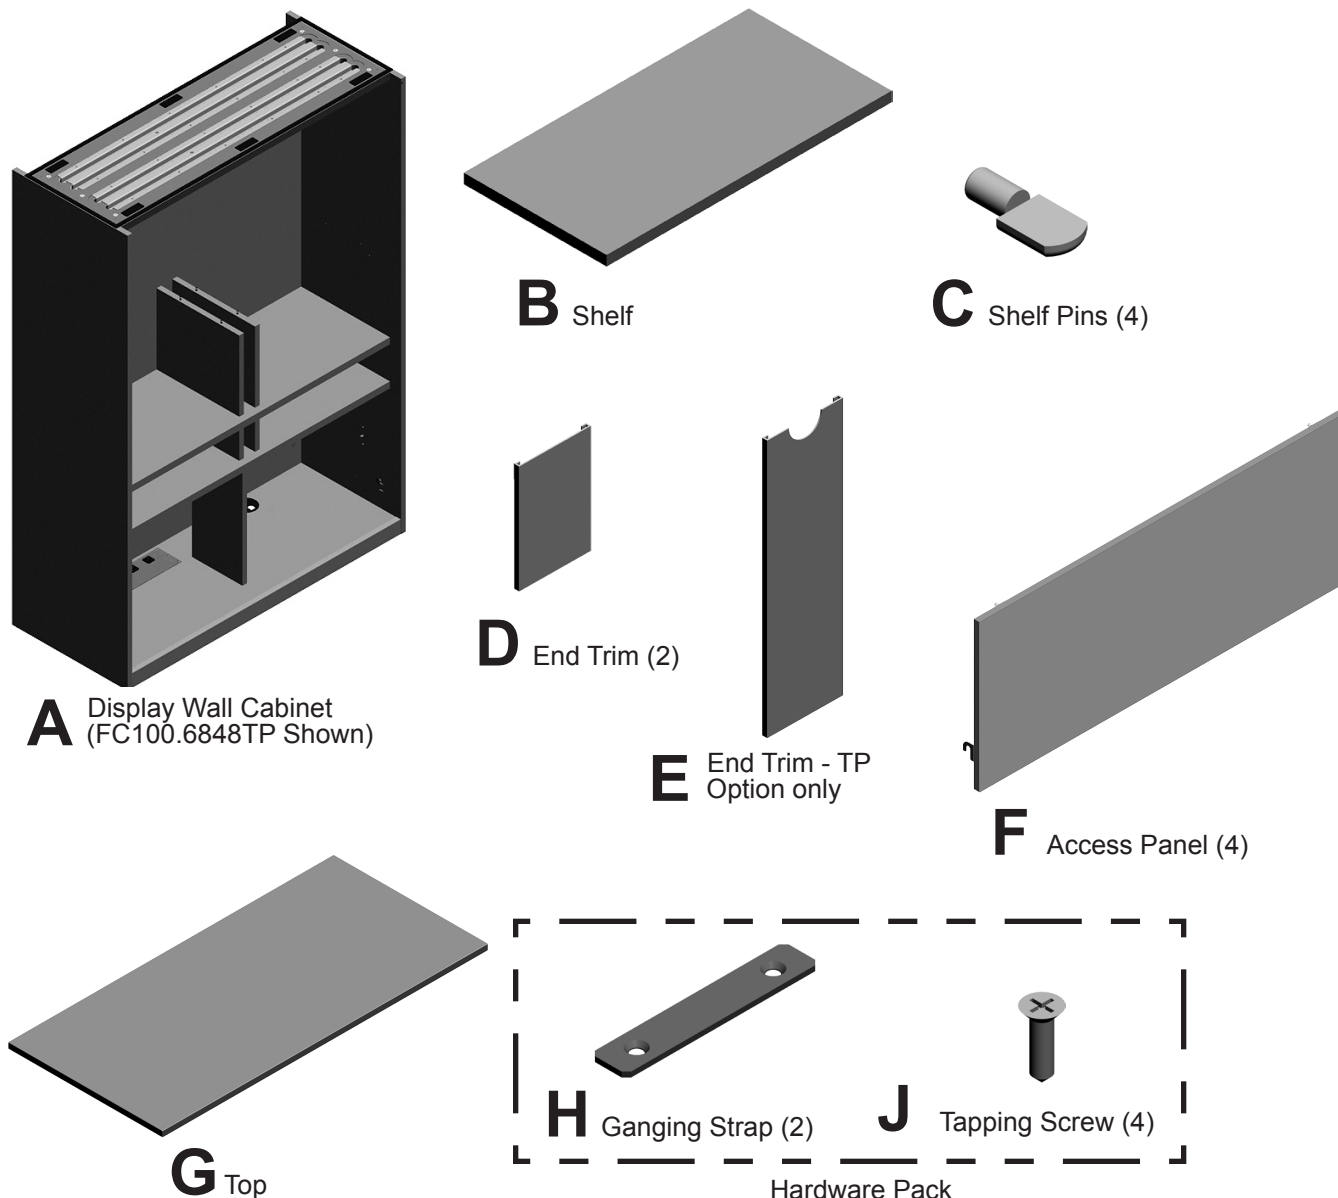


Tools Required:



Pliers

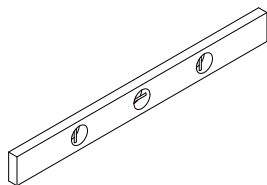


Level

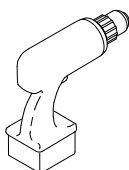

Power Driver



#2 Phillips Bit

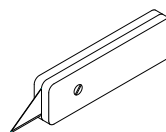

Knife



Safety Glasses

HermanMiller






Part no. 1b8g9k rev B.

© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
™, ®, Herman Miller, Canvas Office Landscape are among the trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

Assembly Instructions:


FC100. with Power Cord:

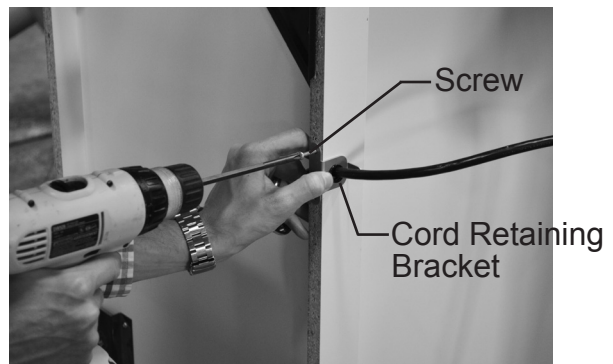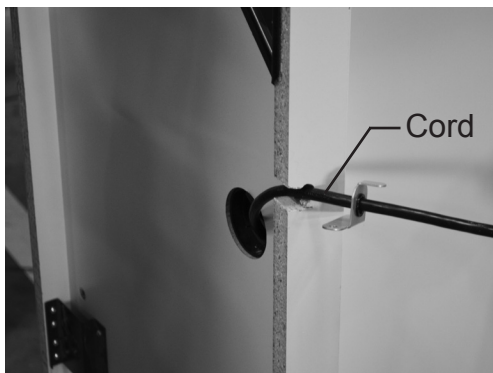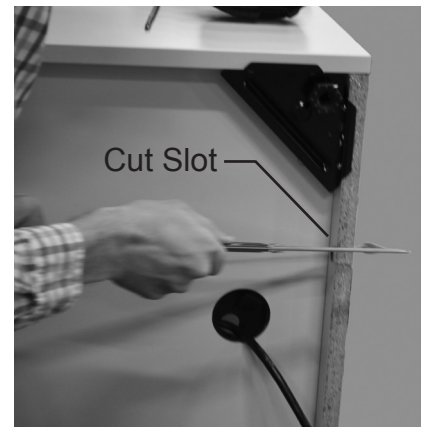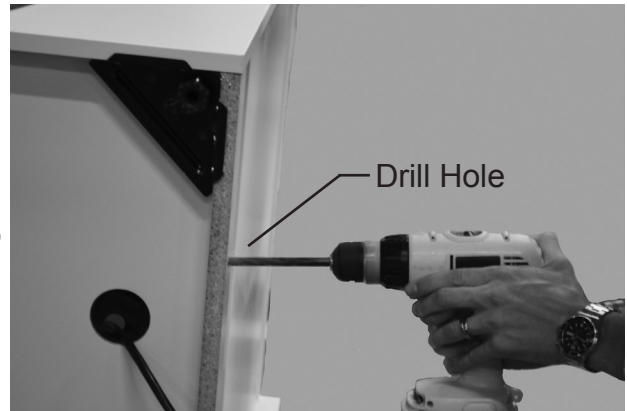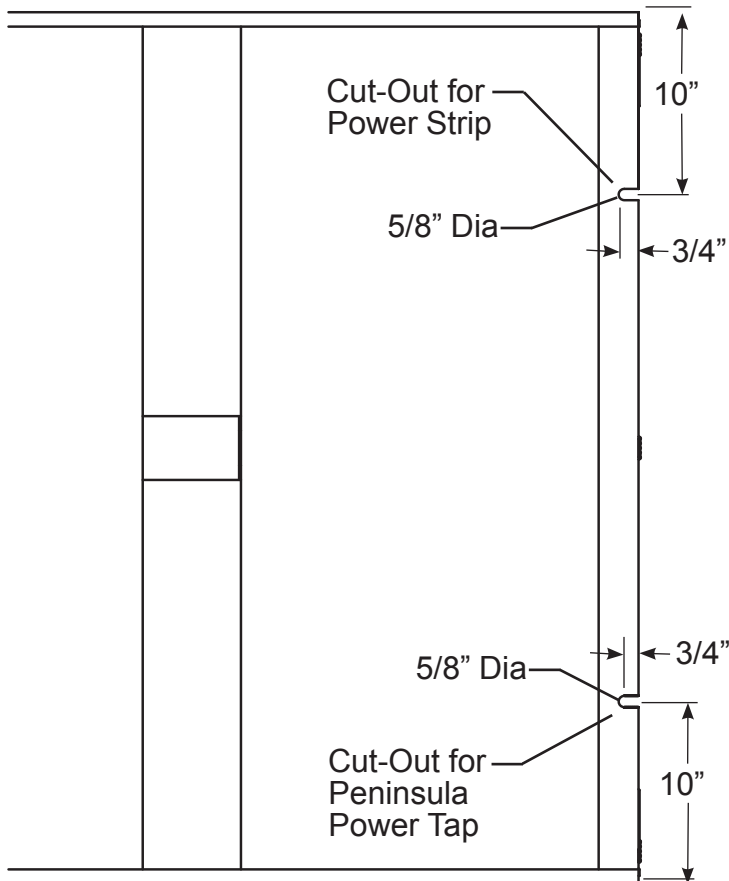



- Lay Display Wall/Peninsula assembly on side.
- Measure over 3/4" from bottom and in 10" from each side for cord exit locations.
- Drill 5/8" hole at each location.
- Cut slot to hole.
- Place cord in slot.
- Secure Cord Retaining Bracket to Display Wall with 2 Screws.
- Set Display Wall/Peninsula assembly upright.

HermanMiller



Part no. 1b8g9k rev B.

© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
™  Herman Miller, Canvas Office Landscape are among the trademarks of Herman Miller, Inc.





Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

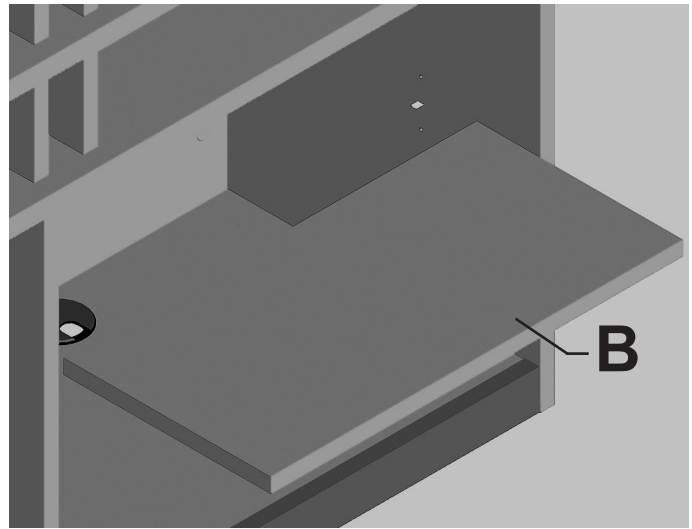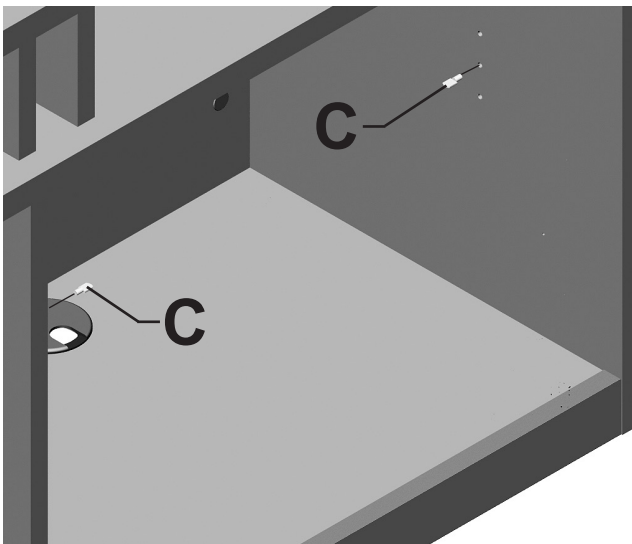

1. Insert Shelf Pins(C) into holes in side panels of cabinet.
2. Set Shelf(B) onto Pins.

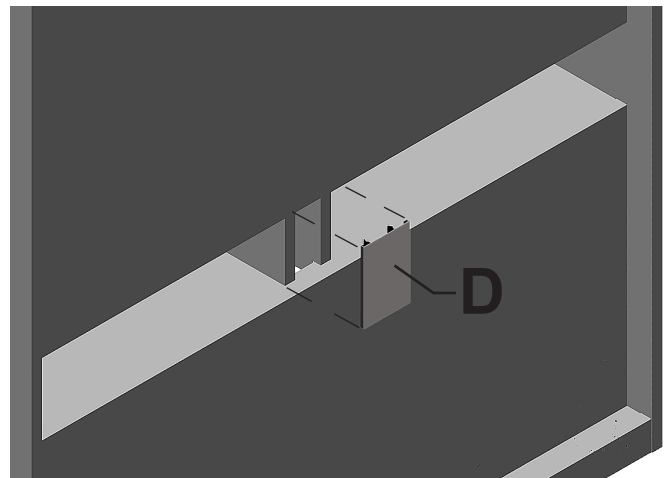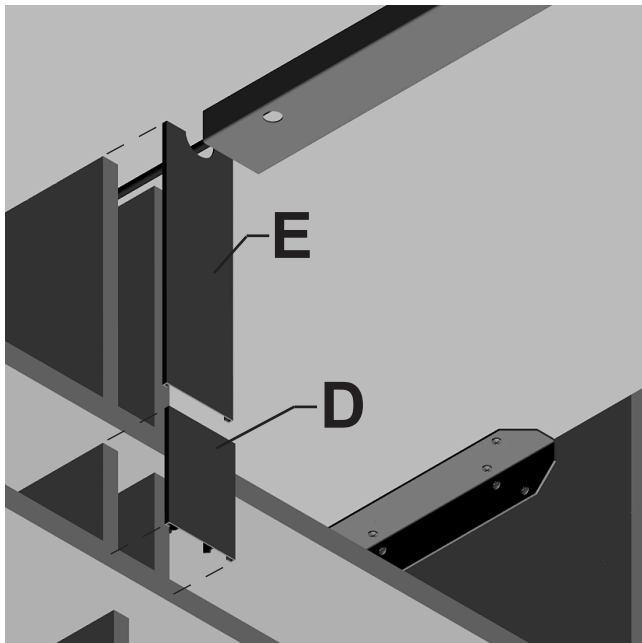

3. After work surface has been installed, press Trim Cover(s)(D,E) onto front of Stanchion Panels.
4. Press Trim Cover(D) onto back of Stanchion Panels.

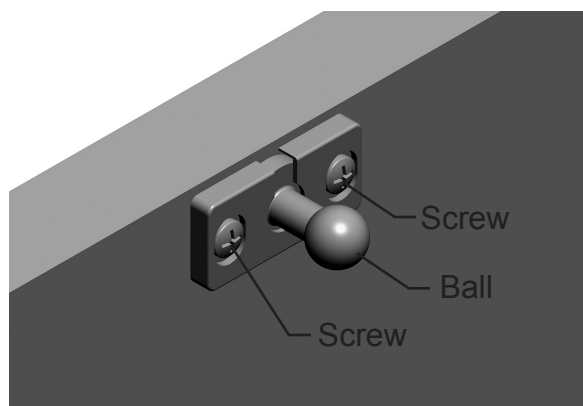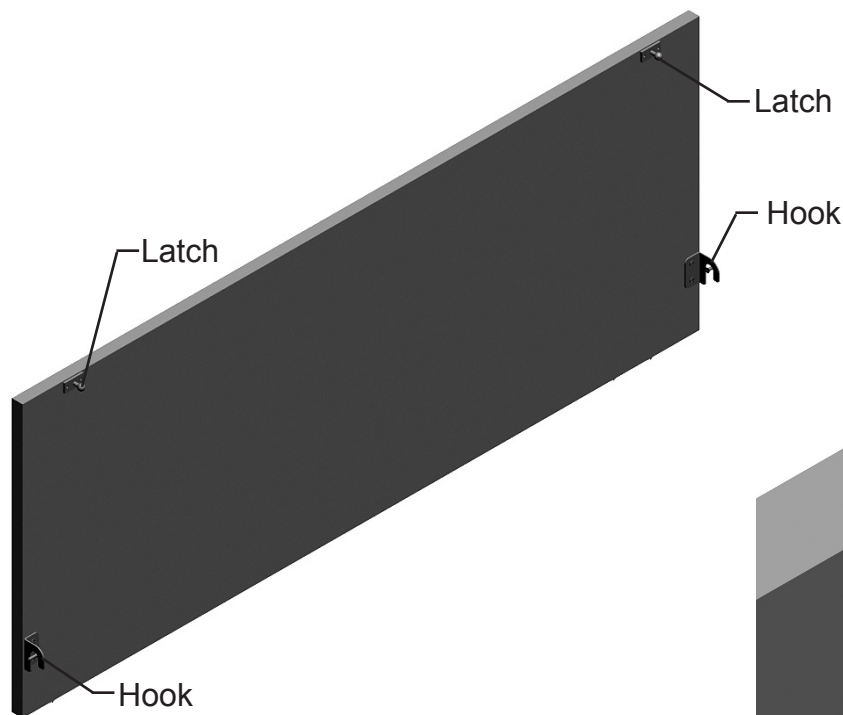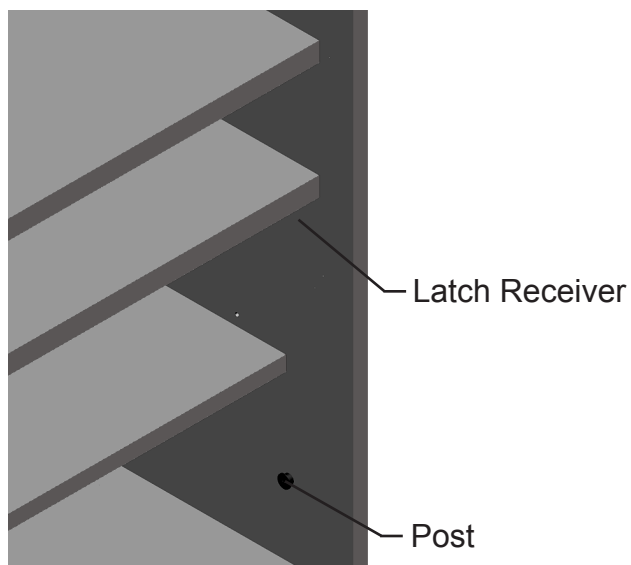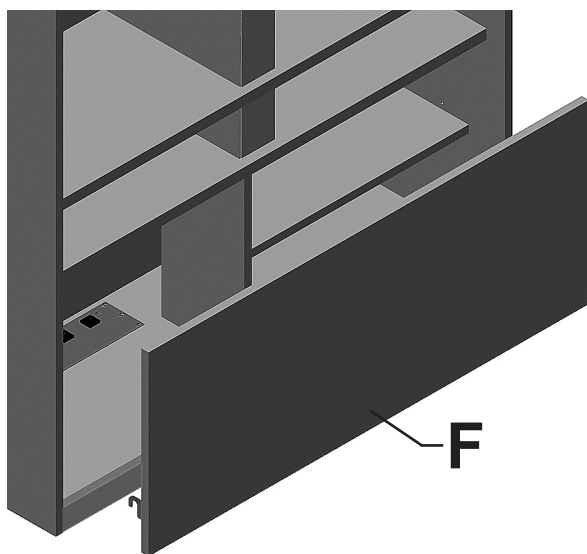

5. Install Access Panel(F) onto Cabinet by engaging Hooks on Panel with Posts on Cabinet. Then push panel in at top to engage Latches. If ball on Latch half does not align with receiver half, loosen Screws on Ball half. Adjust as needed. Tighten Screws.

CANVAS MULTI-OUTLET INSTALLATION

1) CONNECT MULTI-OUTLET ASS'Y TO BUILDING POWER SOURCE
ACCORDING TO THE DIAGRAM IN FIG. 1

RATED FOR CONNECTION TO A GROUNDED 120VAC, 1PH, 20 AMP, (15 AMP CANADA) BRANCH CIRCUIT

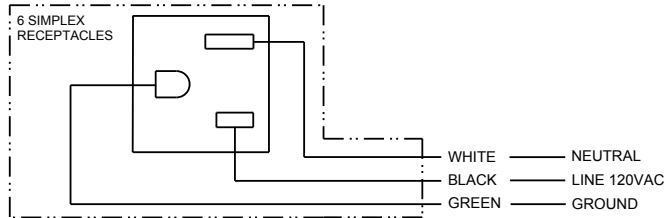


FIGURE 1


NOTICE :

CONNECTIONS TO BUILDING POWER SOURCE
MUST BE MADE BY A LICENSED ELECTRICAL
CONTRACTOR IN ACCORDANCE WITH NATIONAL,
STATE, AND LOCAL ELECTRICAL CODES.



WARNING

Disconnect power before installation. Failure
to do so can cause electrical shock and
personal injury.

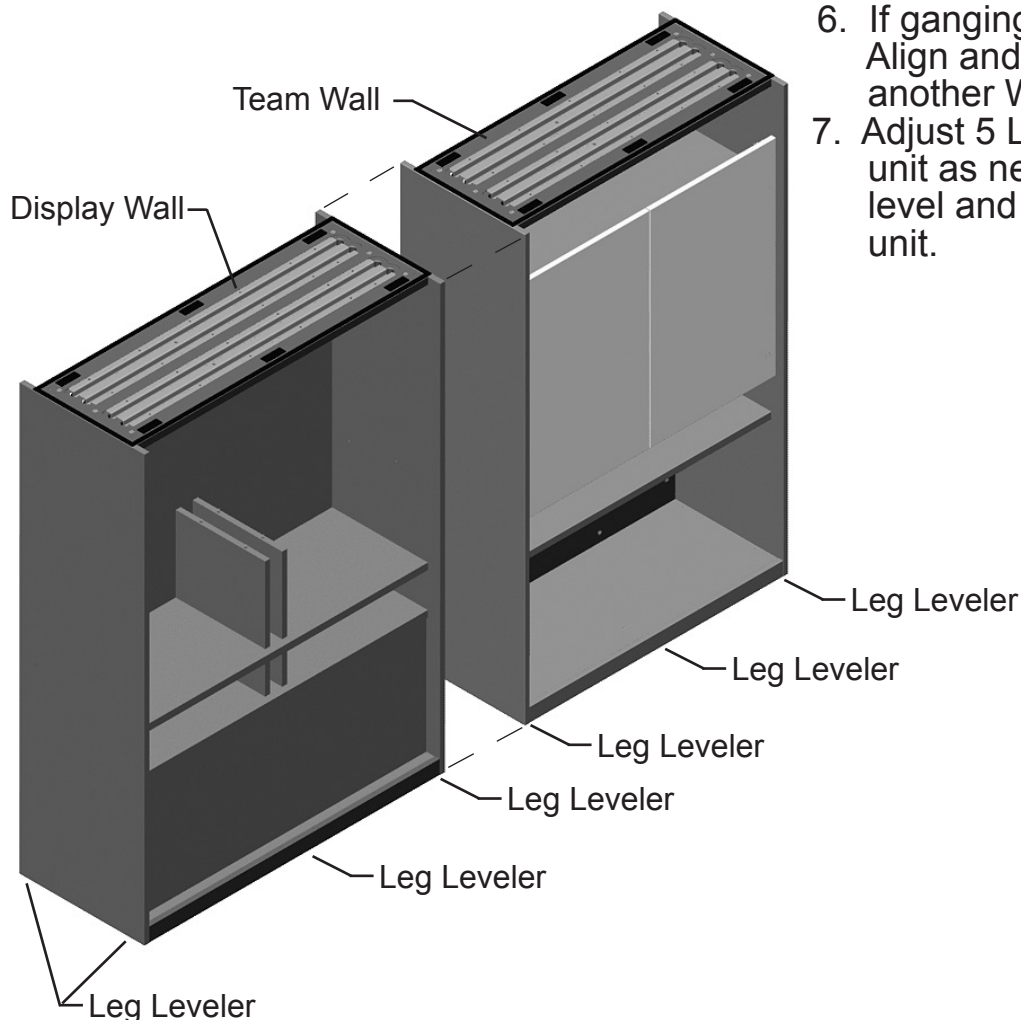


6. If ganging Walls together:
Align and mate Wall to
another Wall.
7. Adjust 5 Leg Levelers per
unit as needed to make unit
level and flush with adjoining
unit.

HermanMiller


Part no. 1b8g9k rev B.

© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
™ Herman Miller, Canvas Office Landscape are among the trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

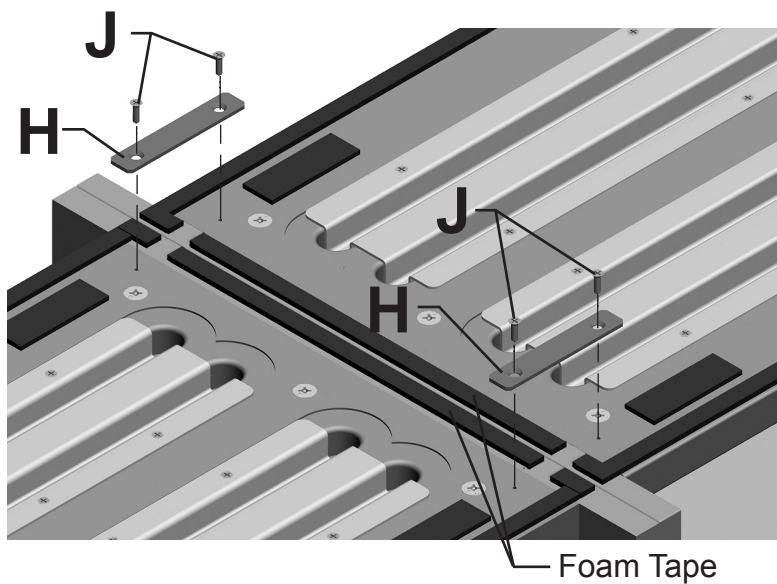

8. Cut away Foam Tape in area where Ganging Strips will be installed.
9. Straddle both units with 2 Ganging Straps(H).
10. Install 4 Tapping Screws(J) into pre-drilled holes.

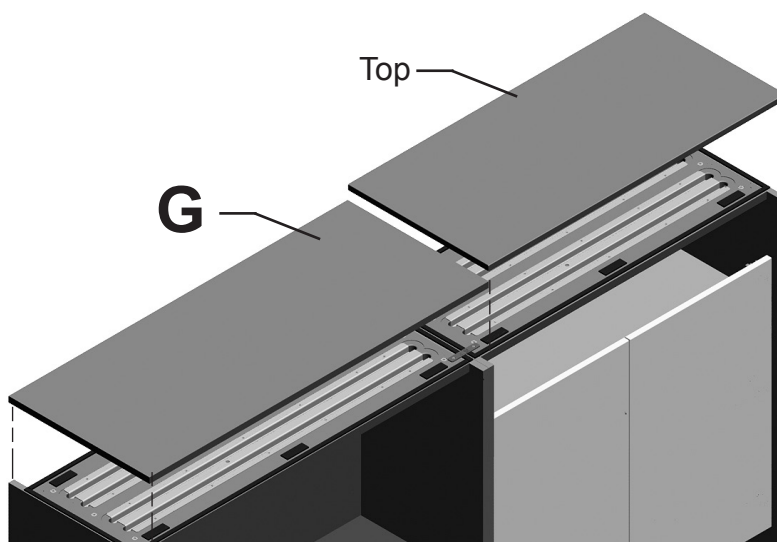


11. Align Tops(G) with units and firmly press into place.

Disassembly for Recycling:


Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.


To disassemble product, reverse steps 11 through 1 and also do the following:

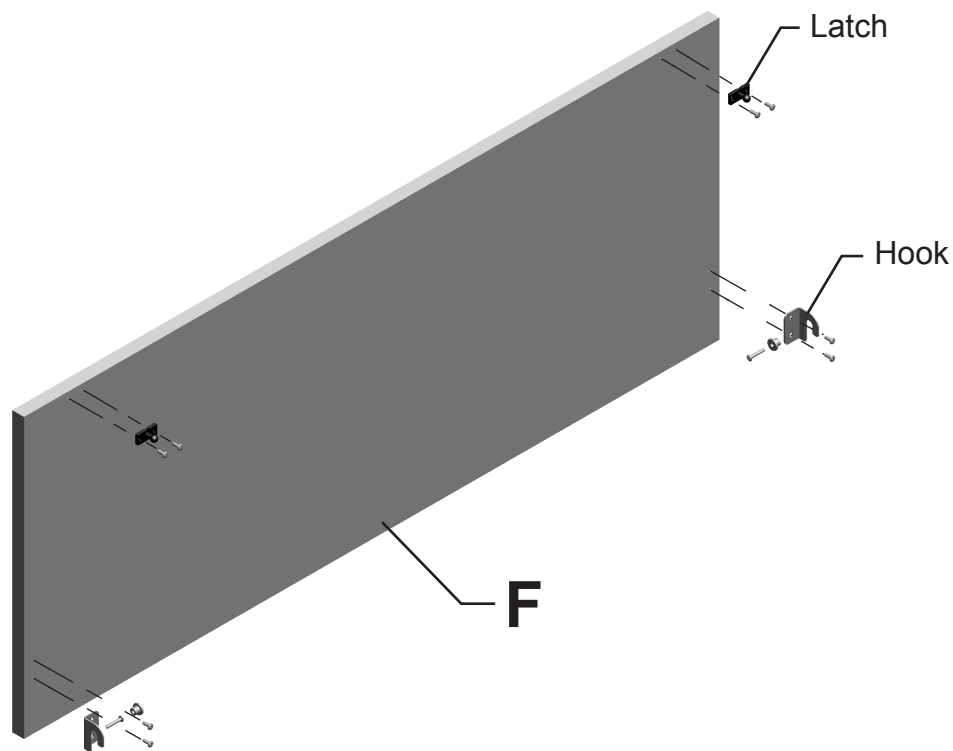

1. Remove screws attaching Latch and Hook to Access Panel(F). Remove Latch and Hook.

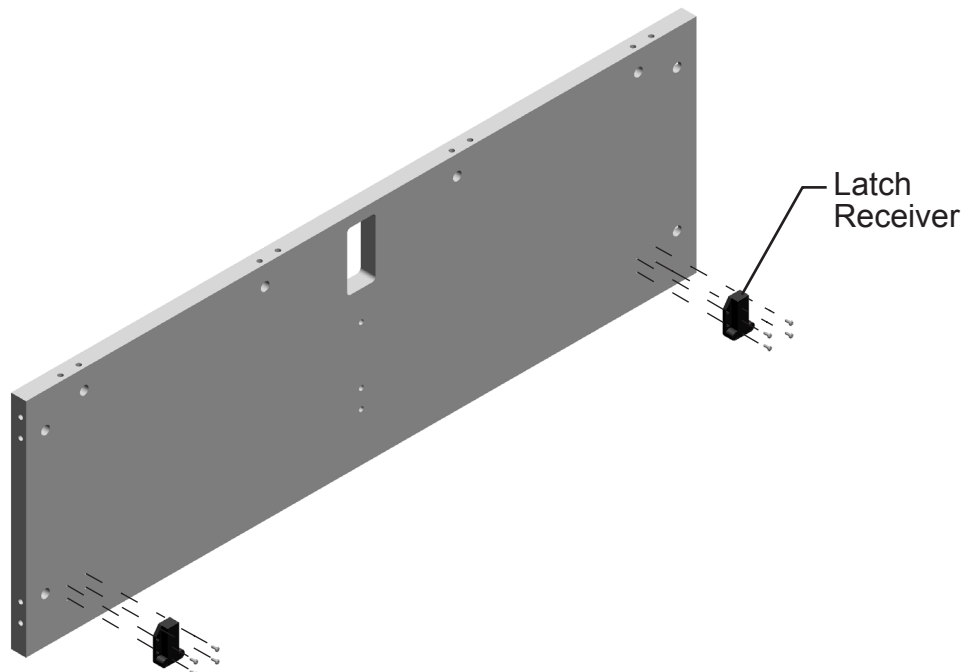


2. Remove screws attaching Latch Receiver to Shelf. Remove Latch Receiver.

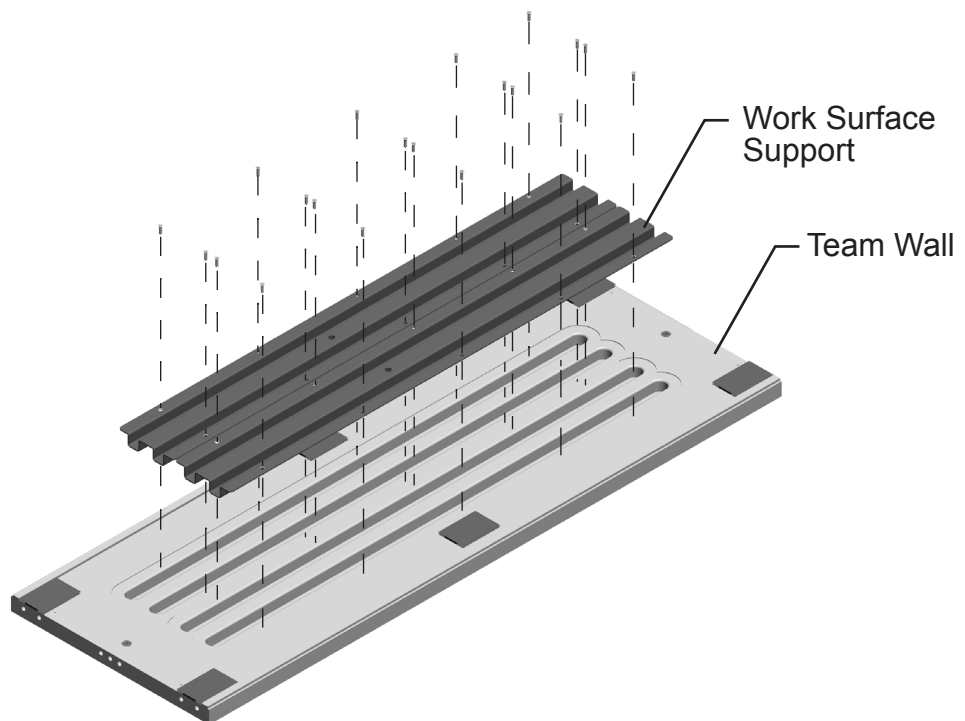


3. Remove screws attaching Work Surface Support to Team Wall. Remove Work Surface Support.

HermanMiller

Part no. 1b8g9k rev B.

© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
™  Herman Miller, Canvas Office Landscape are among the trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

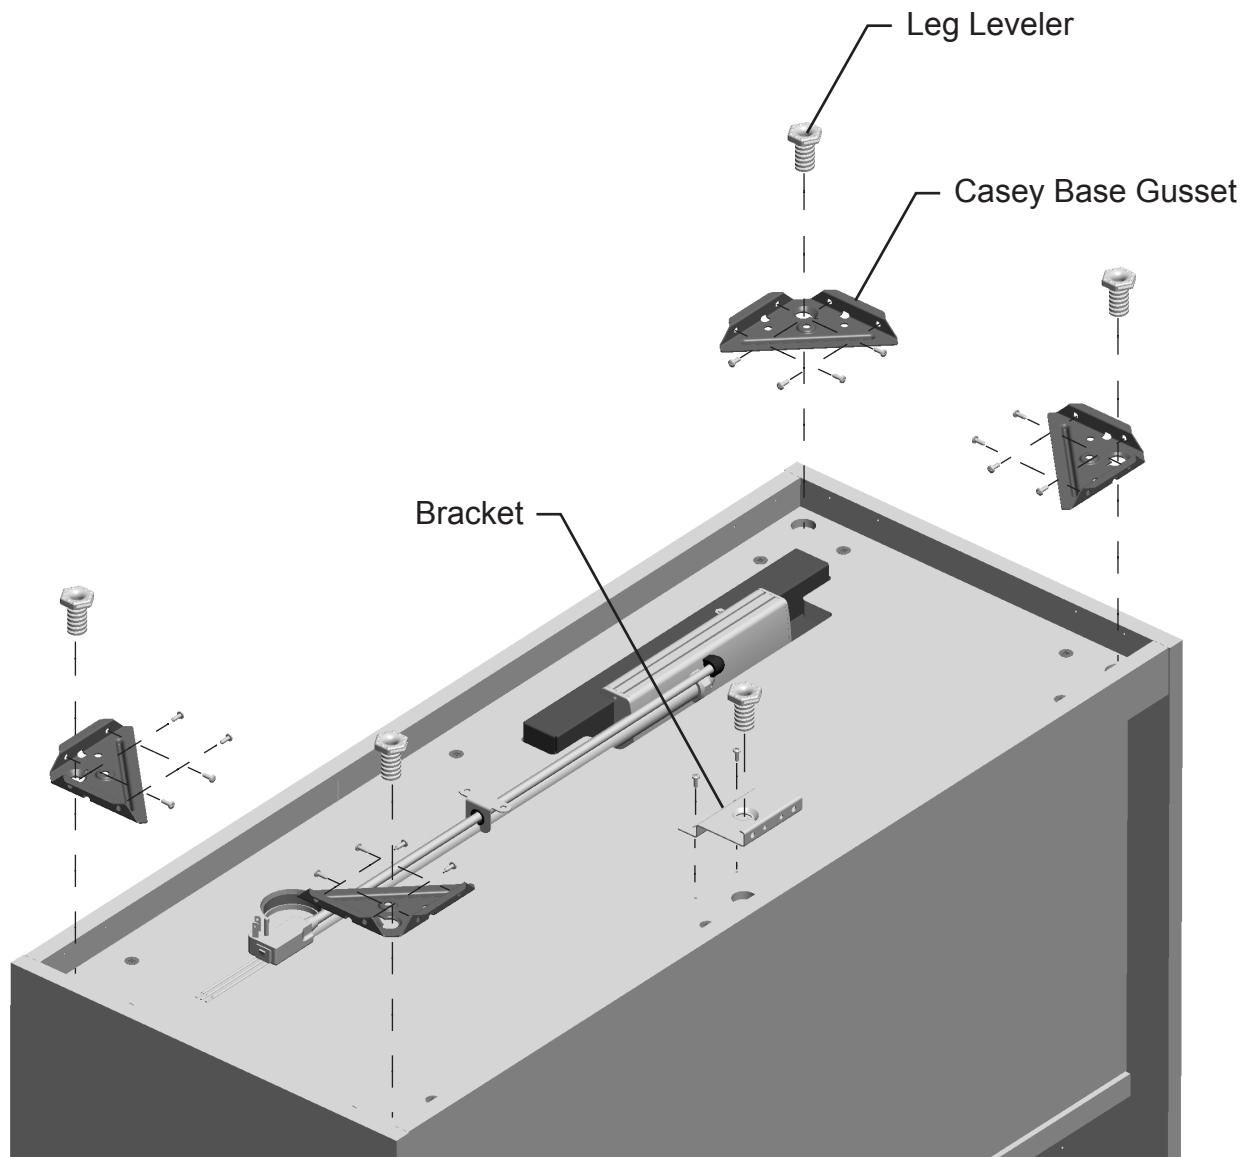

4. Remove pan head tapping screws and leg leveler attaching Casey Base Gusset and bracket to Team Wall. Remove Casey Base Gusset.