

HermanMiller

MN240 Column Anchor Bracket Installation and Disassembly for Recycling Instructions



How to assemble MN240 Column Anchor Bracket

Tools Required



Impact Driver




11/64 Drill



Phillips Head

Parts Included




Anchor Bracket




(4x) No. 12 x 1" Tapping
Pan Head Screw

Step 1


1.1 Assemble and level the full Overlay Unit.

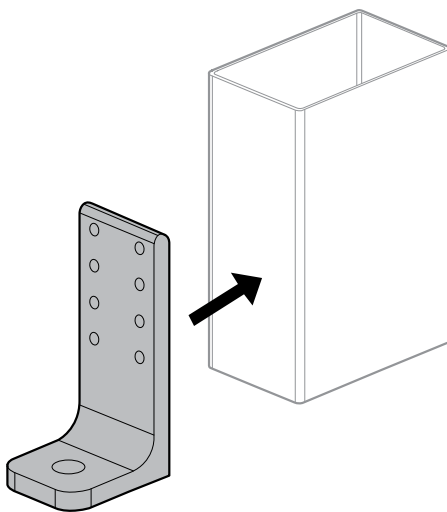


1.2 Push the angle bracket flush against the center of the column's mounting face.

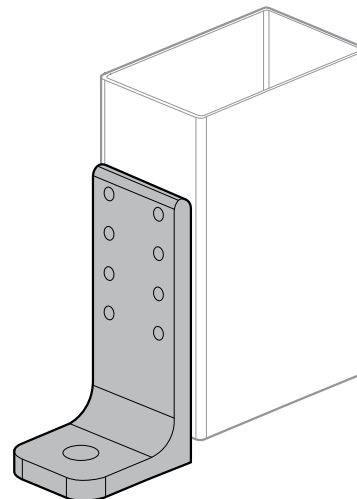


1.3 Create four 11/64 pilot holes at the lowest location on the column.

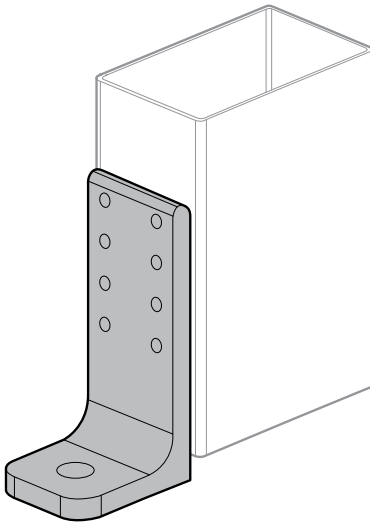

1.4 Drive four self tapping screws, so that the bracket is securely fastened to the column wall.

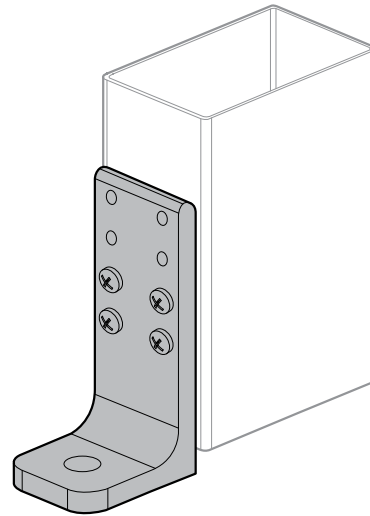

1.5 Install the floor anchor according to the anchor manufacturer's instructions.

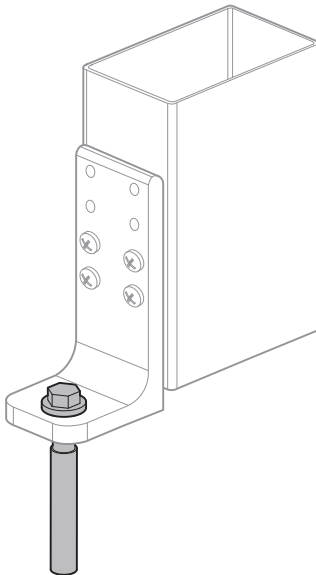

Disassembly for Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse steps.

For more information about our products and services please visit us at hermanmiller.com or call (800) 851 1196.

©2018 Herman Miller, Inc., Zeeland, Michigan Printed in U.S.A. Part No. **1BNWK0 – A**