

HermanMiller

Fuld Disassembly for Recycling Instructions



How to Disassemble your Fuld chair


Tools Required



Flat head screwdriver




T-25 Torx head screwdriver




Hammer



Vise Grip



T-40 Torx driver



T-27 Torx driver




Scissor

Chair Disassembly


Step 1

- 1.1 Remove bolts from underside of rear legs.
- 1.2 Remove backrest from remaining chair.

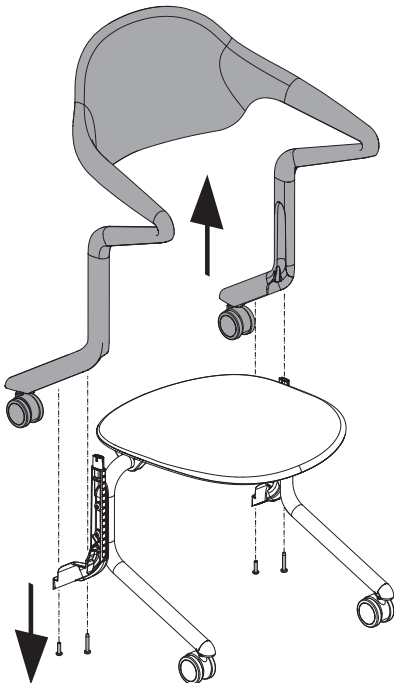


Step 2

- 2.1 Remove bolts from LH-Leg insert and RH-leg insert.
- 2.2 Remove LH-Leg insert and RH-leg insert from Bent Tube.

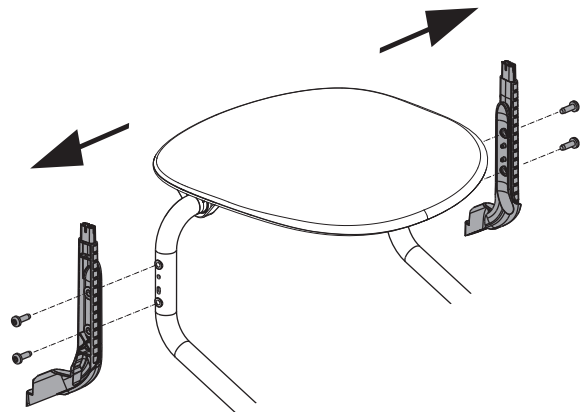


Step 3

3.1 Remove caster from old caster foot .

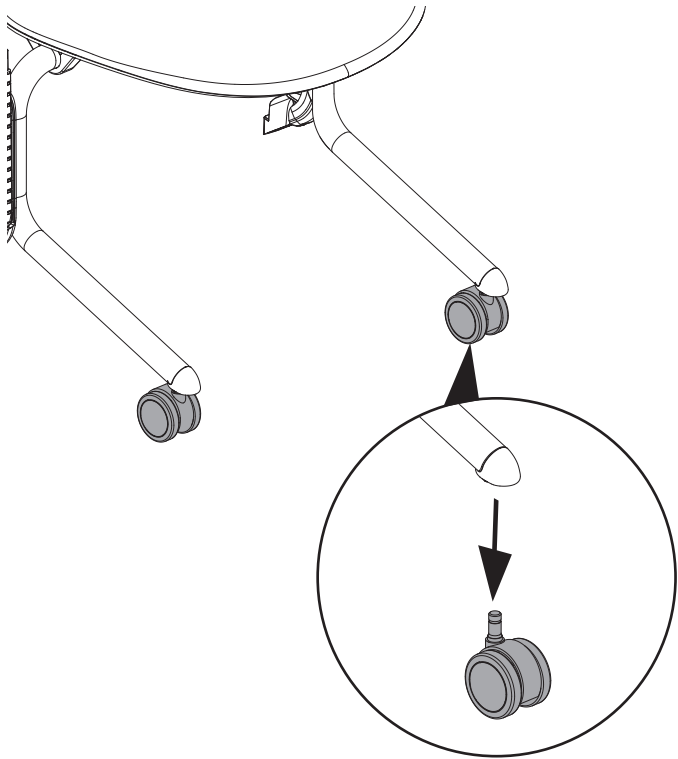


Step 4

4.1 Clamp vice grip on end of caster foot, tap with mallet to remove caster foot from tube.

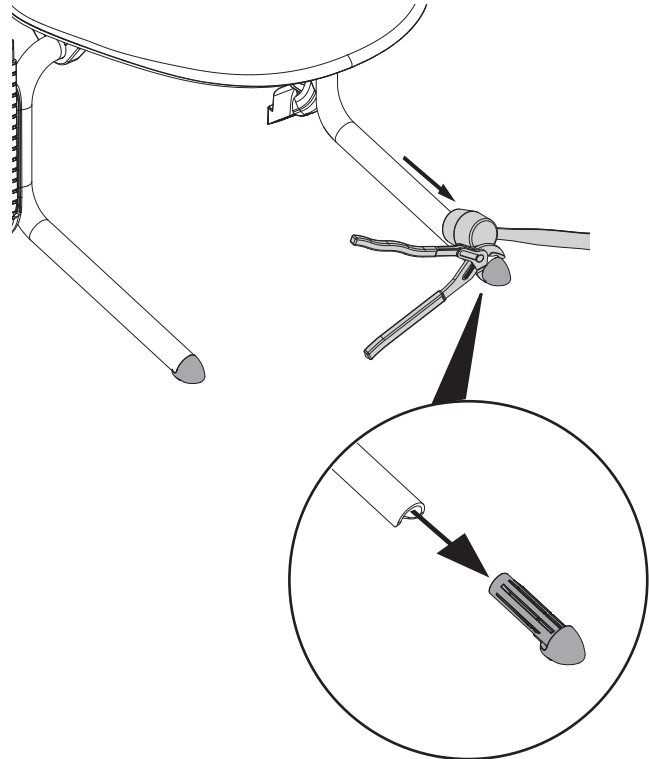


Step 5

5.1 Use flat head screwdriver to remove Clip Cover.

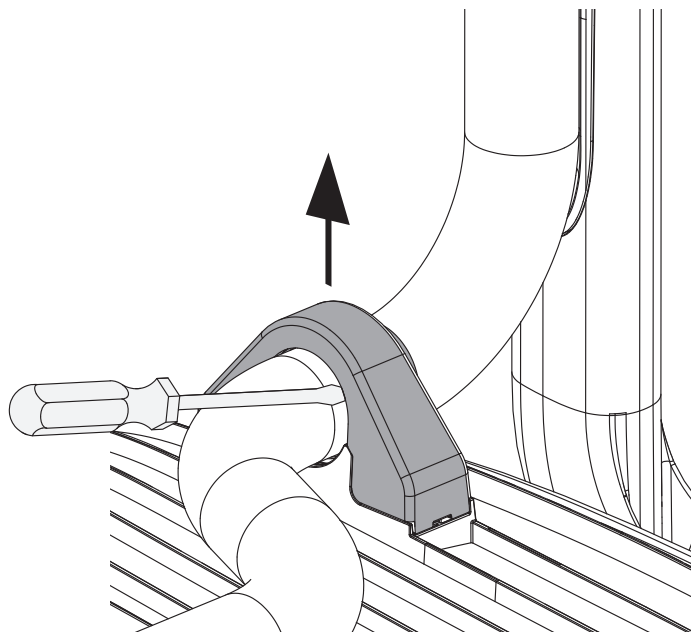


Step 6

6.1 Use T25 screwdriver to remove bolts.
6.2 Remove U-clip.

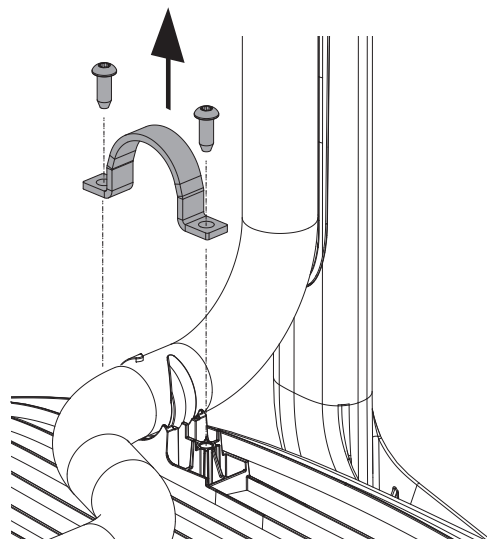

Step 7


7.1 Remove seat from tube.

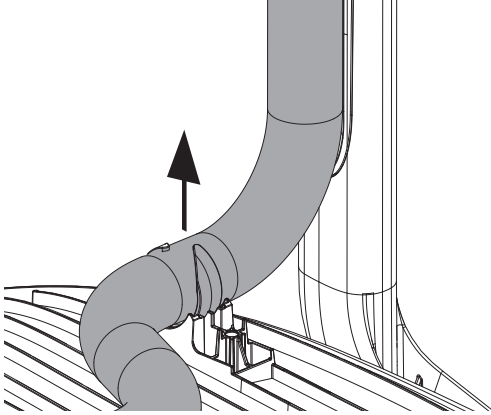

Step 8

8.1 Remove dampener from Seat.


8.2 Remove bumper from Seat.

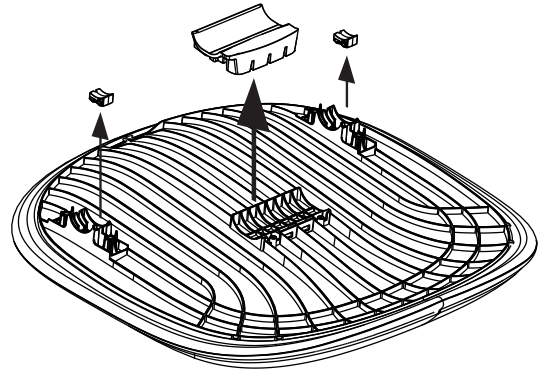

Step 9


9.1 Remove knit cover from seat by cutting drawstring with scissors.

9.2 Detach foam if present.

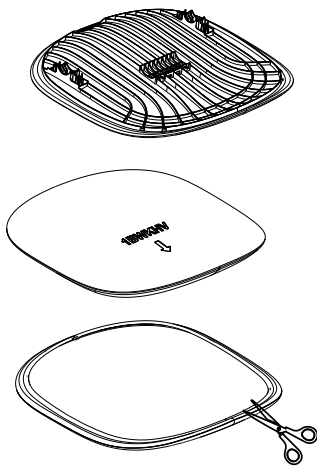

Step 10


10.1 Remove bushings from leg tube.

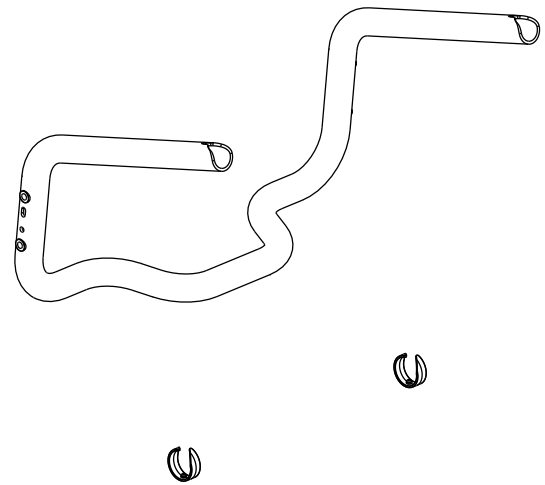

Glide Chair Disassembly


Step 1

- 1.1 Remove bolts from underside of rear legs.
- 1.2 Remove backrest from remaining chair.

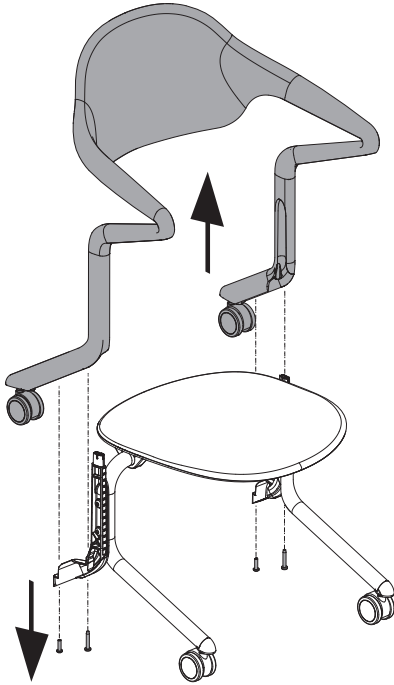


Step 2

- 2.1 Remove bolts from LH-Leg insert and RH-leg insert.
- 2.2 Remove LH-Leg insert and RH-leg insert from Bent Tube.

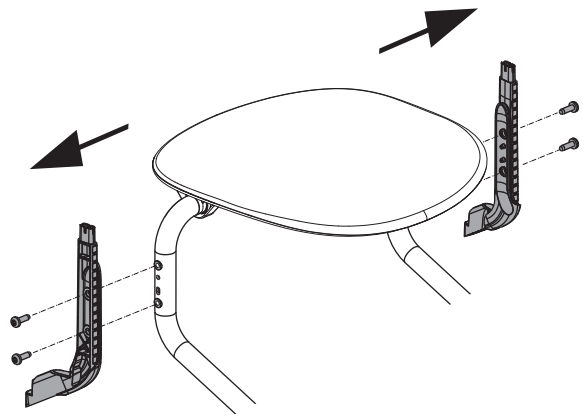


Step 3

- 3.1 Using a non-marring hammer, gently tap rear surface of Front Glide Assembly until it comes free from leg tube.

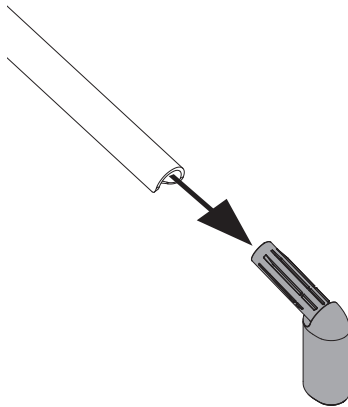


Step 4

- 4.1 Pull down on Rear Glide Assembly until free from Backrest.

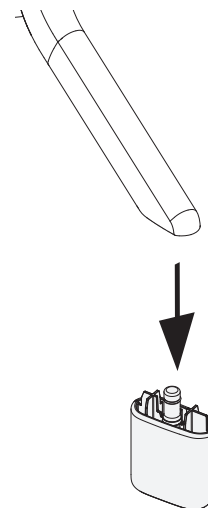

Step 5


5.1 Use flat head screwdriver to remove Clip Cover Retain for later.

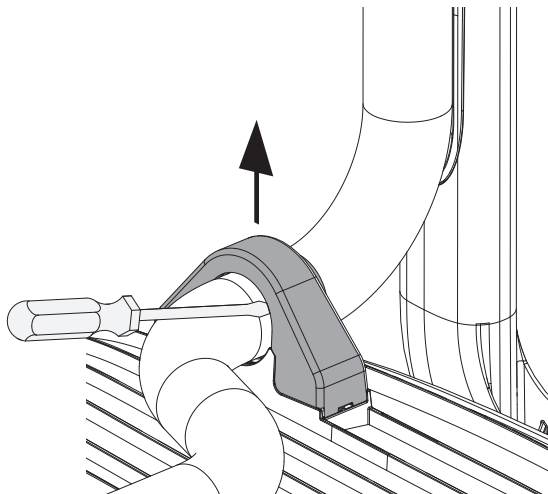

Step 6


6.1 Use T25 screwdriver to remove bolts.

6.2 Remove U-clip. Retain for later.

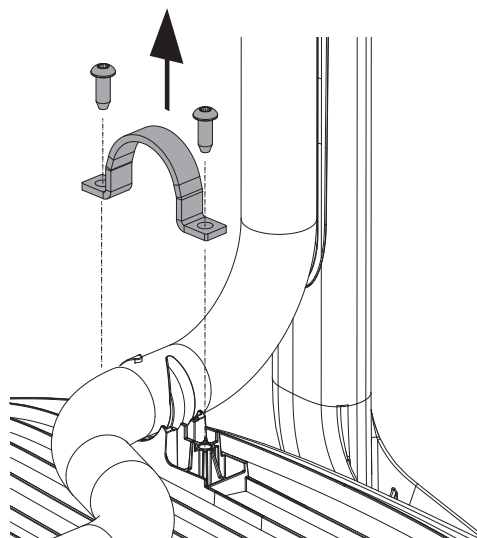

Step 7


7.1 Remove seat from tube.

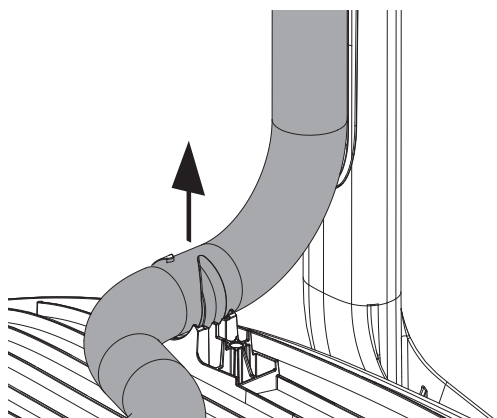

Step 8

8.1 Remove dampener from Seat.


8.2 Remove bumper from Seat.

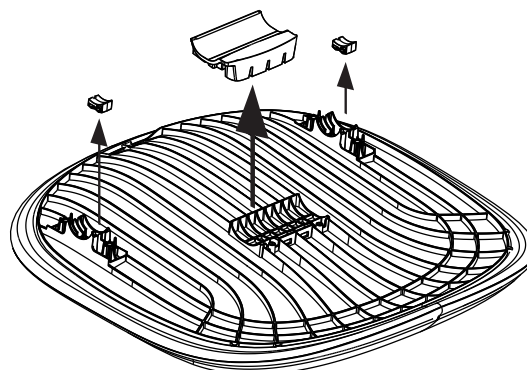

Step 9

9.1 Remove knit cover from seat by cutting drawstring with scissors.

9.2 Detach foam if present.

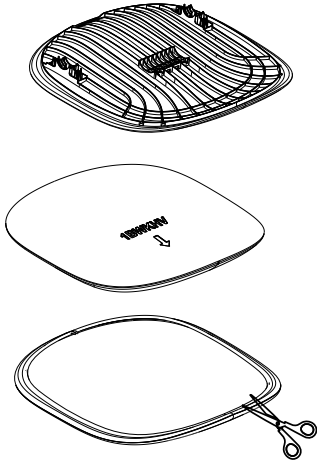

Step 10

10.1 Remove bushings from leg tube.

