




Canvas Office Landscape® Wall Strip Installation and Disassembly for Recycling Instructions

Parts Included:




Wall Strip

Tools Required:

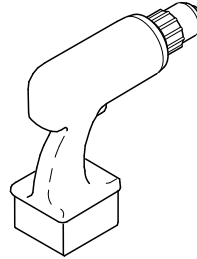


Power Driver

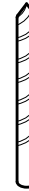


Drill Bit
(Determined
by fastener)



Driver Bit
(Determined
by fastener)

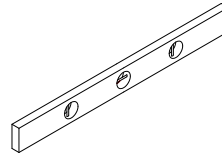

Level

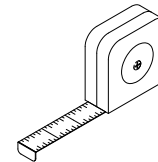

Tape Measure



Chalk Line



Safety Glass

Definition of a structural wall:

Herman Miller Inc. definition of a structural wall is a load-bearing wall constructed of materials such as poured concrete or concrete block or a composite board (dry wall) attached to metal or wood studs. Composite board (dry wall) must be 5/8" or more thick. Wood studs must be nominal 2" x 4" size. Metal studs must be "C" channel 20 ga. thick. Metal or wood studs must be on centers no greater than 24", have a maximum height of 14' and restrained at floor and ceiling.

Note: Refere to fastener manufacturer's specifications for pilot hole dia. size.

IMPORTANT: Save these instructions for layout changes.

HermanMiller

Part no. 1b2k51 rev F.

© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
© HermanMiller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.
The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.



WARNING

It is the responsibility of the installer to select and install the proper fasteners in a structural wall. Herman Miller does not furnish fasteners or assume liability for their use.

Installation guidelines:

- Fasteners for attaching into dry wall: #10 pan head machine screw with toggle bolt or hollow wall fastener. Screw length must be determined by wall construction and thickness.

Note:

Herman Miller, Inc recommends the use of the Toggler brand 3/16"-24 Spaptoggle toggle bolt or equivalent for this application. These can be purchased locally, or are available from Herman Miller, Inc. (Product X1191). The fastener selected should have a minimum manufacturer-published tensil strength of 350 pounds when used with 5/8" thick dry wall.

- Fasteners for attaching into concrete: #10 pan head sheet metal screw and masonry anchor. Screw length must be determined by wall construction and thickness.

Note:

Select masonry anchor with a minimum manufacturer-published tensil strength of 350 pounds.

- Fasteners for attaching into studs through drywall: #10 pan head sheet metal screw. Screw length must be determined by wall construction and thickness.



WARNING

Improper installation can cause product damage and personal injury. Wall strips **MUST** be attached to structural walls. SEE DEFINITION OF A STRUCTURAL WALL.



WARNING

Under no condition may a wall strip be cut to a shorter length.

Notice

Mount wall strips on wood or metal studs where possible. Studs and walls **MUST** be fastened to building structure at ceiling and floor.



WARNING


Do not mount work surface above 30" for FT191.46 wall strips.

Dimensional Considerations:


- Vivo™ wall strips must be mounted with the bottom end at 4" above the floor.
- Wall strips should be mounted on studs whenever possible. All Vivo™ wall strips are required to be mounted on 24", 30", 36", 42" and 48" centers, modular dimensions.

Assembly Instructions:

1

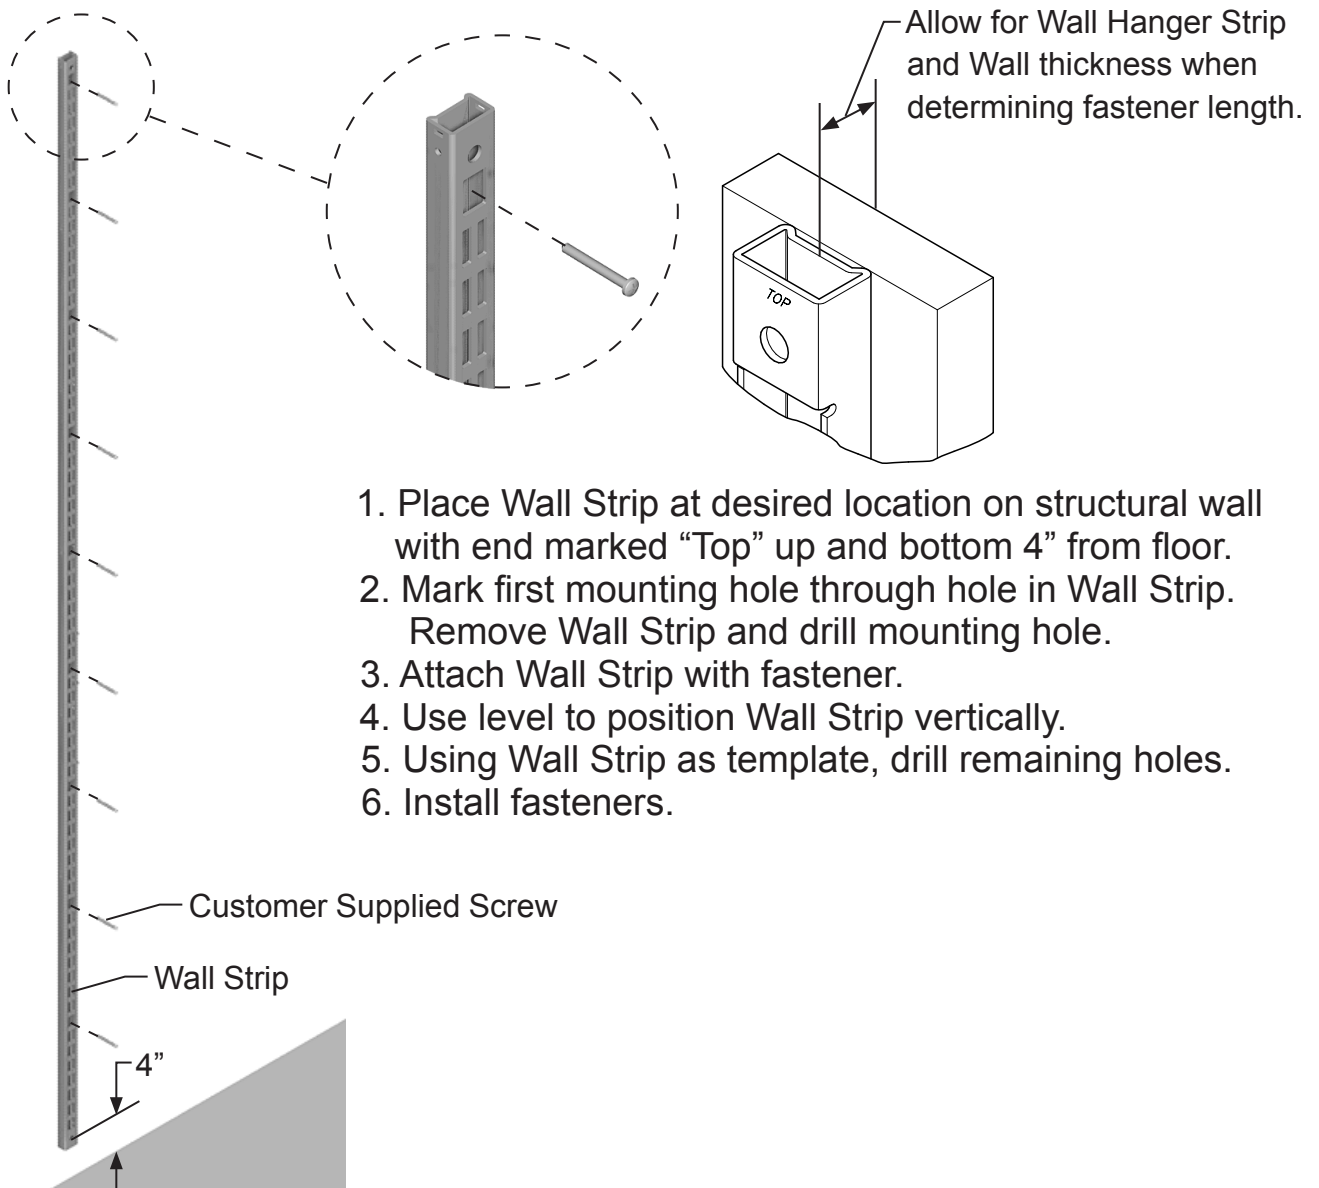


2

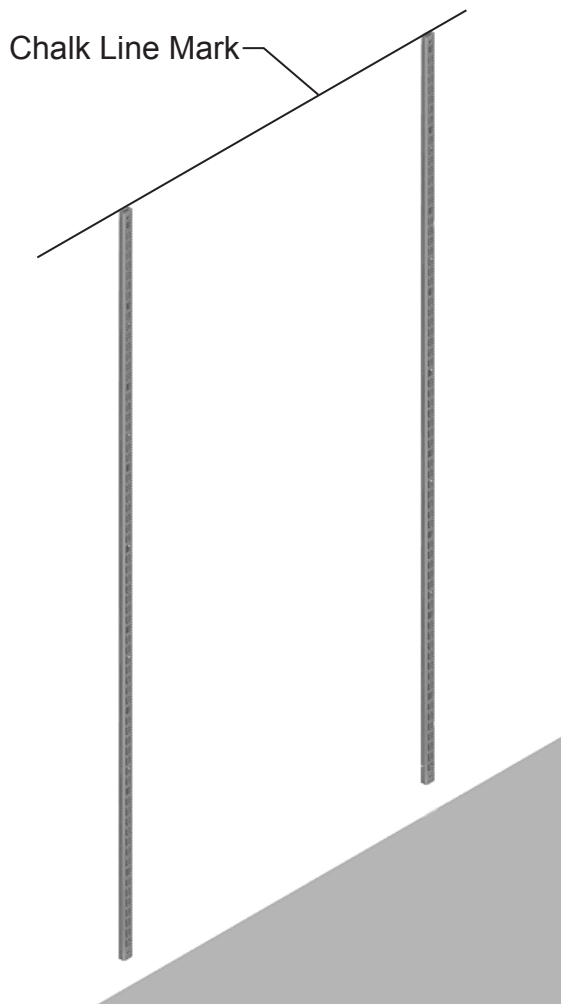

7. Strike a level Chalk Line Mark on wall.
8. Install additional Wall Strips as described in step 1 and at distances apart called out in "Dimensional Considerations".


3

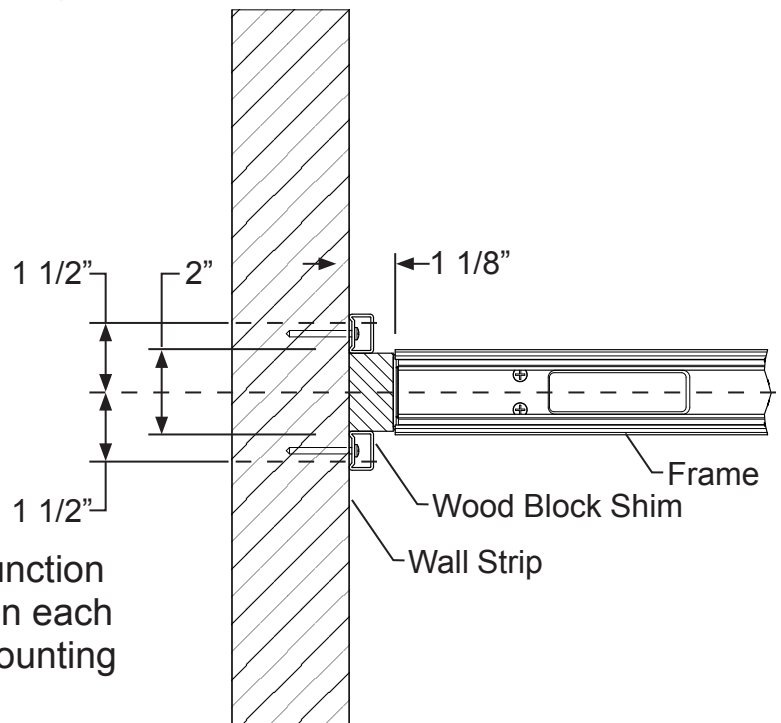


9. If Wall Strip is to be installed in conjunction with Wall Start, install along side or on each side of Wood Block Shim used for mounting Frame to wall.

Interior 90° Corner Installation

4

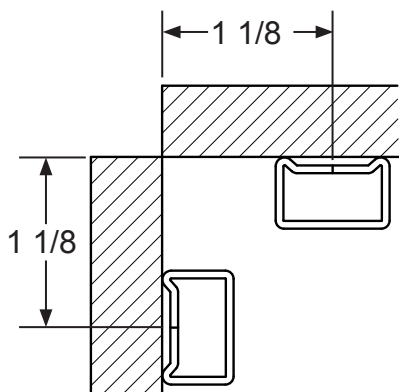


10. When an interior corner is involved, all Wall Strip installations should begin at interior corner and be compliant with dimensions shown.

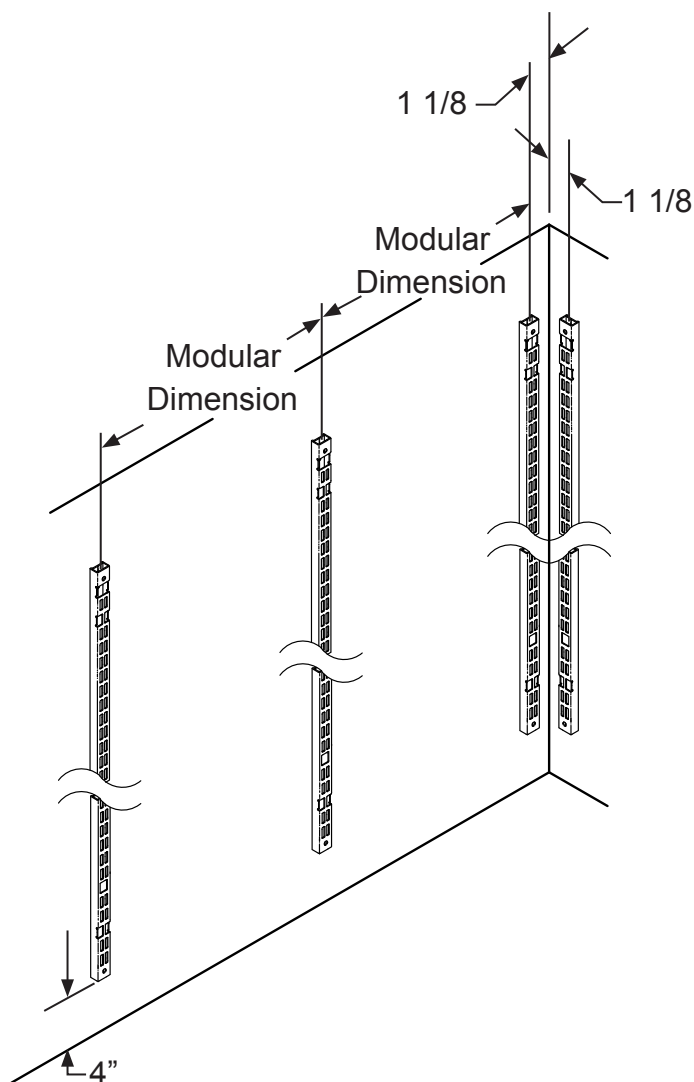

HermanMiller

Part no. 1b2k51 rev F.

© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.


©  **HermanMiller** and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.

The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

Exterior 90° Corner Installation

5

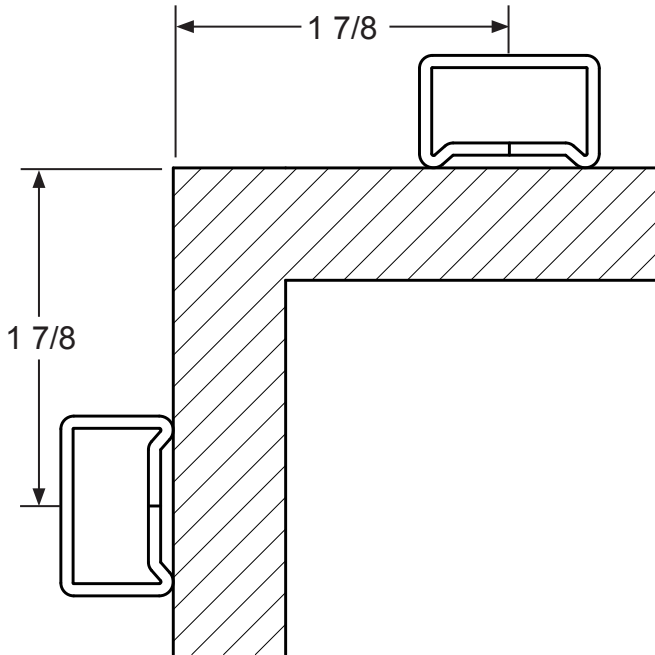

11. When an exterior corner is involved, all Wall Strip installations should begin at exterior corner and be compliant with dimensions shown.

Disassembly for Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse steps 11 through 1.