



Parts




Cylinder

How to replace your Cylinder

Tools Required



Nylon Cap




2# - 3# Plastic Covered
Dead Blow Hammer



Lift Off Tool


Step 1

1.1 Lay chair on the side.

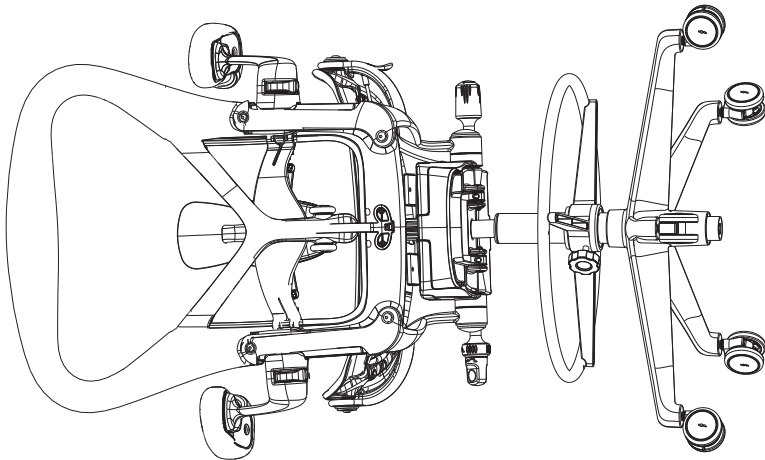


Step 2

2.1 Place the nylon cap at the bottom of the cylinder. Using a dead blow hammer hit the bottom of the base.

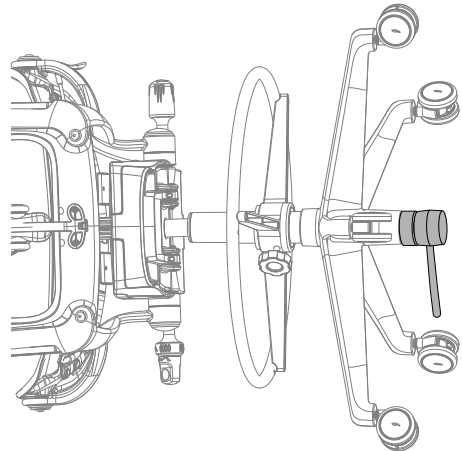

Step 3


3.1 Remove base from the cylinder.

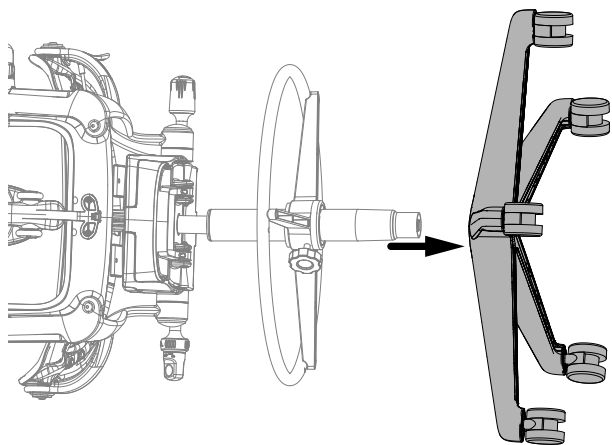

Step 4


4.1 Turn handle on footing counter clockwise to loosen.

4.2 Slide footing off cylinder.

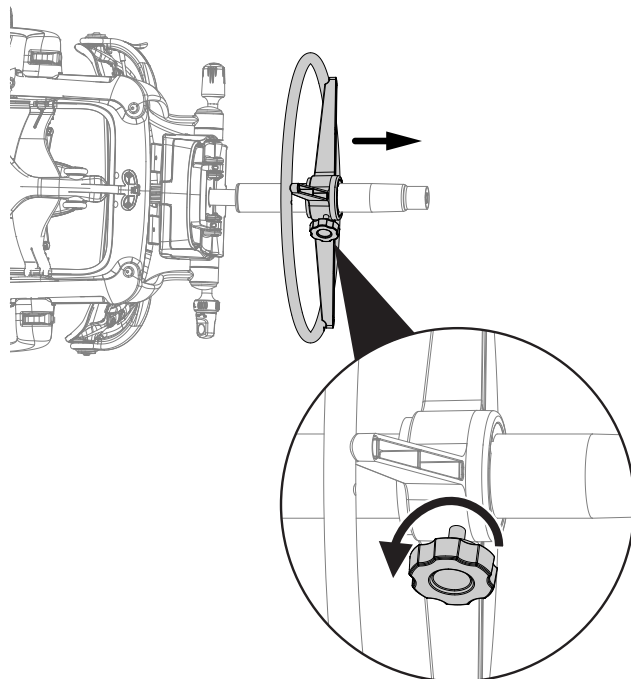


Step 5

5.1 Place the lift off tool on the cylinder.

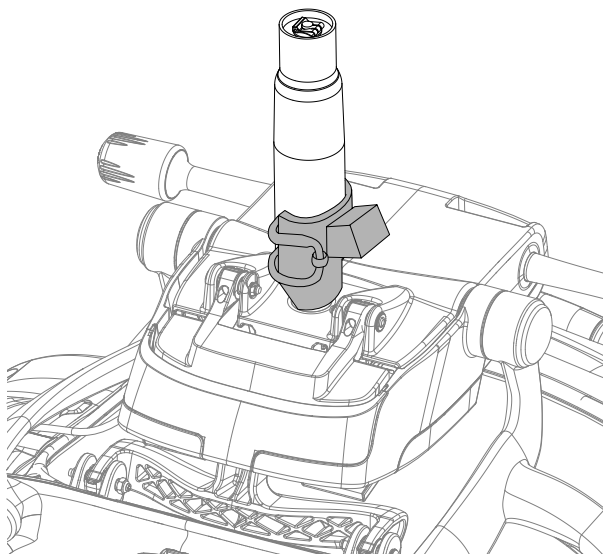


Step 6

6.1 Strike the lift off tool with the dead blow hammer back and forth on the both sides until gas cylinder separates from the tilt.

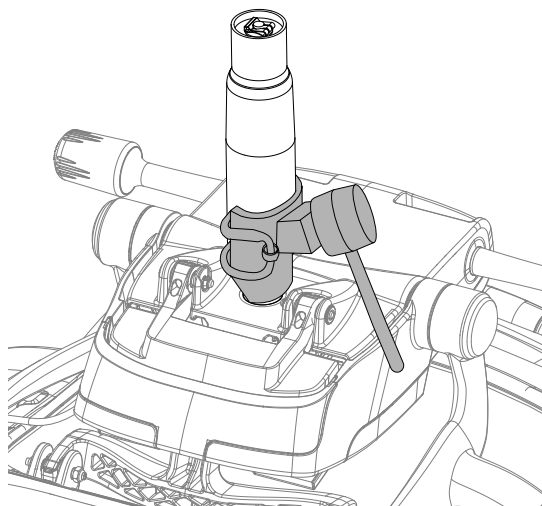

Step


7.1 Remove the cylinder from the base.

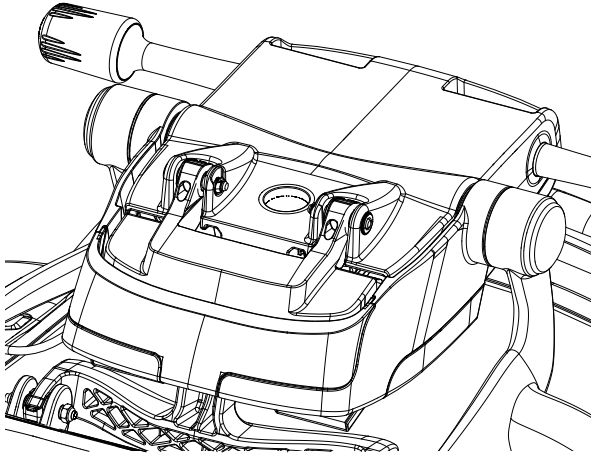

Re-Assembly Steps:



Step 8

8.1 Install the new cylinder onto the base.

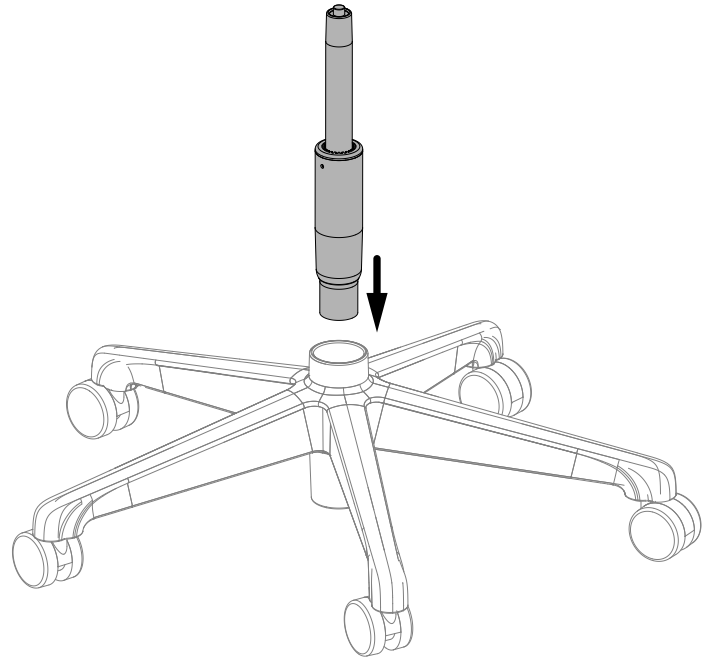


Step 9

9.1 Slide footing onto cylinder turn handle clockwise to lock position (40in-lbs).

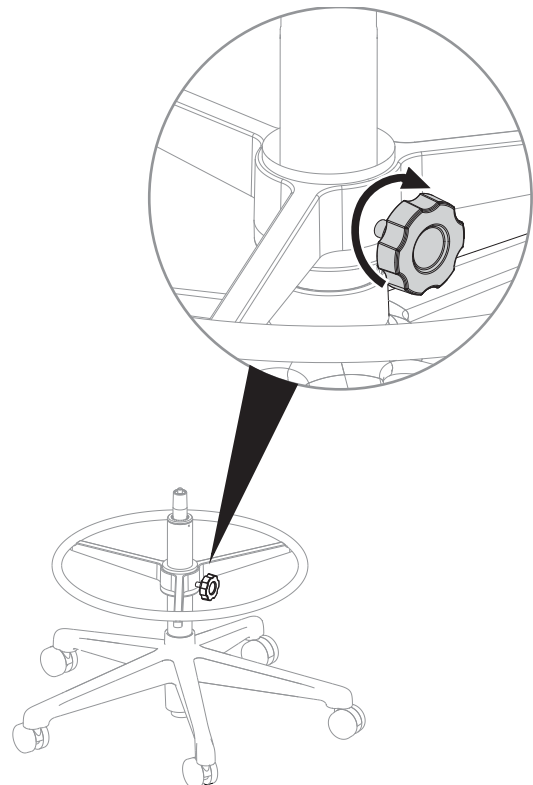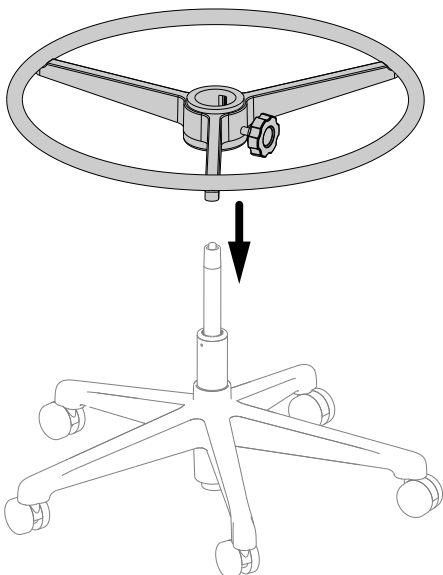

Step 10

10.1 Extend chair arms in upright position. Grab the arm stems and lower upper seat assembly onto top of the cylinder.

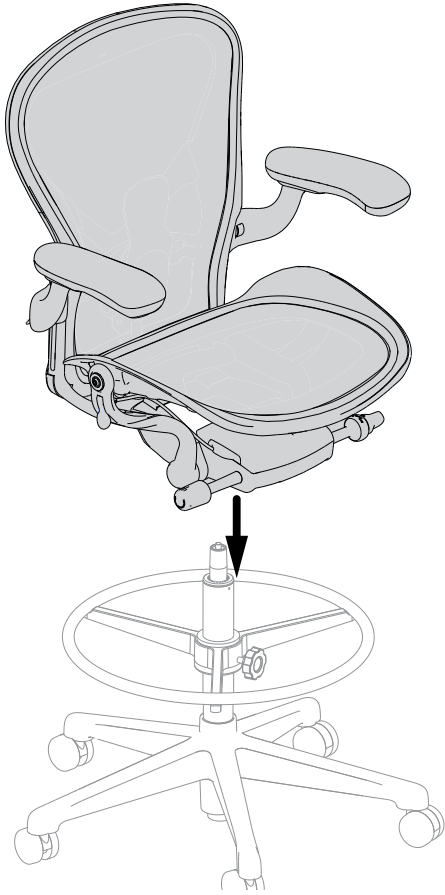

Step 11

11.1 Sit on the chair firmly several times to set cylinder and base.

