

HermanMiller

Canvas Channel 120° Connector Cover Installation and Disassembly for Recycling Instructions



How to assemble your 120° Connector Cover

Tools Required



Safety Glass

IMPORTANT: Save these instructions for layout changes.


Assembly Instructions:

One-sided Full Height Connector Cover

Step 1

1.1 Locate slots, flanges, and tabs in one-sided full height cover connector. Make sure the tabs are at the top of the part.

1.2 Install one-sided full height connector cover by placing edge of connector next to connector tube and rotating so that flanges engage around edges of connector Tube.

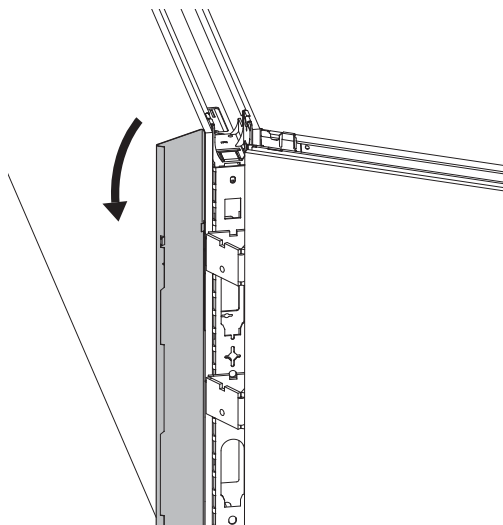


Parts Included



One-sided Connector Cover
(Painted)

1.3 Slide one-sided full height connector cover down so that tab rests on connector tube.

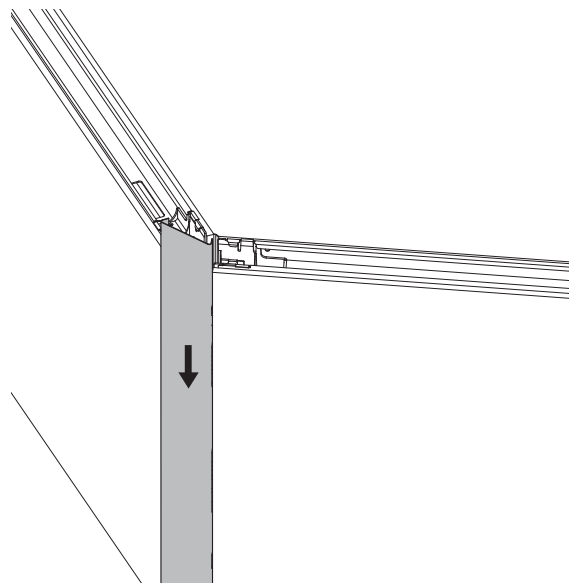

Disassembly for Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse the above installation steps.

For more information about our products and services please visit us at
hermanmiller.com or call (800) 851 1196.

©2017 Herman Miller, Inc., Zeeland, Michigan Printed in U.S.A. Part No. **1BKTM8 – A**