


HermanMiller

Canvas Vista Suspended Storage Installation and Disassembly for Recycling Instructions



How to assemble Vista Suspended Storage

Tools Required




Power Driver



#2 Phillips
Extended Bit


Parts Included

L2SCF – Suspended Cubby

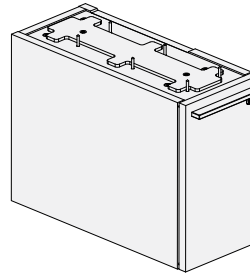


Tapping Screw
Pan Head (6)

L2SDF – Suspended Drawer

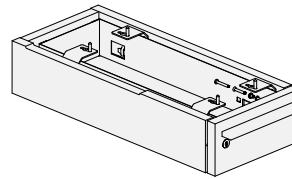

Tapping Screw
Pan Head (4)

Storage Guide

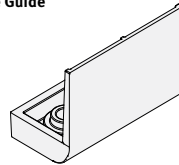


Tapping Screw
Pan Head (2)

L2SCF – Suspended Cubby

Step 1

1.1 Remove the drawer body from the cubby storage.

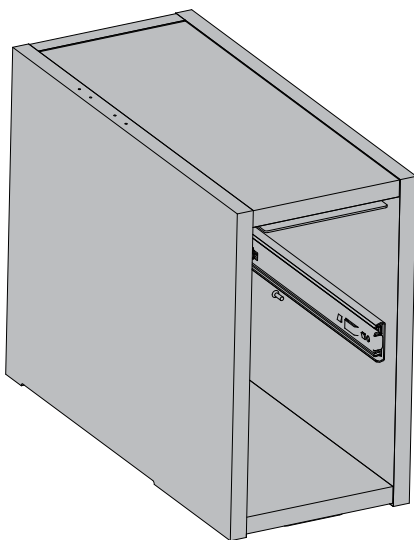


Step 2

2.1 With the table upside down, align cubby storage to either the front left or right corner of the table and align the holes in the top of the storage unit with the 4 locating holes in the work surface. Make sure the cabinet is flush with the worksurface edge.




Wall with the notch faces
to the inside

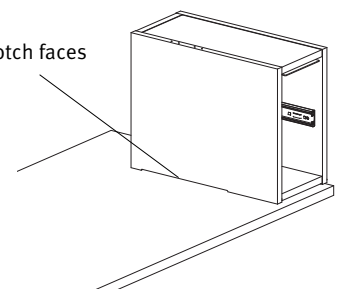

This is a LH cubby - it installs on the LH side of the desk
(in the in use position)


Step 3

3.1 Using pre-drilled pilot holes, screw in 6 long #10 tapping screws from provided hardware pack.

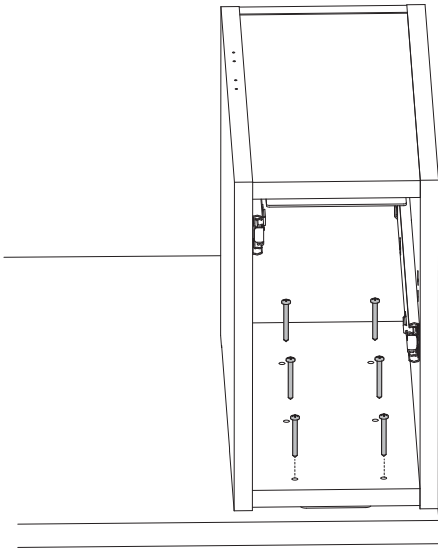


Step 4

4.1 If the cubby is installed on a height adjustable table install the storage guide using the two #8 tapping screws and the pre-drilled locating holes in the bottom of the cabinet.

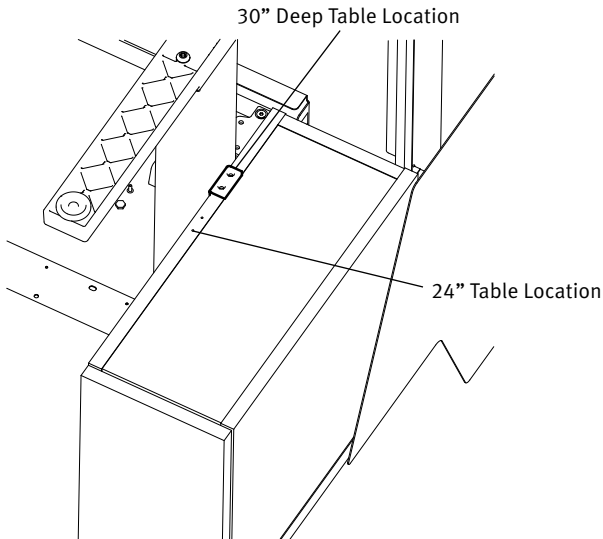

Step 5


5.1 Once table is flipped right side up and leveled, re-install the drawer body. Ensure that the drawer face is aligned. If not aligned, Loosen the screws attaching the drawer front and align. Then tighten the screws.

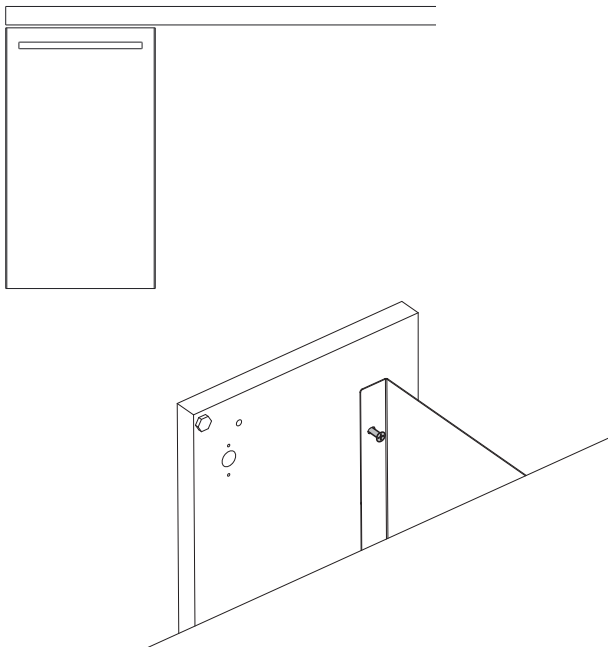

L2SDF – Suspended Drawer


Step 1

1.1 With the table upside down, screw in 4 short #10 tapping screws to the 4 locating holes in the work surface. Do not screw them in all the way, allow enough room for them to engage with the key hole slots in drawer storage.

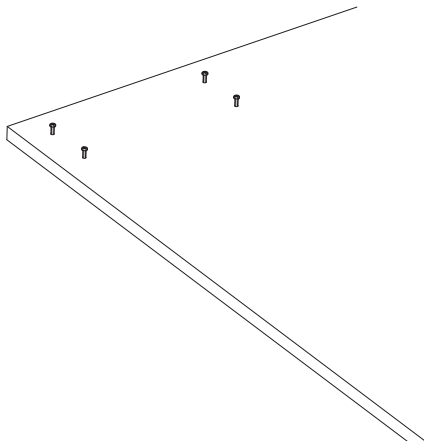


Step 2

2.1 Remove the drawer body from the drawer storage.

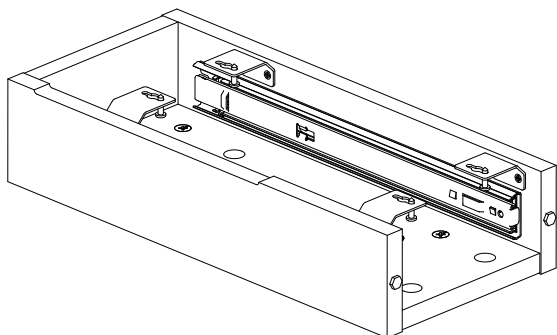


Step 3

3.1 With the table still upside down, place the drawer storage over the partially screwed in screws through the attachment bracket's key hole slots. Slide the drawer storage until it is aligned flush with the edge of work surface.

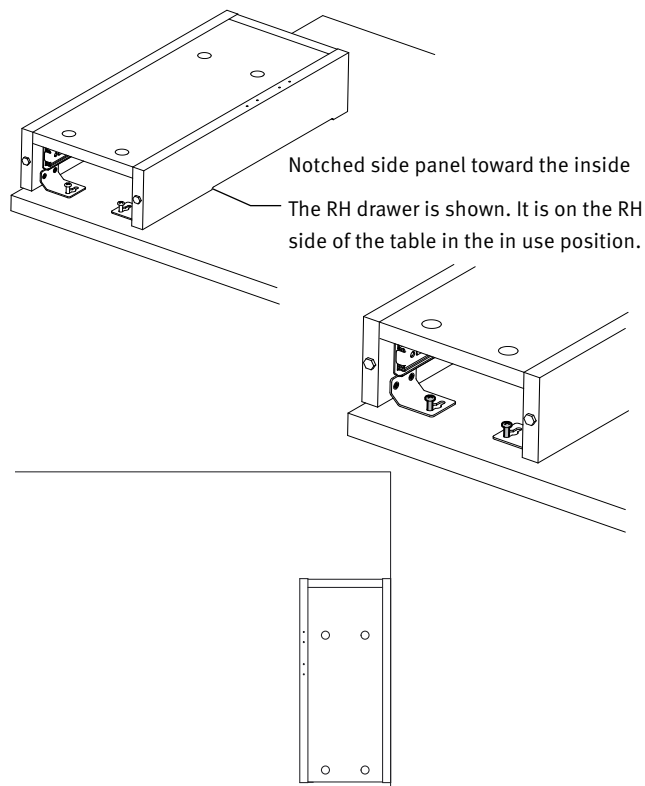


Step 4

4.1 Once in place with drawer storage flush to work surface edge, tighten the 4 screws to the work surface through the clearance holes in the bottom of the drawer storage.

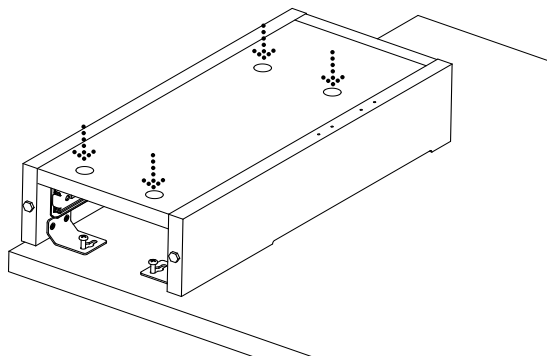


Step 5

5.1 Once table is flipped right side up and leveled, re-install the drawer body. Ensure that the drawer face is aligned. If not aligned, loosen the screws attaching the drawer front and align. Then tighten the screws.

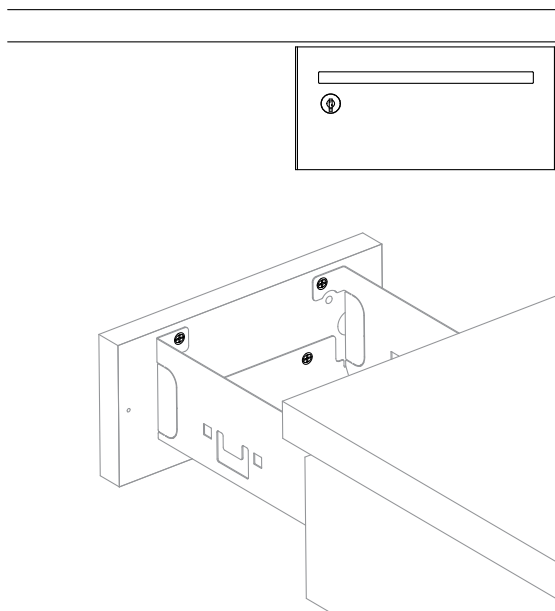

Step 6

6.1 If the Suspended Drawer is being installed on a height adjustable table, install the Storage guide to the bottom of the storage unit by aligning the guide with the locating holes in the storage unit that are next to the leg in the table. Install the 2 self tapping screws.

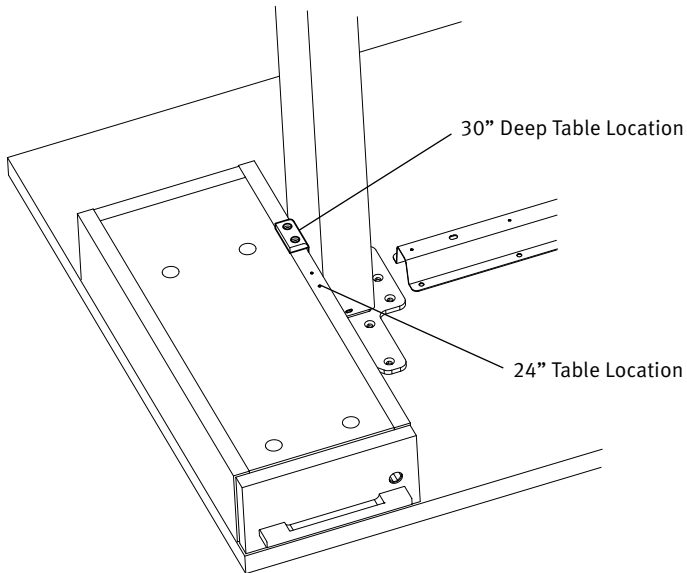

Disassembly and Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse the above installation steps: