



Canvas Office Landscape® Beam Internal Direct Connect Power Entry Installation and Disassembly for Recycling Instructions

Parts Included:



A Power Entry Harness

FW140.08XX - 8 Wire Harness

FW140.10XX - 10 Wire Harness



WARNING

All electrical connections to building electrical sources must be made by a qualified electrician according to national, state and local electrical codes.



WARNING

Disconnect power before installation. Failure to do so can cause electrical shock and personal injury.



WARNING

Electrically interconnected units must be mechanically interconnected.


Tools Required:



Safety Glass


FW140.08XX – 8 WIRE HARNESS WIRING DIAGRAMS 4-2-2

4 HOTS, 2 NEUTRALS, 2 GROUNDS

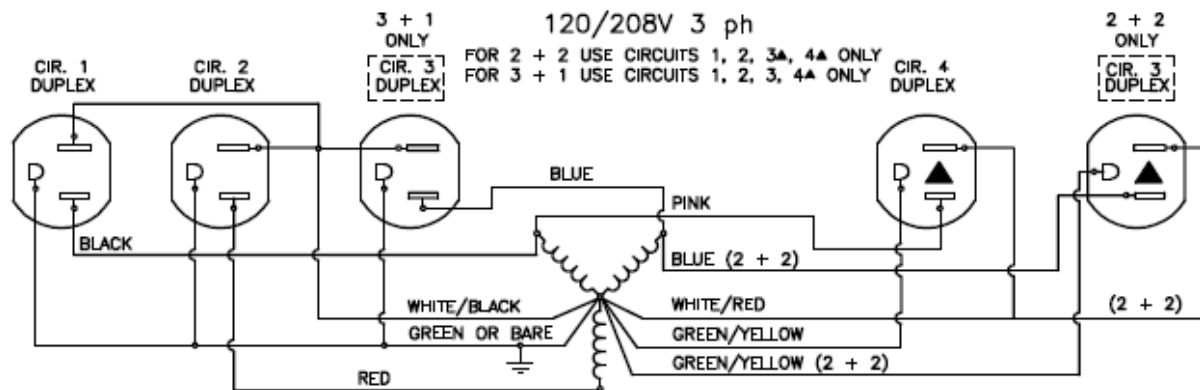

NOTE: CIRCUITS 1,2,3,4 CORRESPOND TO CIRCUITS (DUPLEX RECEPTACLES) A, B, C, D

ALLOWABLE CIRCUIT COMBINATIONS: 1,2,3,4Δ; 1,2,3Δ,4Δ; 1, 2Δ,3Δ,4Δ

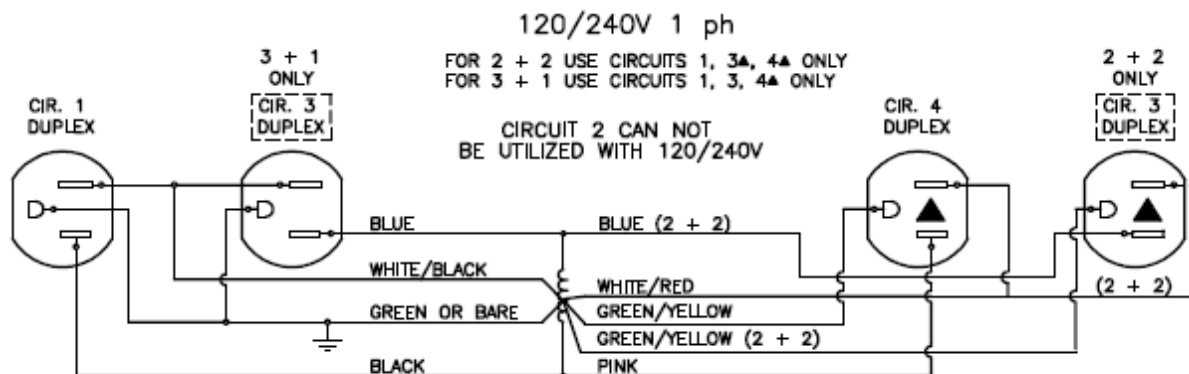

NOTE: CIRCUITS 1, 3, 4 CORRESPOND TO CIRCUITS (DUPLEX RECEPTACLES) A, C, D


ALLOWABLE CIRCUIT COMBINATIONS: CIRCUITS 1, 3, 4Δ ; 1, 4, 3Δ; OR 1, 3, 4

WARNING: RISK OF FIRE OR ELECTRIC SHOCK: THIS OFFICE FURNISHING SYSTEM MAY BE CONNECTED TO MORE THAN ONE SOURCE OF SUPPLY. ALL SOURCES MUST BE DISCONNECTED PRIOR TO ANY SERVICING. NO SINGLE CIRCUIT MAY BE POWERED BY MORE THAN ONE SOURCE.


AVERTISSEMENT: CE SYSTEME PEUT ETRE RACCORDE A PLUS D'UNE SOURCE D'ALIMENTATION. TOUTES LES SOURCES D'ALIMENTATION DOIVENT ETRE COUPEES AVANT LE DE-PANNAGE.

FW140.10XX – 10 WIRE HARNESS WIRING DIAGRAMS 4-4-2

4 HOTS, 4 NEUTRALS, 2 GROUNDS

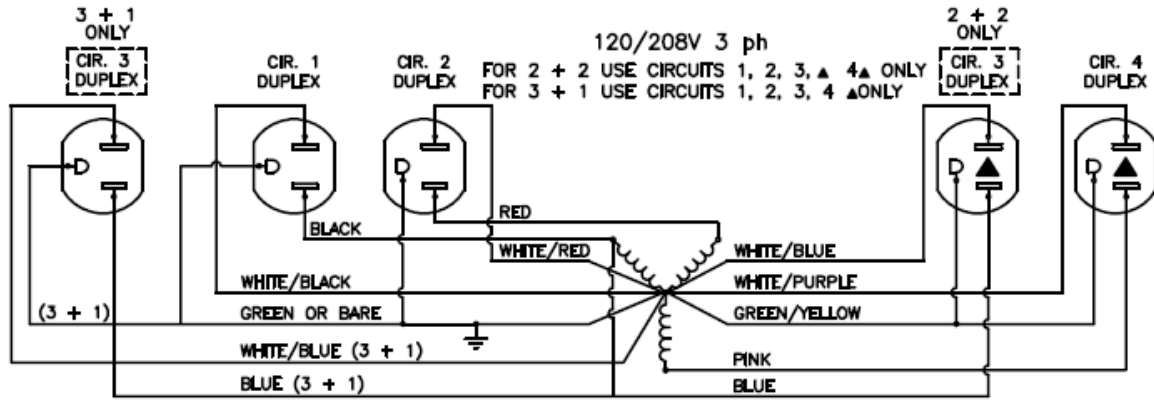


ALLOWABLE CIRCUIT COMBINATIONS: 1,2,3,4 ; 1,2,3Δ,4Δ; 1, 2Δ,3Δ,4Δ; 1,2,3,4,1Δ,2Δ,3Δ,4Δ

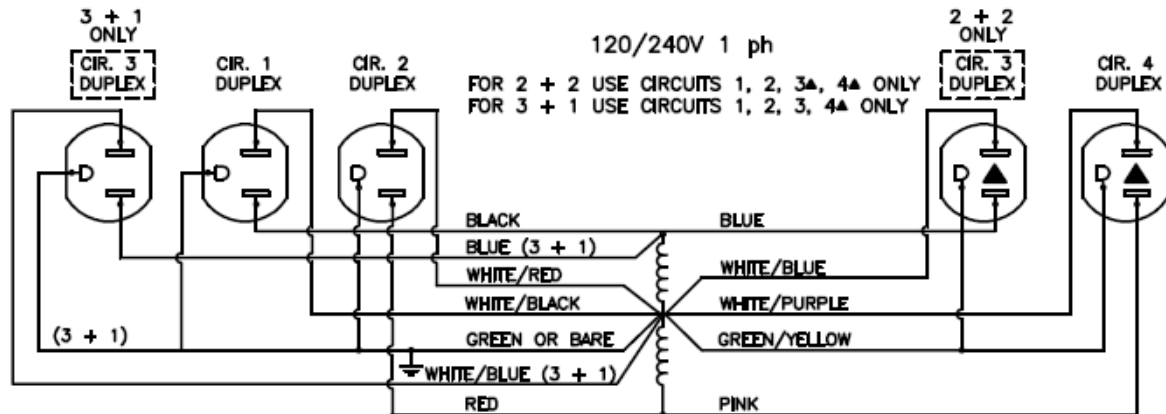

ALLOWABLE CIRCUIT COMBINATIONS: CIRCUITS 1,2, 3, 4Δ; 1, 2, 3,4Δ; OR 1, 2, 3 Δ,4Δ

WARNING: RISK OF FIRE OR ELECTRIC SHOCK: THIS OFFICE FURNISHING SYSTEM MAY BE CONNECTED TO MORE THAN ONE SOURCE OF SUPPLY. ALL SOURCES MUST BE DISCONNECTED PRIOR TO ANY SERVICING. NO SINGLE CIRCUIT MAY BE POWERED BY MORE THAN ONE SOURCE.

AVERTISSEMENT: CE SYSTEME PEUT ETRE RACCORDE A PLUS D'UNE SOURCE D'ALIMENTATION. TOUTES LES SOURCES D'ALIMENTATION DOIVENT ETRE COUPE'ES AVANT LE DE'PANNAGE.

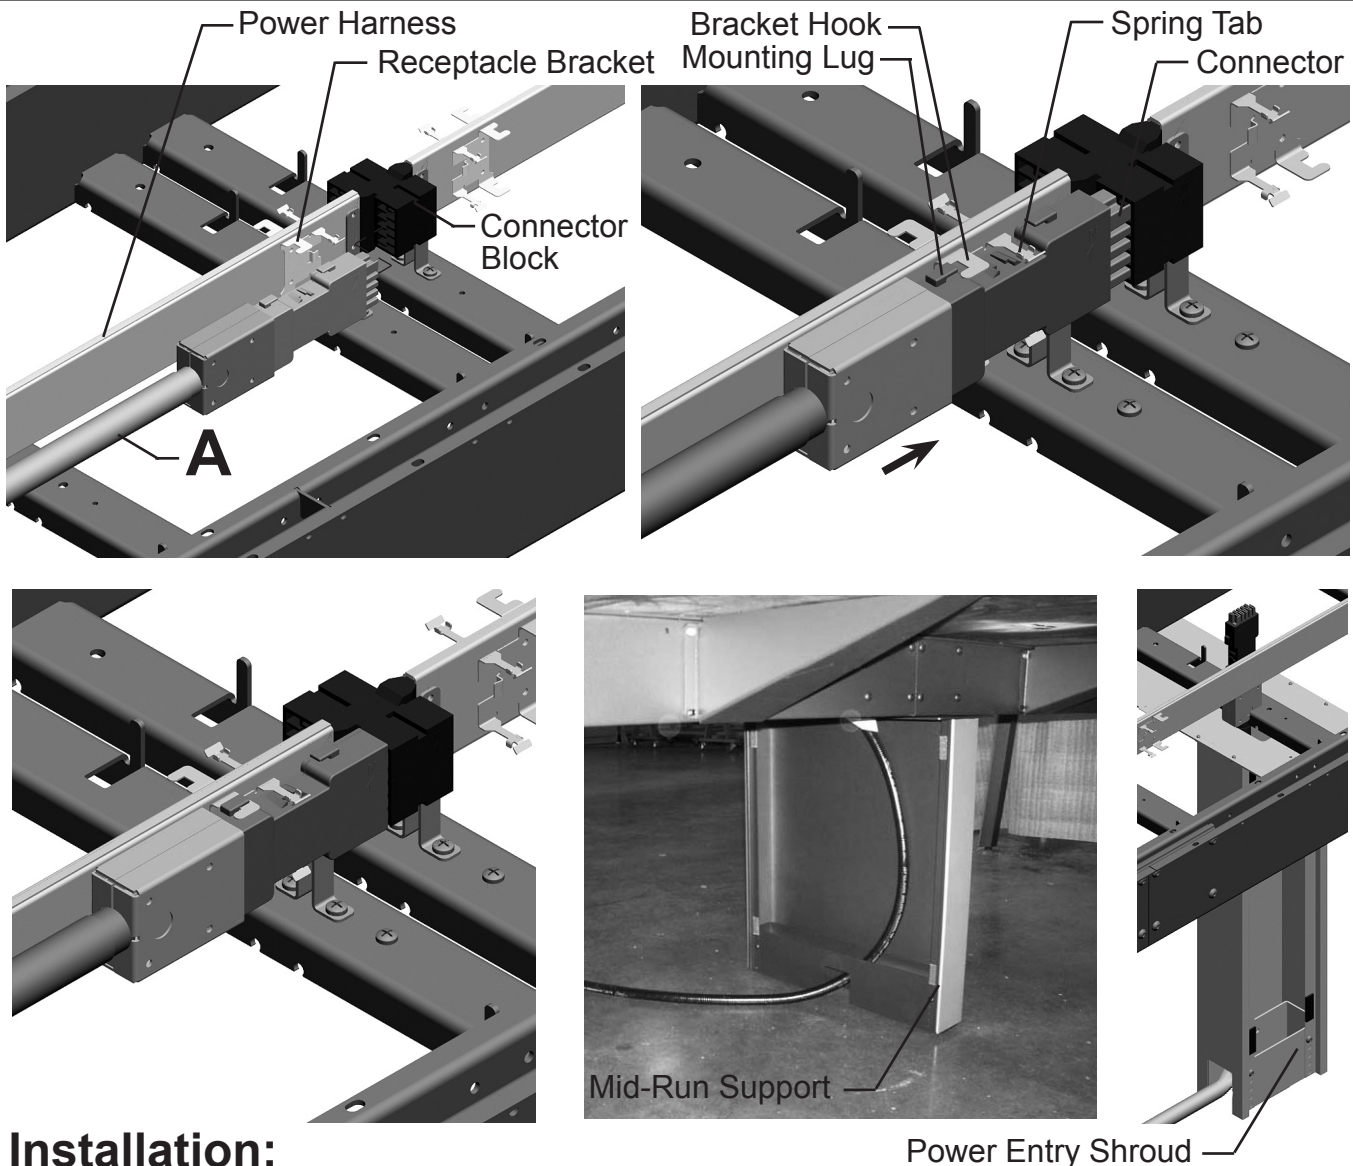

Installation:

1. Place Harness Body into Bracket to one side of Bracket Hooks at left side of Connector Block.
2. Slide Connector in Receptacle into Power Harness. Press further until Mounting Lug fully engages into Bracket Hook and Spring Tab seats onto Harness Body.
3. Route Harness down and through Mid-Run Support or Power Entry Shroud. If Harness is wired to building then feed harness connector up into Mid-Run Support or Power Entry Shroud first.

Removal:

1. Spread open Spring Tabs.
2. Slide Harness Body away from Power Harness until Mounting Lugs clear Bracket hooks. Harness can now be pulled away from assembly.

HermanMiller

Part no. 1b6pdz rev B.

© 2013 Herman Miller, Inc. Zeeland, Michigan. Printed in the U.S.A.
 © Herman Miller and Canvas Office Landscape are among the registered trademarks of Herman Miller, Inc.

Illustrations and specifications are based on the latest product information available at the time of publication.
 The right is reserved to make changes in design and specifications at any time, without notice, and also to discontinue products.

Disassembly and Recycling:

Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.

To disassemble product, reverse the above installation steps: